## SUBJECT: KPI Serie 3, Active KPI and DX KIT CONTROL SPECIFICATION

## 8.4. ALARM CODE LIST

(1) Alarm List

						-
Retry Stop Code	DX-Kit 2	KPI- S3	KPI- Act.	Origin	Detail of Abnormality	Main Factors
-	0	0	0	Indoor	Activation of protection device	Float switch activation (high water level in drain hose or abnormality in drain pipe, float switch or drain pan).
	0	0	0	Transmission	Transmission Error	Outdoor fuse meltdown, Indoor/outdoor connection wiring (breaking, wiring error, etc.)
-	0	0	0	Indoor	Air outlet thermistor (RA for KPI)	Loose, disconnected, broken or short-circuited connector
-	0	0	0	Indoor	Air inlet thermistor(OA for KPI)	Loose, disconnected, broken or short-circuited connector
-	0	-	0	Indoor	Liquid pipe thermistor	Loose, disconnected, broken or short-circuited connector
	0	-	0	Indoor	Gas pipe thermistor	Loose, disconnected, broken or short-circuited connector
	-	-	-	Indoor	Fresh Outdoor Air Thermistor (Econofresh)	Loose, disconnected, broken or short-circuited connector
-	-	-	0	Indoor	Air inlet DX Coil thermistor (Tincoil)	Loose, disconnected, broken or short-circuited connector
-	-	-	0	Indoor	Air outlet DX Coil thermistor (Toutcoil)	Loose, disconnected, broken or short-circuited connector
-	(0)	-	0			Fan motor overheating, locking.
-	0	-	0			Fan motor overheating, locking.,
	0	0	0	System	Incorrect setting of outdoor and indoor units	Outdoor/Indoor Unit capacity setting error, Indoor total capacity excessively large/small
	0	0	0	System	Indoor Unit Number Setting Error	Indoor units with the same number exist in a refrigerant piping system
-	0	0	0			Loose, disconnected
-	0	0	0	Indoor	Incorrect PCBs setting	Wrong setting are performed in PCBs
-	ο	0	0	Compressor	Compressor protection alarm (cannot be reset from the remote controller)	This alarm code is displayed when the following alarms are triggered three times within six hours: 02,07,08,39,43 to 45, 47
-	0	0	0	Indoor	Incorrect 4-20Ma, 0-10v, 0-5v, 0-10k setting	Loose, disconnected, broken or short-circuited connector
-	-	0	0	Indoor	Remote sensor thermistor (Trem)	Loose, disconnected, broken or short-circuited connector
	Retry Stop Code - - - - - - - - - - - - - - - - - - -	Stop Code DX-Kit 2   - 0	Retry Stop Code DX-Kit 2 KPI- S3   - 0 0   - 0 0   - 0 0   - 0 0   - 0 0   - 0 0   - 0 0   - 0 0   - 0 -   0 - -   0 - -   - 0 -   - 0 -   - 0 -   - 0 -   - 0 0   - 0 0   - 0 0   - 0 0   - 0 0   - 0 0	Retry Stop Code DX-Kit 2 KPI- S3 KPI- Act.   - 0 0 0   - 0 0 0   - 0 0 0   - 0 0 0   - 0 0 0   - 0 0 0   - 0 0 0   - 0 - 0   - 0 - 0   - 0 - 0   - - - 0   - 0 - 0   - 0 - 0   - 0 - 0   - 0 0 0   - 0 0 0   - 0 0 0   - 0 0 0   - 0 0 0   - 0 0 0	Retry Stop CodeDX-Kit 2KPI- S3KPI- Act.Origin-000Indoor-000Transmission-000Indoor-000Indoor-000Indoor-000Indoor-0-0Indoor-0-0Indoor-0-0Indoor-0-0Indoor-0-0Indoor-0-0Indoor-0-0Indoor-0-0Indoor-0-0Indoor-0-0Indoor-000System-000Indoor-000Indoor-000Indoor-000Indoor-000Indoor-000Indoor-000Indoor-000Indoor-000Indoor-000Indoor-000Indoor-000Indoor-000Indoor <td>Retry Stop CodeDX-Kit SKPI- S3KPI- Act.OriginDetail of Abnormality-000IndoorActivation of protection device-000TransmissionTransmission Error-000IndoorAir outlet thermistor (RA for KPI)-000IndoorAir inlet thermistor(OA for KPI)-0-0IndoorGas pipe thermistor-0-0IndoorGas pipe thermistor-0-0IndoorFresh Outdoor Air Thermistor (Econofresh)0IndoorAir inlet DX Coil thermistor (Tincoil)0IndoorAir outlet DX Coil thermistor (Toutcoil)-(o)-0Indoor-(o)-0Indoor-(o)-0Indoor0Indoor0Indoor0Indoor0Indoor0Indoor0Indoor0Indoor0Indoor0Indoor0Indoor0Indoor0Indoor-00System-00Indoor-</td>	Retry Stop CodeDX-Kit SKPI- S3KPI- Act.OriginDetail of Abnormality-000IndoorActivation of protection device-000TransmissionTransmission Error-000IndoorAir outlet thermistor (RA for KPI)-000IndoorAir inlet thermistor(OA for KPI)-0-0IndoorGas pipe thermistor-0-0IndoorGas pipe thermistor-0-0IndoorFresh Outdoor Air Thermistor (Econofresh)0IndoorAir inlet DX Coil thermistor (Tincoil)0IndoorAir outlet DX Coil thermistor (Toutcoil)-(o)-0Indoor-(o)-0Indoor-(o)-0Indoor0Indoor0Indoor0Indoor0Indoor0Indoor0Indoor0Indoor0Indoor0Indoor0Indoor0Indoor0Indoor-00System-00Indoor-

Note) Alarms with origin in Outdoor unit, compressor and system are explained in outdoor unit specification

					CONFIDENTIAL
	Auth	J.RODRIGUEZ	by HAPE (Hitachi Air Conditioning	CHAPTER 8: Abnormally Detection Control Specification	Control specs dwg N°
	Check				XEXC0005-8
	Арр		Products Europe,S.A.)	(Protections Control)	_r00