


MXZ-2F33VF MXZ-2F42VF MXZ-2F53VF MXZ-2F53VFH
 MXZ-2F33VF2 MXZ-2F42VF2 MXZ-2F53VF2 MXZ-2F53VFH2
 MXZ-2F33VF3 MXZ-2F42VF3 MXZ-2F53VF3 MXZ-2F53VFH3


Unit: mm

1. Installation space

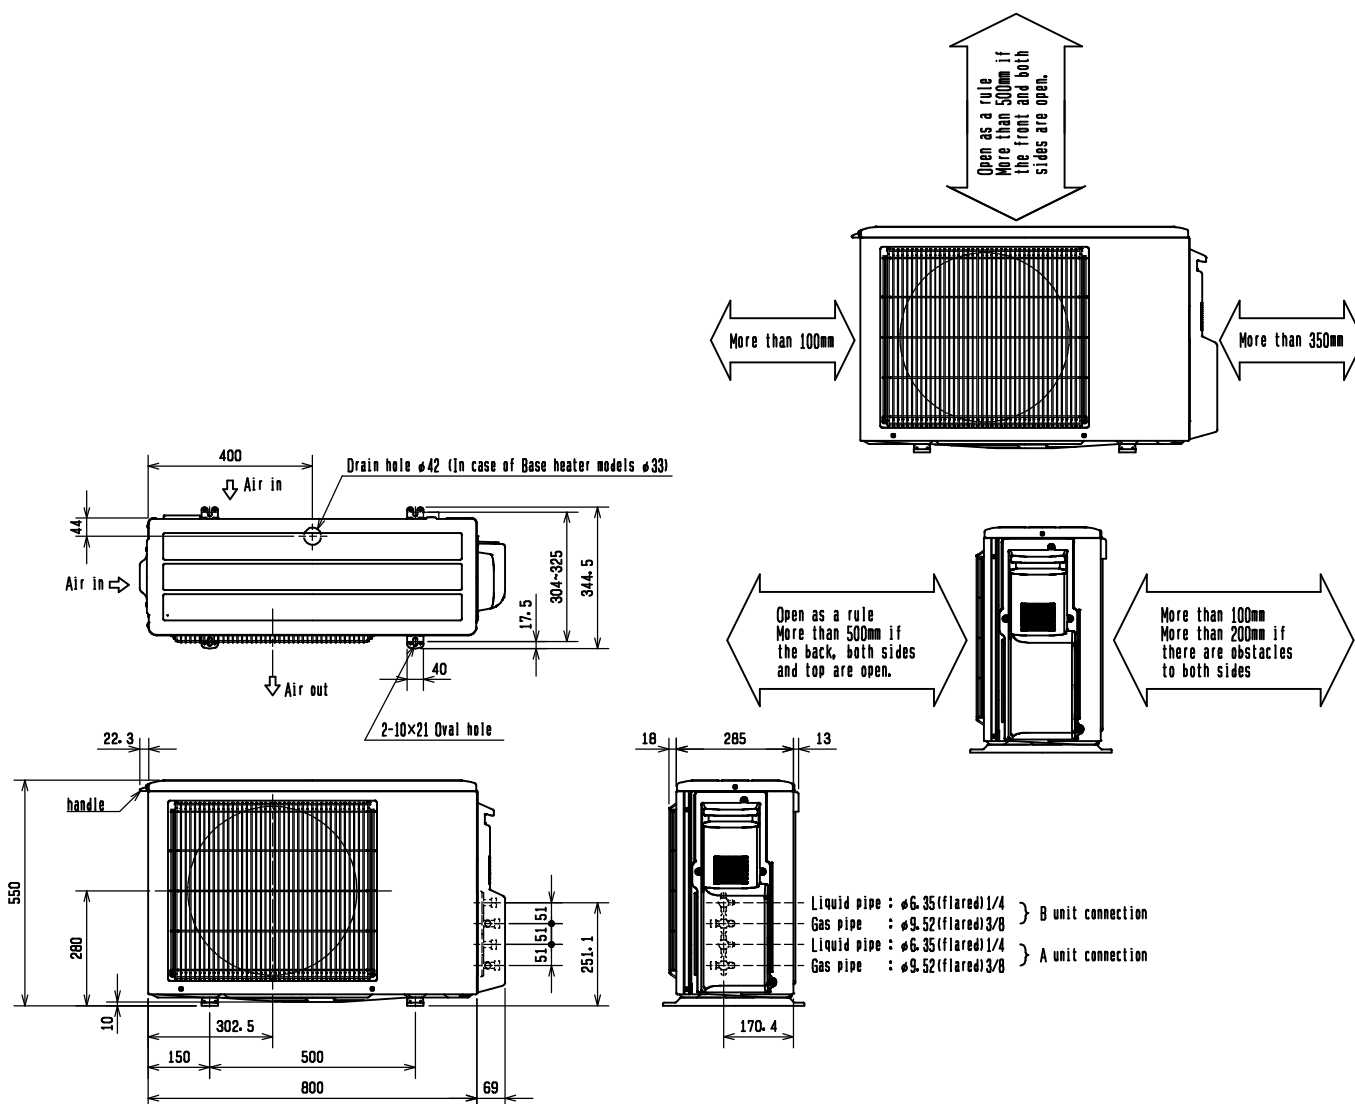


MXZ-3F54VF MXZ-3F68VF
MXZ-3F54VF2 MXZ-3F68VF2
MXZ-3F54VF3 MXZ-3F68VF3

Unit: mm

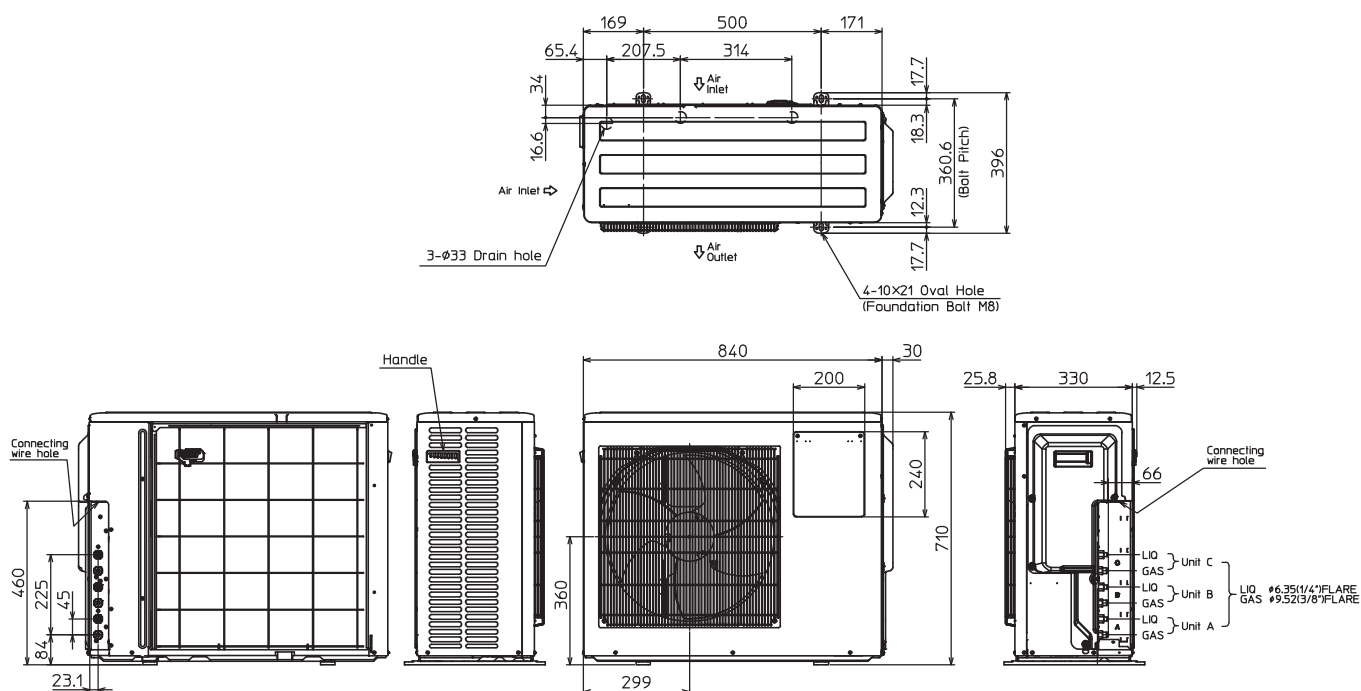


1.Installation space


Note : Leave front and both sides free of obstruction,

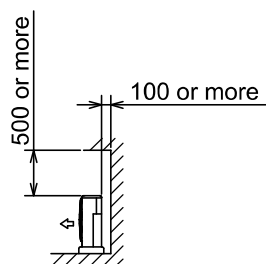


2. Service space

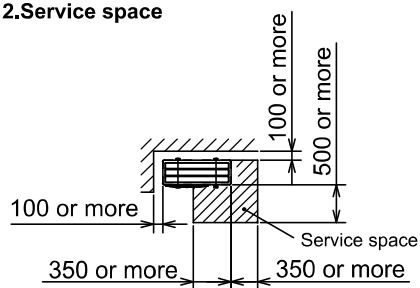

Note : Leave front and overhead free of obstruction.

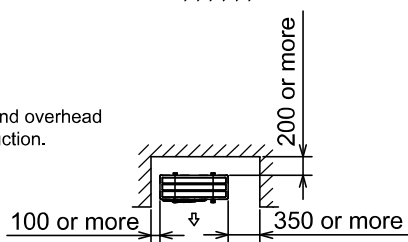


Note : Leave rear, overhead and both sides free of obstruction.

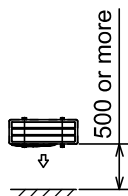


MXZ-4F72VF
MXZ-4F72VF2 MXZ-4F80VF2
MXZ-4F72VF3 MXZ-4F80VF3

Unit: mm

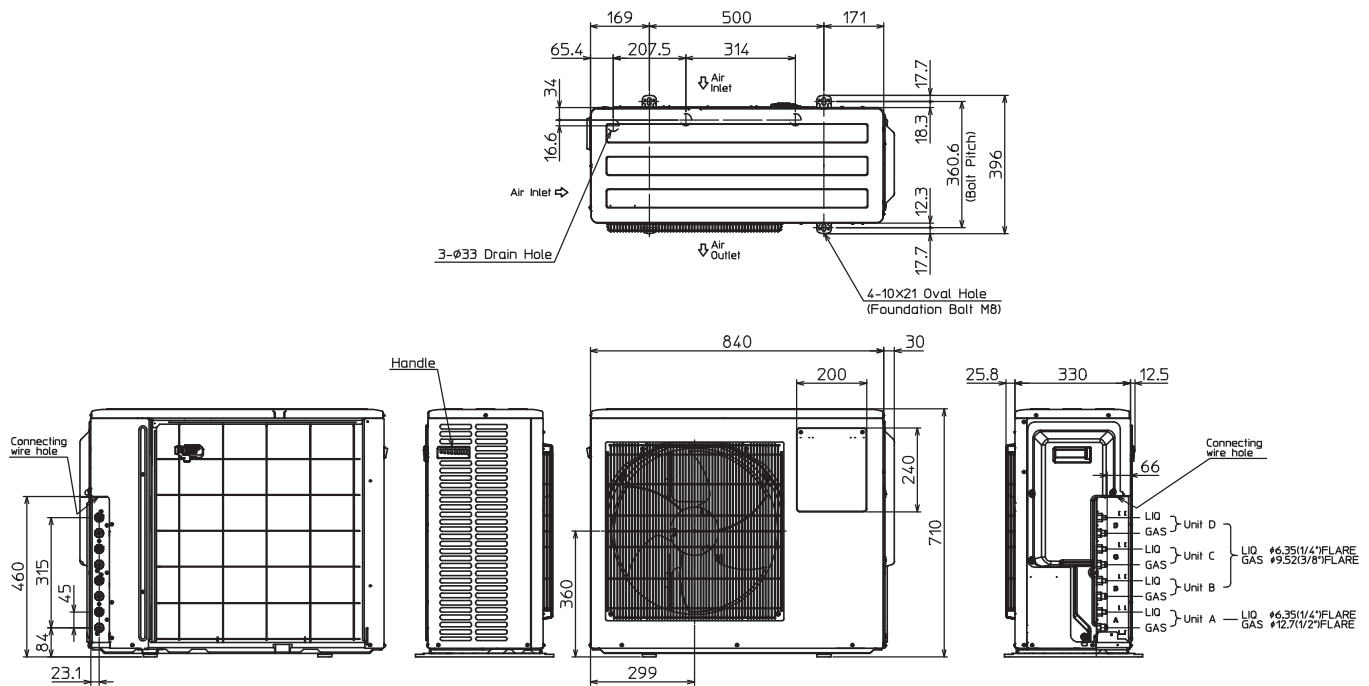


1. Installation space


Note : Leave front and both sides free of obstruction.

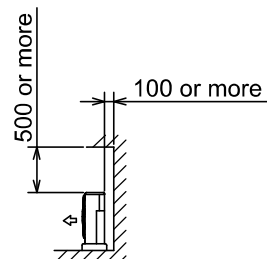


2. Service space

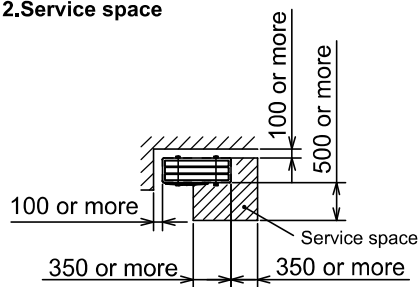

Note : Leave front and overhead free of obstruction.

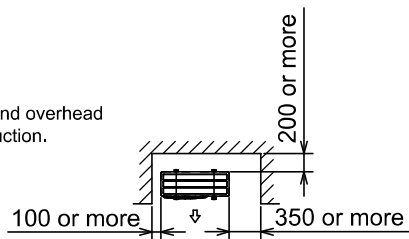


Note : Leave rear, overhead and both sides free of obstruction.

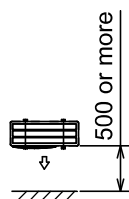


MXZ-4F83VF


Unit: mm

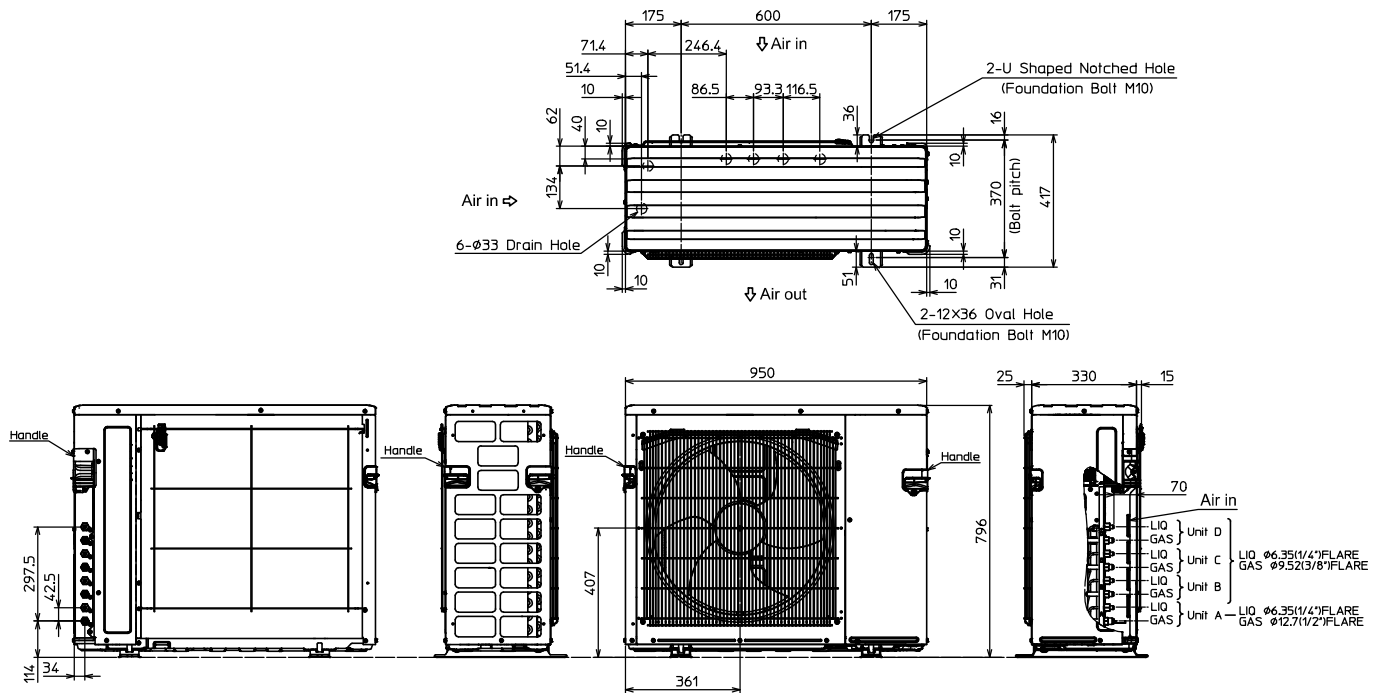

1.FREE SPACE

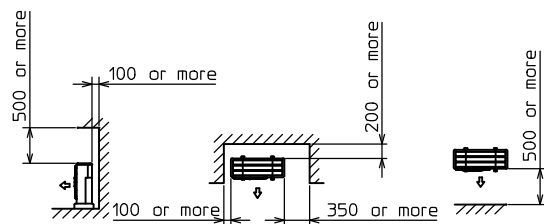


2.SERVICE SPACE

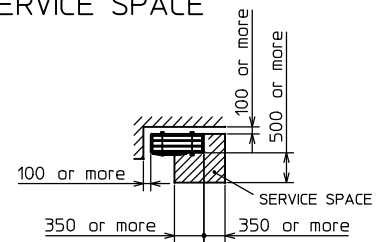


MXZ-5F102VF


Unit: mm

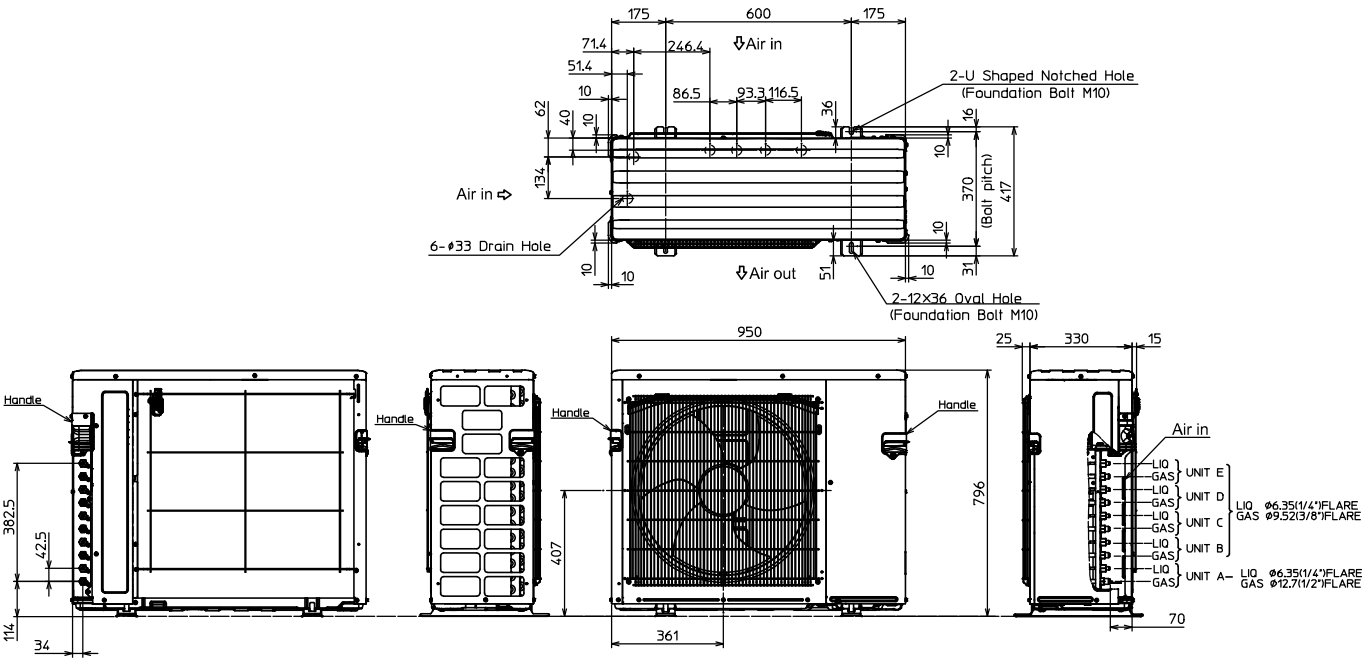

1.FREE SPACE

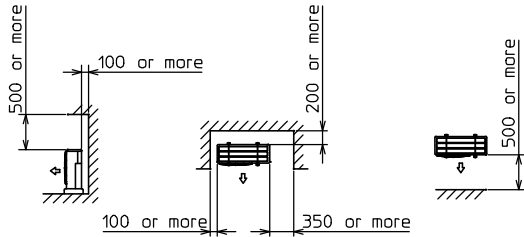


2.SERVICE SPACE

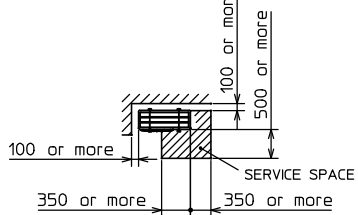


--


Unit: mm

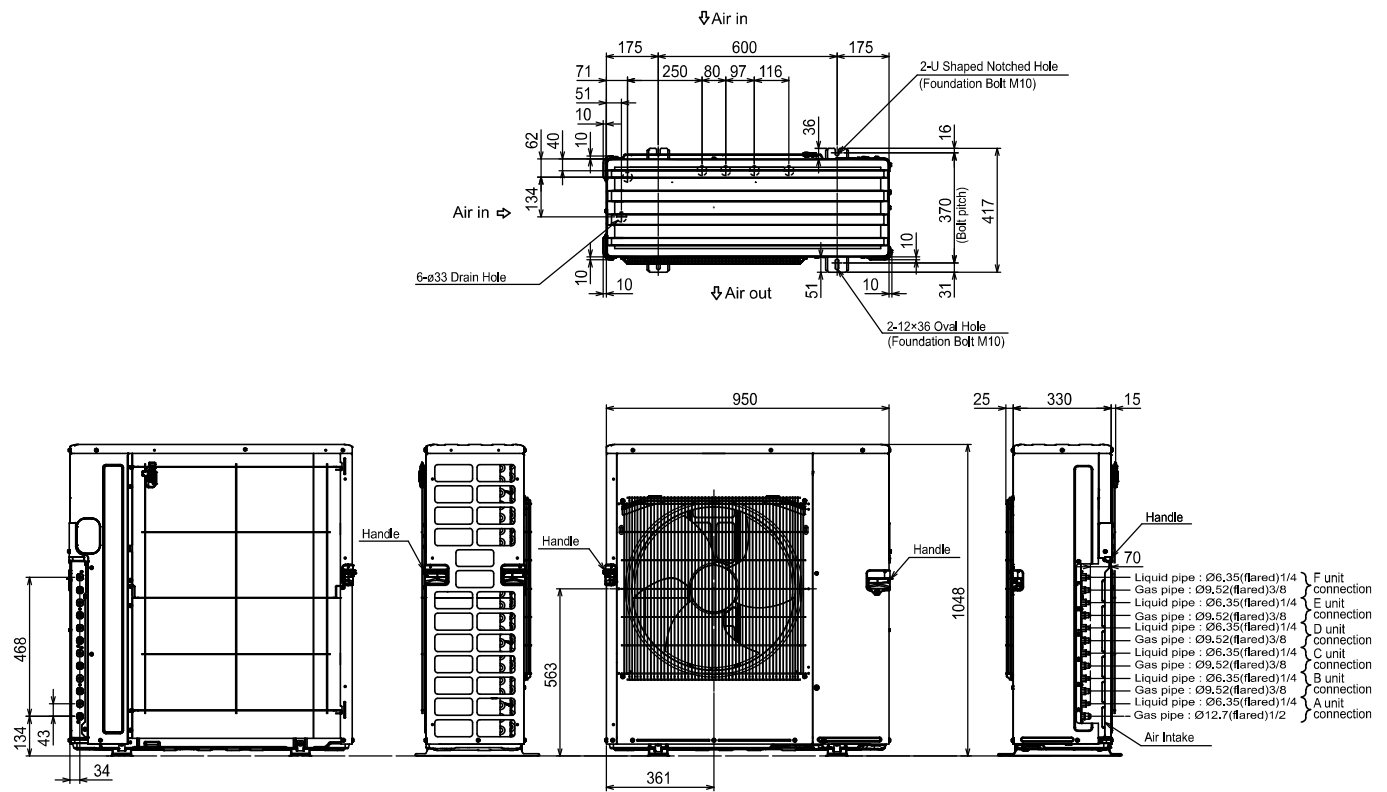


1.FREE SPACE

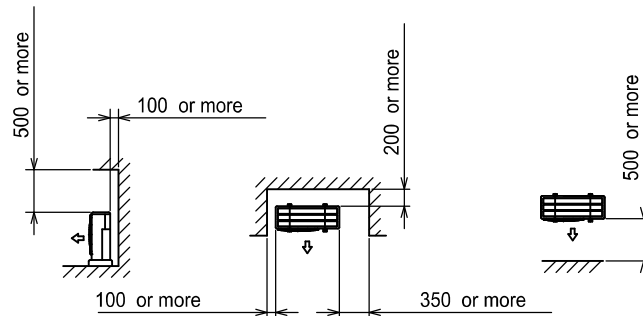


2.SERVICE SPACE

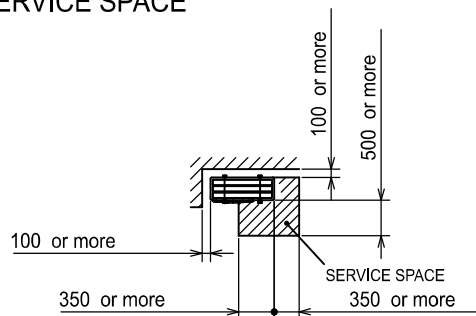


Unit: mm

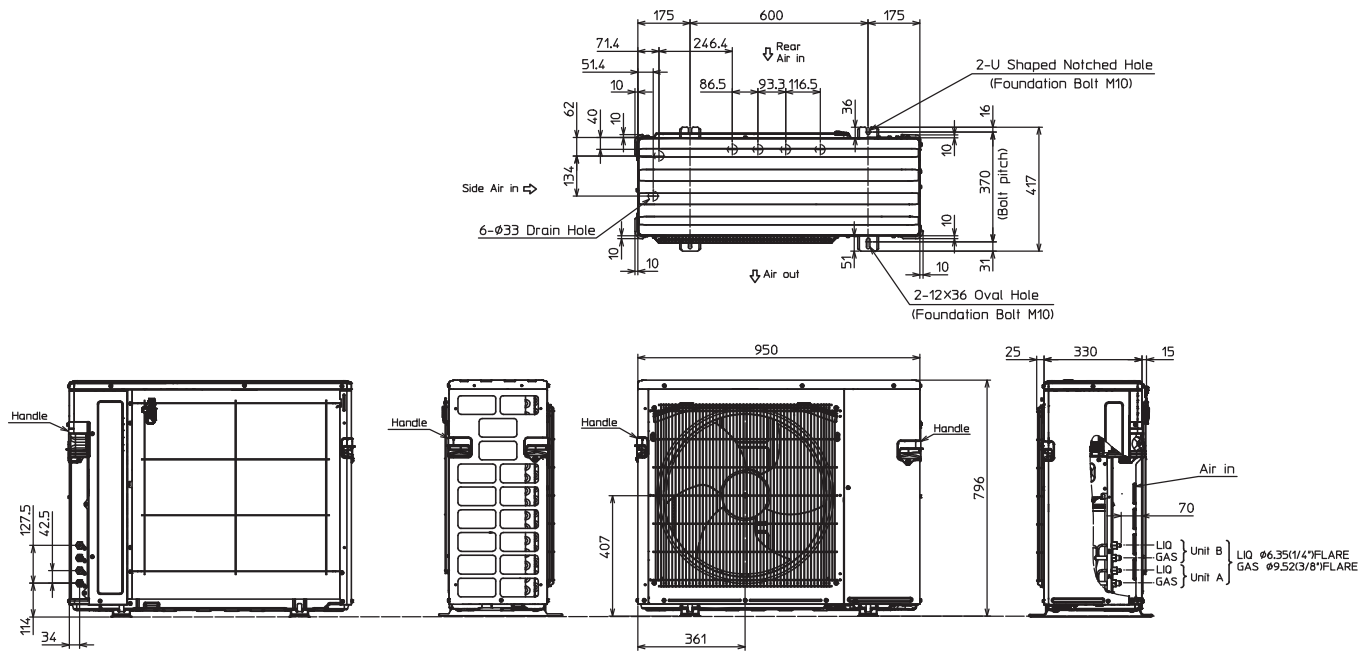

1.FREE SPACE

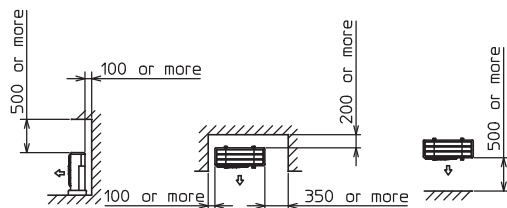

2.SERVICE SPACE

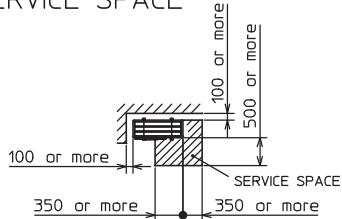

--

Unit: mm

