


7.1.2.3 YUTAKI S80

◆ TYPE 1: Version for operation in DHW but with a remote tank

RWH-(4.0-6.0)(V)NFE

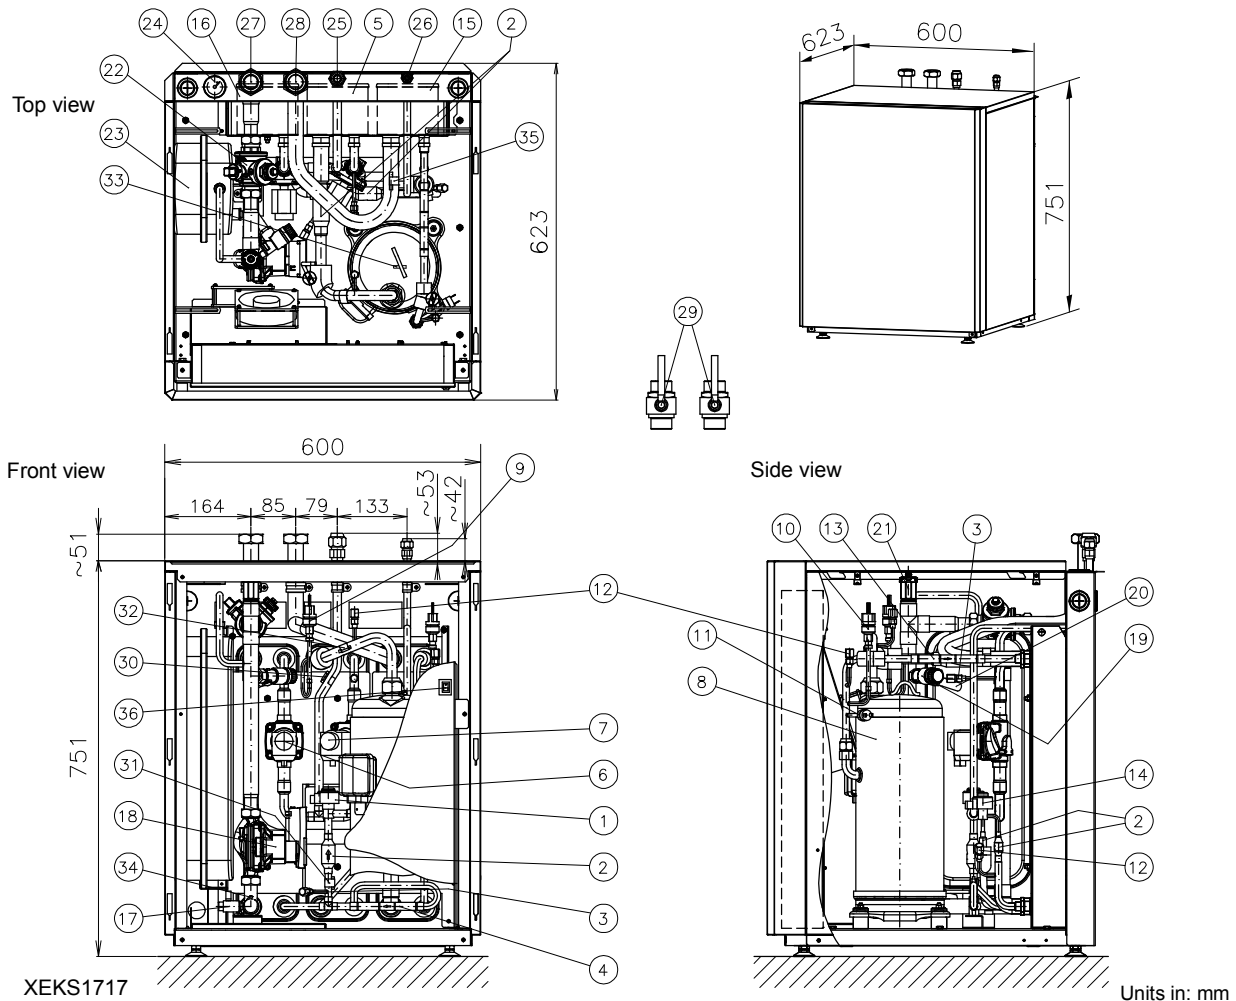

N°	Part name	N°	Part name
1	Electronic expansion valve (R410A)	19	Safety valve
2	Refrigerant strainer (x2)	20	Drain pipe
3	Check joint (R410A)	21	Air purger
4	Check valve (R410A)	22	Water strainer
5	Plate heat exchanger (R410A-R134a)	23	Expansion vessel 12L
6	Solenoid valve (1 cycle)	24	Manometer
7	Solenoid valve (2 cycles)	25	Refrigerant gas pipe - Ø15.88 (5/8")
8	Compressor	26	Refrigerant liquid pipe - Ø9.52 (3/8")
9	Low pressure sensor (Ps)	27	Water inlet pipe - G 1 1/4" female
10	High pressure sensor (Pd)	28	Water outlet pipe - G 1 1/4" female
11	High pressure switch (PSH)	29	Shut-off valve (Factory supplied)
12	Check joint (R134a)	30	Refrigerant gas pipe thermistor
13	Check valve (R134a)	31	Refrigerant liquid pipe thermistor
14	Electronic expansion valve (R134a)	32	Compressor suction thermistor
15	Plate heat exchanger (R134a-H2O)	33	Compressor discharge thermistor
16	Plate heat exchanger (R410A-H2O)	34	Water inlet thermistor
17	Water pressure port	35	Water outlet thermistor
18	Water pump	36	Switch for DHW "emergency" operation

