
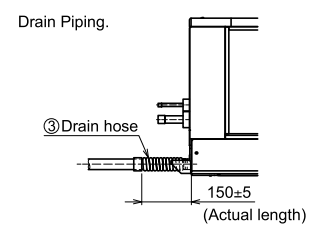
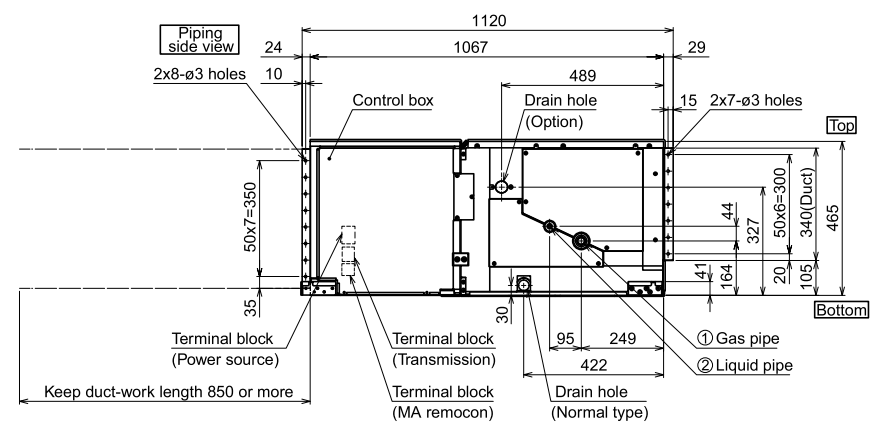
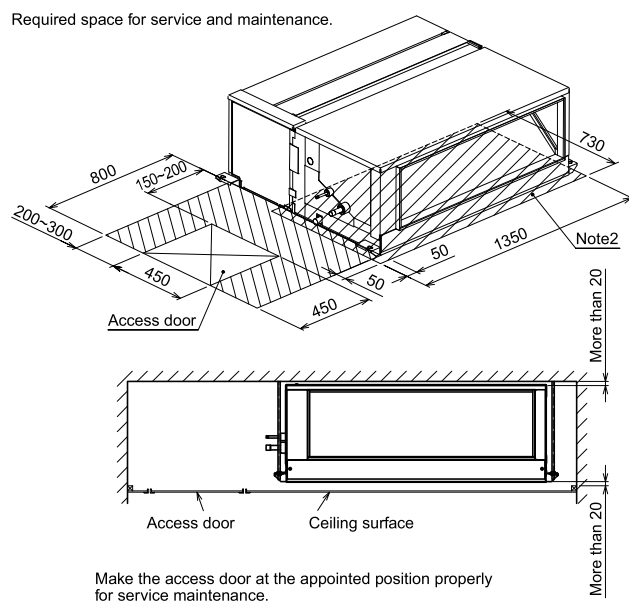


6 OUTLINES & DIMENSIONS

INDOOR UNIT

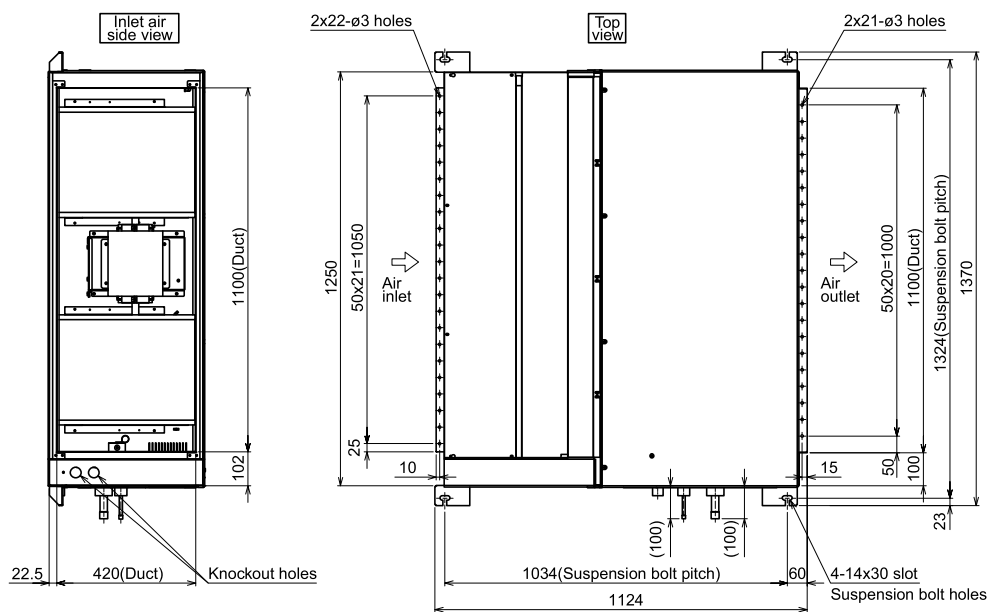

- Note 1. Use M10 screw for the suspension bolt (field supply).
 Note 2. Keep the service space for the maintenance from the bottom when the heat exchanger is cleaned.
 Note 3. Make sure to install the air filter (field supply) on the air intake side.
 In case field supplied air filter is used, attach it where the filter service is easily done.

MODEL	① Gas pipe	② Liquid pipe	③ Drain hose
PEA-RP200WKA	ø25.4	ø9.52	Drain hose 32mm <flexible joint> <accessory>
PEA-RP250WKA		ø12.7	