


Technical Bulletin

Number	P029
Subject	Panasonic – CZ-RTC5B Operation
Date	19 April 2022

Basic operation settings for the **Panasonic CZ-RTC5B Controller**

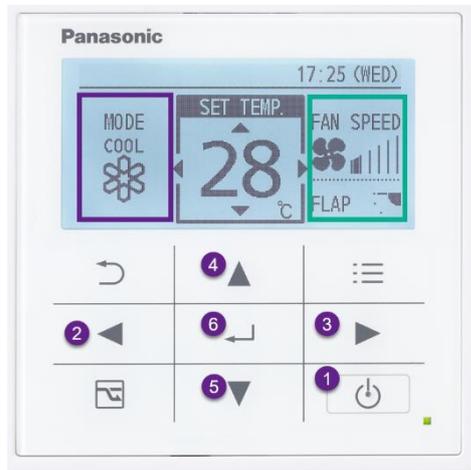

DO NOT USE ALL BUTTONS for BASIC

OPERATION

- 1) **On/Off**
- 2) **Navigate Left**
- 3) **Navigate Right**
- 4) **Navigate Up**
- 5) **Navigate Down**
- 6) **Enter**

The screen is split into three sections.

To navigate between these use "2 – Left" and "3 – Right".

SECTION ONE (PURPLE) – OPERATION MODE

Select using "2 - LEFT"

Select HEAT/COOL/FAN using "4 – UP" and "5 – DOWN" (Do not use "DRY")

SECTION TWO (GREY) – SET TEMPERATURE

Select using "2 - LEFT" or "3 – RIGHT"

Select required Temperature using "4 – UP" and "5 – DOWN"

Tip – Cooling between 21 and 23. Heating between 19 and 22°C. Anything outside of these temperature will increase running costs.

SECTION THREE (GREEN) – FAN SPEED

Select using "3 - RIGHT"

Select REQUIRED FAN SPEED using "4 – UP" and "5 – DOWN"