


Technical Bulletin

Number	079
Subject	Hard Wired Controller for RPK FSN2M
Date	27 September 2012

As standard all RPK FSN2M units are supplied pre-set for infra-red remote control function but most are supplied with hard wired controllers (PC-ART). To enable the hard wired controller please make sure that on the receiver PCB you change **SW1** from **WIRELESS** to **WIRED** (put it in the **UP POSITION**).



The receiver PCB is located behind the white receiver cover (see above), which can be removed easily.

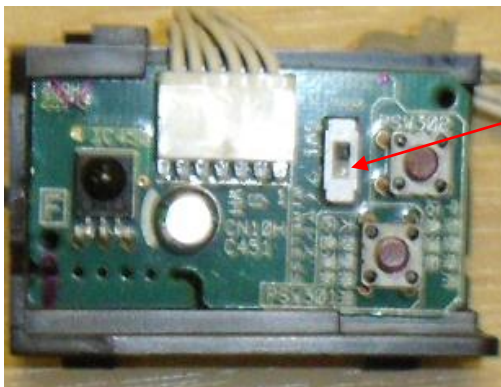

SW1 Switch

If this is not done, when you turn on the system the hard wired controller will not operate and. The controller will show a display but will not operate the unit.