

# Technical Bulletin

Number	H037
Subject	Hitachi Auto Restart After Power Failure
Date	08 November 2017

Auto restart is performed from the Function Selection & Settings of the PC-ARFPE local controller.


First, turn off the controller / unit

Press and hold (menu) “☰”

and (return) “↩”


simultaneously for at least 3 seconds during the normal mode (when unit is not operated). The test run menu will be displayed.

Select “Function Selection” and press “OK”.

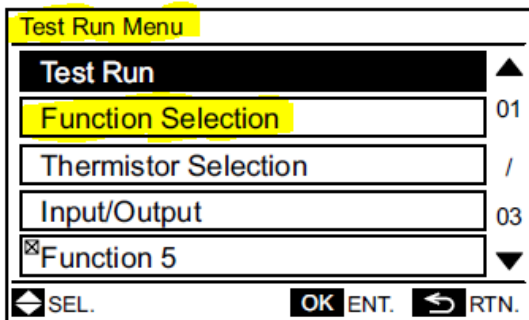

Select the indoor unit by pressing and press “OK”.


(This screen is NOT displayed when the number of indoor unit connected with the remote control switch is 1 (one indoor)).

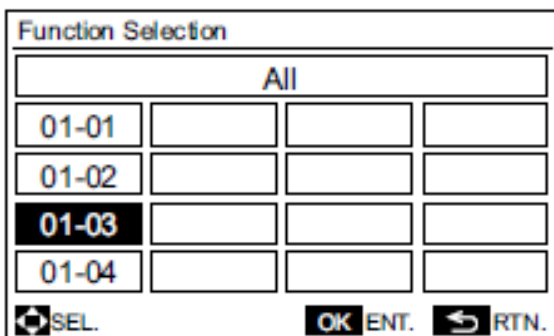

# Technical Bulletin

You will now be in the Function Selection Menu


Press "△ ▽" and select the item.

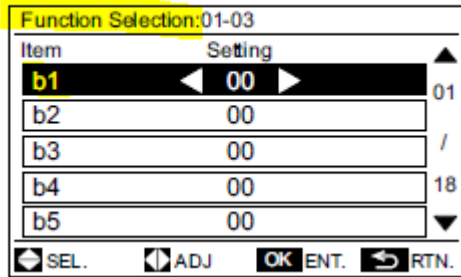

Navigate the Item No to D1 & select the setting No to 01

Items	Optional Function	Individual setting	Setting condition	Contents
d1	Power supply ON/OFF 1	o	00 01	Not available Available

 Press "OK" to confirm.

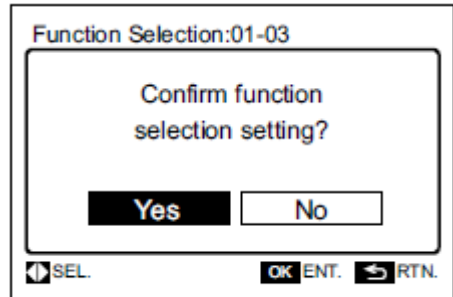

(Figure for Function Selection)

This function stores the unit settings in the event of a power cut. The unit is restarted when the power is re-established.

In Some Cases, such as the Wall Mounted Indoor RPK-FSN2M, Auto Restart will be done by indoor dipswitches. DSW2 Pins 7 & 8.

DSW2 – Optional Functions

