Number	P012
Subject	Panasonic EEPROM update via CZ-RTC2
Date	20 August 2015

The Panasonic **CZ-RTC2** controller can be used to commission the ECO-I or PAC-I range of equipment.

This document concentrates on EERPOM update via DETAILED SETTINGS. EEPROM's on ECO-i VRF Models need to be updated when new PCB's have been installed and the original EEPROM has not been recovered from the old PCB.

This can be done on a controller installed on Terminals **3** & **4** of the Outdoor Unit.



Commissioning

- 1) Power down Condensing Unit
- 2) Disconnect existing U1 & U2 comms line
- 3) Connect CZ_RTC2 controller to Terminals 3 & 4 on the Condensing Unit
- 4) Power up Condensing Unit
- 5) Press SPANNER (1), SET (6) and Real CANCEL buttons together for four or more seconds. SETTING, the UNIT No, ITEM CODE (default is 01 (when connected to Condensing Unit)) and SETTINGS DATA (default is 00XX) will illuminate on the controller as per the diagram below. This will immediately show you the address of the unit that you are working on. Please make a note of this if you are making changes to that particular unit.



Technical Bulletin



· 🔺 🐃

- 6) Press the **TEMPERATURE (4)** button to select the ITEM CODE to change. The EEPROM CODE in this instance only is "**81**"
- 7) Press the TIMER (5) button to select the SETTING CODE DATA to change. The SETTING CODES are below and are based on Condenser model number

Sanyo Outdoor unit Model	Panasonic Outdoor unit Model	HP	kW Rating	Capacity Code Setting
SPW-CR70	U-8	8	22.4	224
SPW-CR90	U-10	10	28	280
SPW-CR115	U-12	12	33.5	335
SPW-CR130	U-14	14	40	400
SPW-CR140	U-16	16	45	450
N/A	U-18	18	50	500

8) To leave this menu press **SET (6)** and wait for up to ten seconds.





Technical Bulletin

9) Then press **SPANNER (1)** to return to normal remote menu.

- **10)** Wait for ONE MINUTE.
- **11)** Power down the Condensing Unit
- 12) Remove CZ-RTC Controller from terminals 3 & 4
- 13) Rewire U1 & U2 cables
- **14)** Set up the Condensing Unit Rotary and Dipswitches for the correct number of Indoor and Outdoor Units (in a service situation this should be correct if set as per original PCB configuration but it is worth double-checking.
- **15)** Power up Condensing Unit
- **16)** Carry out System Auto Address
 - a. Full details of Condensing Unit PCB configuration and Auto-Address are shown on the following four pages.



Addressing of systems

The Indoor Units can be auto addressed and we advise that this is the best way to proceed.

For the Outdoor Units, if you are using only one condensing unit then no action is required. If you are linking condensing units then these will need to be addressed via Rotary Switch **(S002)** only unless you have more than 10 condensing units in the system configuration.

No. of indoor units	Indoor unit setting (S005) (3P DIP switch, blue) 102030	Indoor unit setting (S004) (Rotary switch, red)
1 unit (factory setting)		Set to 1
11 units	1 ON	Set to 1
21 units	2 ON 2 ON OFF	Set to 1
31 units	3 ON 3 ON OFF	Set to 1
40 units	1 & 3 ON 1 2 3 OFF	Set to 0

You will then need to program the Master Condensing Unit (Address 1) with how many Outdoor Units are connected to the System via S006

No. of outdoor units	Outdoor unit setting (S006) (3P DIP switch, blue)	
1 unit (factory setting)	1 ON	
2 units	2 ON	
3 units		





The condensing units will also need to be address as MASTER and SLAVE via S007

Keep Address 1 as MASTER

Address setting of main outdoor unit (S007)

Unit No. setting	Address setting of outdoor unit (S00 (3P DIP switch, blue)	
Unit No. 1 (main unit) (factory setting)		

• Address setting of sub outdoor unit

Unit No. setting	Address setting of outdoor unit (S007) (3P DIP switch, blue)	
Unit No. 2 (sub unit) (factory setting)	2 ON 1 2 3 OFF	
Unit No. 3 (sub unit)	1 & 2 ON	



In the case of Two Condensing Units connected set up as follows

MASTER - DSW5 - 1 on, 2 & 3 off SLAVE - DSW5 - 1 off, 2 on, 3 off

In the case of Three Condensing Units connected set up as follows:

MASTER - DSW5 - 1 on, 2 & 3 off SLAVE 1 - DSW5 - 1 off, 2 on, 3 off SLAVE 2 - DSW5 - 1 on, 2 on, 3 off

In the case of Four Condensing Units connected set up as follows:

MASTER - DSW5 - 1 on, 2 & 3 off SLAVE 1 - DSW5 - 1 off, 2 on, 3 off SLAVE 2 - DSW5 - 1 on, 2 on, 3 off SLAVE 3 - DSW5 - 1 off, 2 off, 3 on

Cont.....

LOGICOOL

On the MASTER condensing unit use S003 Dipswitch and S002 Rotary to set the number of Indoor Units connected to the System.

System address No.	System address (S003) (2P DIP switch, blue) 10 20	System address (S002) (Rotary switch, black)
System 1 (factory setting)	Both OFF	Set to 1
System 11		Set to 1
System 21		Set to 1
System 30	1 & 2 ON	Set to 0





Technical Bulletin

Following all this, TURN POWER ON and wait for THREE MINUTES

Auto Address of Indoor Units

With POWER ON, use a small screwdriver or coin to short out PINS CN100

This should be directly above and to the right of the top Rotary Switch.



LED 1 and **LED 2** will start flashing alternately. You are now in **AUTO ADDRESS** mode. This will take up to TEN MINUTES.

During this procedure you will hear contactors clicking on and off. **LED 1** and **LED 2** will stay solid for a few minutes. When **LED 1** and **LED 2** go OFF then this is successful.

If **LED 1** and **LED 2** begin to flash in a sequence different to above then this is a fault code such as "no indoors found". You will need to contact Logicool for an explanation of the fault code on 01283 218277

Refer to Page 155 (or 5-17) of ECO-I 3 Way System Service Manual REFERENCE NO.TD831170-00

