


User Guide

Wireless Controller

PAR-WT60R-E

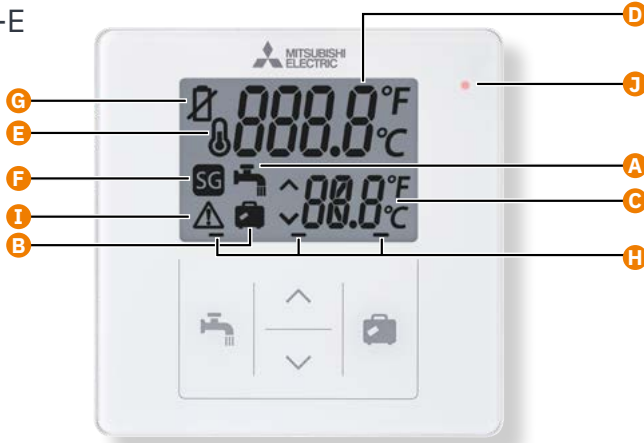

Button	Function							
Forced DHW Boost	Used to allow Ecodan to force start the Domestic Hot Water (DHW Mode)							
Holiday Mode	Used to allow Ecodan to enter Holiday Mode							
Up / Down	Used to adjust room temperature and set duration time in Holiday Mode							
Main Screen Icons	Description							
A DHW Boost Indicator	Indicates that Ecodan is in Domestic Hot Water (DHW) Boost Mode							
B Holiday Mode Indicator	Indicates that Ecodan is in Holiday Mode							
C Set Temperature Display	Indicates the set room temperature							
D Room Temperature Display	Indicates the room temperature							
E Room Sensor Status	Indicates this remote controller is used to measure the room temperature							
F SG-Ready Display	Indicates Smart Grid ready							
G Battery Replacement Indicator	Indicates when to replace batteries							
H Touch indicator	Indicates when buttons are touched							
I Error Display	Indicates unit failure or communication error received							
J Error LED	<table border="1"> <thead> <tr> <th>Mode</th> <th>Flash</th> </tr> </thead> <tbody> <tr> <td>Failed*</td> <td rowspan="2">1 time per 3 minutes</td> </tr> <tr> <td>Back up heater operation</td> </tr> <tr> <td>Low battery</td> <td>1 time per 3 minutes</td> </tr> </tbody> </table>	Mode	Flash	Failed*	1 time per 3 minutes	Back up heater operation	Low battery	1 time per 3 minutes
	Mode	Flash						
	Failed*	1 time per 3 minutes						
	Back up heater operation							
Low battery	1 time per 3 minutes							

*When any malfunction occurs in the indoor unit, outdoor unit, remote controller or receiver.