



2. Installing the FTC unit

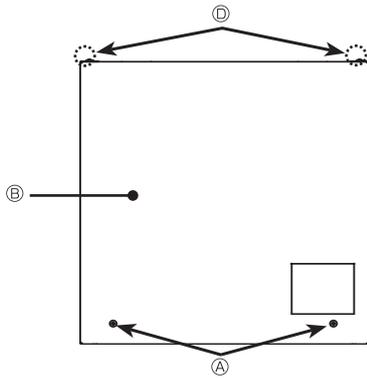

<Fig. 2.3.1>

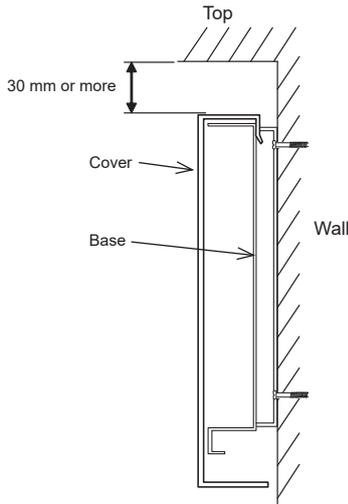

<Fig. 2.3.2>
Service space

2.2. Choosing the FTC unit installation location

- Do not install the FTC unit outdoors as it is designed for indoor installation only. (The FTC circuit board and casing are not waterproof.)
- Avoid locations where the unit is exposed to direct sunlight or other sources of heat.
- Select a location where easy wiring access to the power source is available.
- Avoid locations where combustible gases may leak, be produced, flow, or accumulate.
- Select a level location that can bear the weight and vibration of the unit.
- Avoid locations where the unit is exposed to oil, steam, or sulfuric gas.
- Do not install in a location that is hot or humid for long periods of time.

2.3. Installing the FTC unit (Fig. 2.3.1, 2.3.2, 2.3.3, 2.3.4)

1. Remove 2 screws (Screw ①) from FTC unit and remove the cover. (See Fig. 2.3.4)

2. Install the 4 screws (locally supplied) in the 4 holes (Hole ②).

Note: To prevent the unit from falling off the wall, select the appropriate screws (locally supplied) and secure the base horizontally to the appropriate wall location. (See Fig. 2.3.2)

Screw ① Cover ③
Hole for installation ② Screw ④


Note: Do not remove the screws ④ as the screws are component parts of the cover and are not used for the installation of cover.

Weight	PAC-IF081B-E	3.9 kg
	PAC-IF082/083B-E	4.2 kg
Allowable ambient temperature	0 to 35°C	
Allowable ambient humidity	80% RH or less	

Optional extras


- Wireless Remote Controller PAR-WT60R-E
- Wireless Receiver PAR-WR61R-E
- Remote sensor PAC-SE41TS-E

<FTC (Main) unit>

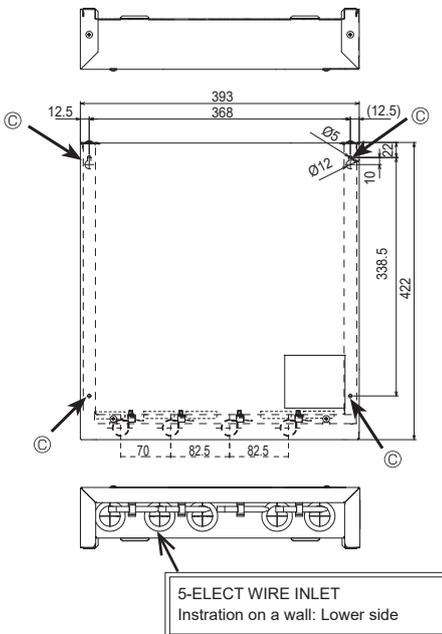


<Fig. 2.3.3>


<Unit: mm>

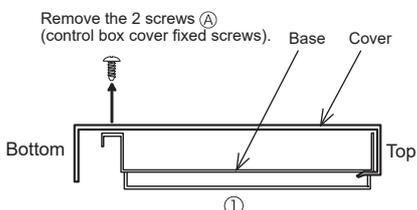

Slide the control box cover until the bottom of the cover comes into contact with the bottom of the control box.

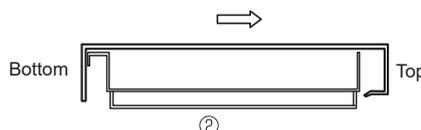

Pull the cover to the front and remove it.

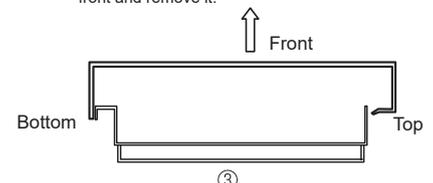

<Fig. 2.3.4>