

1.1.2 DIMENSIONS FOR INSTALLATION AND CLEARANCES

The figure below shows the dimensions to be taken into account during installation. For the exact values referring to the dimensions indicated in the figure, refer to the following table and, in any case, to the drawings supplied with the order confirmation.

The units must be positioned differently based on the type of unit, and always following the design and manufacturing requirements of the unit.

During installation, observe the clearances required for routine maintenance (and if special, if necessary) indicated in the order confirmation or the table below, with reference to the standard models (identified by the code number sequence).

Clearances P Series								
Over				Under				
Standard models		Plan dimensions						
		Dimensions (mm)			Clearances (mm)		Routine Maintenance (mm)	
		Length	Depth	Height	Upper	Lower	Front	Left
		A	B	H	a	b	1	2
071 - 141	Over	750	600	1990	300	300	750	-
211	Over	860	880				860	