


4. Installation Instructions

Combination with various types of outdoor units

Unit: mm

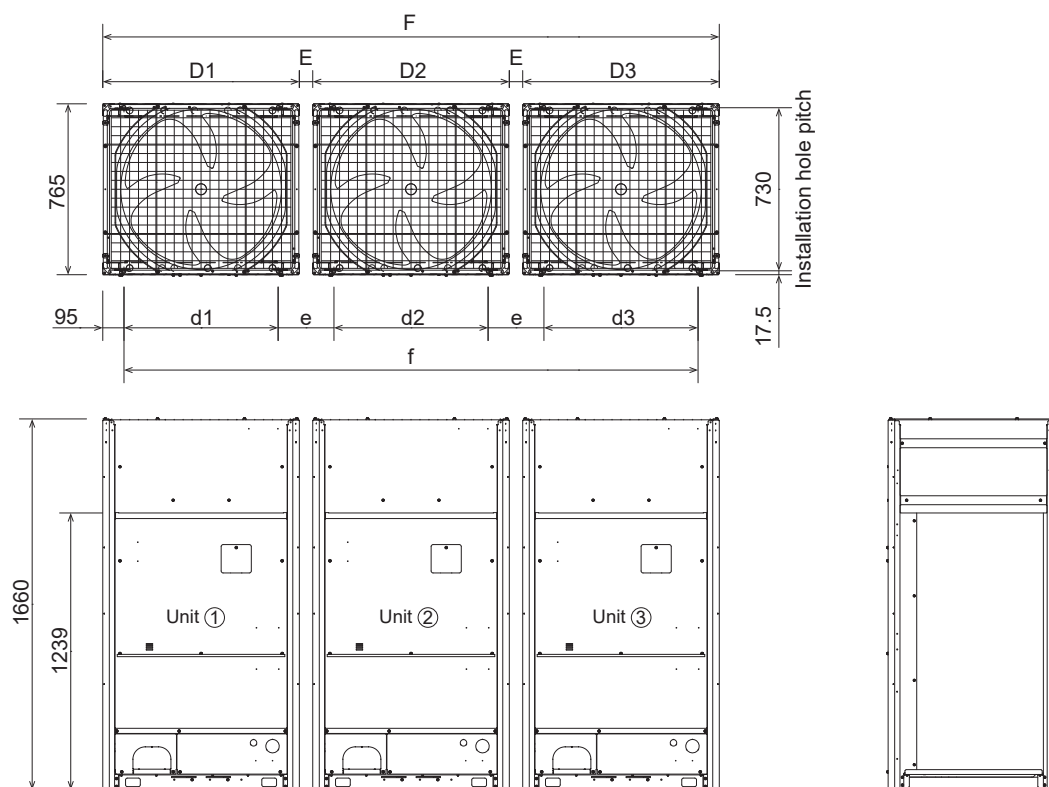

Capacity	Combination			Dimensions of single unit			Distance between units	Dimensions of combination unit	Dimensions of single unit installation hole			Distance between unit installation hole	Dimensions of combination unit installation hole
	①	②	③	D1	D2	D3	E	F	d1	d2	d3	e	f
8HP	8	-	-	880	-	-	-	880	690	-	-	-	690
10HP	10	-	-	880	-	-	-	880	690	-	-	-	690
12HP	12	-	-	880	-	-	-	880	690	-	-	-	690
16HP	8	8	-	880	880	-	60	1820	690	690	-	250	1630
18HP	8	10	-	880	880	-	60	1820	690	690	-	250	1630
20HP	8	12	-	880	880	-	60	1820	690	690	-	250	1630
	10	10	-	880	880	-	60	1820	690	690	-	250	1630
22HP	10	12	-	880	880	-	60	1820	690	690	-	250	1630
24HP	12	12	-	880	880	-	60	1820	690	690	-	250	1630
	8	8	8	880	880	880	60	2760	690	690	690	250	2570
26HP	8	8	10	880	880	880	60	2760	690	690	690	250	2570
28HP	8	8	12	880	880	880	60	2760	690	690	690	250	2570
	8	10	10	880	880	880	60	2760	690	690	690	250	2570
30HP	8	10	12	880	880	880	60	2760	690	690	690	250	2570
	10	10	10	880	880	880	60	2760	690	690	690	250	2570
32HP	8	12	12	880	880	880	60	2760	690	690	690	250	2570
	10	10	12	880	880	880	60	2760	690	690	690	250	2570
34HP	10	12	12	880	880	880	60	2760	690	690	690	250	2570
36HP	12	12	12	880	880	880	60	2760	690	690	690	250	2570