

**CENTRIFUGAL VRF SERIES
RASC-HNPE**

Service Manual

RASC-4HNPE
RASC-5HNPE
RASC-6HNPE
RASC-8HNPE
RASC-10HNPE



Contents

General information	1
Unit installation	2
Piping work and refrigerant charge	3
Electrical and control settings	4
Control system	5
Optional functions	6
Commissioning	7
Electrical checks of the main parts	8
Spare parts	9
Troubleshooting	10

General Index

1. General information.....	1
1.1 General information.....	2
1.1.1 General notes.....	2
1.1.2 Introduction.....	2
1.1.3 Environment-friendly units.....	2
1.2 Applied symbols.....	3
1.3 Product guide.....	4
1.3.1 Classification of RASC unit models.....	4
1.3.2 Classification of indoor unit models.....	4
1.3.3 Product guide: RASC units.....	4
1.3.4 Product guide: Indoor units.....	5
1.3.5 List of accessories.....	8
2. Unit installation.....	13
2.1 Initial check.....	14
2.2 Transportation.....	15
2.2.1 Hanging method.....	15
2.2.2 Handling unit.....	16
2.3 Factory-supplied accessories.....	16
2.4 Installation space.....	17
2.5 Interchangeability of air inlet and outlet panels.....	18
2.6 Installation place provision.....	19
2.7 Fan performance curves.....	20
2.8 Duct connection.....	22
3. Piping work and refrigerant charge.....	19
3.1 Piping work connection considerations.....	20
3.1.1 Copper pipes and sizes.....	20
3.1.2 Pipe connection.....	21
3.1.3 Insulation.....	21
3.1.4 Three principles on refrigerant piping work.....	22
3.1.5 Suspension of refrigerant piping.....	23
3.1.6 Brazing work.....	23
3.2 Piping connection for RASC unit.....	24

3.3 Refrigerant piping range	28
3.3.1 Refrigerant piping length	28
3.3.2 Piping system (Header branch installation).....	28
3.3.3 Piping system (Line branch installation).....	31
3.3.4 Combinations of piping size and piping length	32
3.3.5 Refrigerant piping size and multikit/distributor selection	33
3.3.6 Considerations when installing distributors	37
3.4 Refrigerant charge	38
3.4.1 Refrigerant charge amount.....	38
3.4.2 Refrigerant charge procedure	40
3.4.3 Caution of the pressure by check joint	41
3.4.4 Pump down refrigerant	41
3.5 Caution in case of refrigerant leakage	42
3.5.1 Maximum permitted concentration of HFCs	42
3.5.2 Calculation of refrigerant concentration.....	42
3.5.3 Countermeasure for refrigerant leakage	42
3.6 Compatibility with the piping of current installations where R22 or R407C is used	44
3.6.1 Installation procedure for existing pipes	44
3.6.2 When the existing air conditioner is a product of another manufacturer	44
3.6.3 Permissible range for existing air-conditioning pipes	45
3.6.4 Selection of the renewal kit model.....	45
3.7 Drainage and drain pipe installation	47
4. Electrical and control settings.....	49
4.1 General check.....	50
4.2 System wiring diagram	51
4.3 Electrical connection of the RASC unit.....	52
4.3.1 Wiring size.....	52
4.3.2 Minimum requirements of the protection devices.....	52
4.4 Transmission wiring between RASC and indoor unit.....	53
4.5 Printed circuit board.....	54
4.5.1 RASC-(4-6)HNPE.....	54
4.5.2 RASC-(8-10)HNPE.....	55
4.6 Setting and function of DIP and RSW switches for RASC units	56
4.6.1 Location of DIP switches and RSW switches.....	56
4.6.2 Functions of dip switches and rotary switches	56
4.6.3 Jumper lead setting (JP1~6)	59
4.6.4 LED's indication.....	59

4.7 H-LINK II system.....	60
4.7.1 Application.....	60
4.7.2 Features.....	60
4.7.3 Specifications.....	60
4.7.4 DIP Switch setting for multiple H-LINK system.....	61
4.7.5 Examples of the system of connection between H-LINK and H-LINK II units.....	62
4.7.6 Examples of H-LINK II system.....	63
4.8 Electrical wiring diagrams.....	65
4.8.1 RASC-(4-6)HNPE (3N~ 400V 50Hz).....	65
4.8.2 RASC-(8/10)HNPE (3N~ 400V 50Hz).....	66
5. Control system.....	67
5.1 Device control system.....	68
5.2 Safety protection and control.....	70
5.3 Standard operation sequence.....	71
5.3.1 Cooling operation.....	71
5.3.2 Dry operation.....	73
5.3.3 Heating operation.....	75
5.3.4 Automatic cooling and heating operation.....	77
5.3.5 Defrost operation control.....	78
5.4 Standard control functions.....	80
5.4.1 Freezing protection during cooling process or dry operation.....	80
5.4.2 Prevention control for high pressure increase during cooling operation.....	81
5.4.3 Prevention control for excessively high discharge gas temperature.....	81
5.4.4 Activation for protection device control.....	82
5.4.5 Preheating control of compressor.....	83
5.4.6 Prevention control for high pressure increase.....	83
6. Optional functions.....	85
6.1 Optional external input and output signals.....	86
6.1.1 Input and output signals through 7-segment display on the RASC unit PCB.....	86
6.1.2 Input and output signals through remote control switch.....	92
6.2 Optional functions.....	93
6.2.1 Optional functions through 7-segment display on the RASC unit PCB.....	93
6.2.2 Optional functions through remote control switch.....	101
7. Commissioning.....	109
7.1 Checking procedure before the test run.....	110
7.2 Test run procedure using the remote control switch (PC-ARF).....	112

7.3 Test run procedure using the remote control switch (PC-ART)	115
7.4 Test run procedure using the wireless remote control switch (PC-LH3A).....	117
7.5 Test run procedure from the RASC unit.....	119
7.6 Check list	120
7.6.1 Check list on test run.....	120
7.6.2 Check list on compressor	121
8. Electrical checks of the main parts.....	123
8.1 Inverter.....	124
8.1.1 Specifications of inverter	124
8.1.2 Inverter time chart	126
8.1.3 Protective function.....	127
8.1.4 Overload control	128
8.2 Thermistor.....	129
8.2.1 Summary of thermistors for RASC unit	129
8.2.2 Diagrams of thermistors for RASC unit	130
8.3 Electronic expansion valve	132
8.4 High pressure protection devices	133
8.4.1 Location of the high pressure protection devices	133
8.4.2 High pressure switch (PSH)	133
8.4.3 Pressure switch for control (PSC).....	133
8.5 Noise filters (NF).....	134
8.6 Capacitor (CB1, CB2) (Only for RASC-(8/10)HNPE)	135
8.7 Reactor (DCL).....	136
8.7.1 Reactor for RASC-(4-6)HNPE.....	136
8.7.2 Reactor for RASC-(8/10)HNPE	136
8.8 Scroll compressor	137
8.8.1 Reliable mechanism for low vibrating and low sound.....	137
8.8.2 Principle of compression	137
9. Spare parts	139
9.1 Cabinet and fan	140
9.2 Refrigerant cycle.....	141
9.2.1 RASC-(4-6)HNPE.....	141
9.2.2 RASC-(8/10)HNPE.....	142
9.3 Electrical parts	143
9.3.1 RASC-(4-6)HNPE.....	143
9.3.2 RASC-(8/10)HNPE.....	144

9.4 Parts name	145
9.4.1 Cabinet and fan	145
9.4.2 Refrigerant cycle	146
9.4.3 Electrical parts	148
10. Troubleshooting	151
10.1 Initial troubleshooting	152
10.1.1 Checking using the 7-segment display	152
10.1.2 Failure of the power supply to the indoor unit and the remote control switch	153
10.1.3 Abnormal transmission between the remote control switch and the indoor unit	154
10.1.4 Abnormal operation of the devices	154
10.2 Troubleshooting procedure	162
10.2.1 On-screen displays during abnormal operation	162
10.2.2 Alarm codes	163
10.2.3 Troubleshooting by alarm code	165
10.2.4 Alarm codes for the DX Interface	210
10.3 Troubleshooting in check mode	211
10.3.1 Troubleshooting using the remote controller PC-ART	211
10.3.2 Troubleshooting using the remote controller PC-ARF	222
10.3.3 Troubleshooting using the 7 segment display	227
10.4 Checking procedure for main parts	233
10.4.1 Checking procedure for the PCB (PCB1 ref PO101)	233
10.4.2 Checking procedure for the DIP-IPM inverter	235
10.4.3 Checking procedure for the capacitors CB1 & CB2	241
10.4.4 Checking procedure for the DC fan motor	242
10.4.5 Checking procedure for the electronic expansion valve for indoor and RASC units	243
10.4.6 Checking procedure for other parts	243

1 . General information

Index

1.1. General information.....	2
1.1.1. General notes.....	2
1.1.2. Introduction.....	2
1.1.3. Environment-friendly units.....	2
1.2. Applied symbols.....	3
1.3. Product guide.....	4
1.3.1. Classification of RASC unit models.....	4
1.3.2. Classification of indoor unit models.....	4
1.3.3. Product guide: RASC units.....	4
1.3.4. Product guide: Indoor units.....	5
1.3.5. List of accessories.....	8

1.1 General information

1.1.1 General notes

© Copyright 2015 HITACHI Air Conditioning Products Europe, S.A.U. – All rights reserved.

No part of this publication may be reproduced, copied, filed or transmitted in any shape or form without the permission of HITACHI Air Conditioning Products Europe, S.A.U.

Within the policy of continuous improvement of its products, HITACHI Air Conditioning Products Europe, S.A.U. reserves the right to make changes at any time without prior notification and without being compelled to introducing them into previously sold products. This document may therefore have been subject to amendments during the life of the product.

HITACHI makes every effort to offer correct, up-to-date documentation. Despite this, printing errors cannot be controlled by HITACHI and are not its responsibility.

As a result, some of the images or data used to illustrate this document may not refer to specific models. No claims will be accepted based on the data, illustrations and descriptions included in this manual.

No type of modification must be made to the equipment without prior, written authorization from the manufacturer.



NOTE

This air conditioner has been designed for standard air conditioning for human beings. For use in other applications, please contact your HITACHI dealer or service contractor.



CAUTION

This unit is designed for commercial and light industrial application. If installed in house hold appliance, it could cause electromagnetic interference.


1.1.2 Introduction

RASC units are suitable for business premises and houses where the use of a conventional outdoor unit is either prohibited or impossible.

This air conditioner is designed to offer cooling, heating, dry and fan operation. The operation mode will be controlled by the remote control switch.

These units allow the installation with up to 5 different indoor units for RASC-(4-6)HNPE or 6 indoor units for RASC-(8/10)HNPE.

Additionally, to reduce as much as possible the energy consumption and improve the energy efficiency, RASC units include the “individual operation” mode, performing an individual control over the connected indoor units to create a zone-based control.

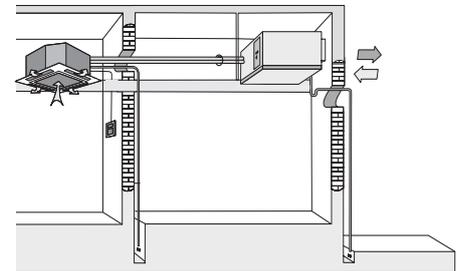

1.1.3 Environment-friendly units

This range of HITACHI RASC units uses environmentally-friendly R410A gas refrigerant, and the RoHS and Green Dot regulations are applied throughout the manufacturing and installation process to reflect HITACHI's awareness of environmental respect and commitment.

R410A is totally environmentally-friendly since it does not contain any substances that damage the ozone layer:

ODP (ozone depleting product) =0.



1.2 Applied symbols

During normal air conditioning system design work or unit installation, greater attention must be paid in certain situations requiring particular care in order to avoid damage to the unit, the installation or the building or property.

Situations that pose a risk to the safety of those in the surrounding area or to the unit itself are clearly indicated in this manual.

A series of special symbols is used to clearly identify these situations.

Pay close attention to these symbols and to the messages following them, as your safety and that of others depends on it.

DANGER

- *The text following this symbol contains information and instructions relating directly to your safety.*
- *Not taking these instructions into account could lead to serious, very serious or even fatal injuries to you and others.*

In the texts following the danger symbol you can also find information on safety procedures during unit installation.

CAUTION

- *The text following this symbol contains information and instructions relating directly to your safety.*
- *Not taking these instructions into account could lead to minor injuries to you and others.*
- *Not taking these instructions into account could lead to unit damage.*

In the texts following the caution symbol you can also find information on safety procedures during unit installation.

NOTE

- *The text following this symbol contains information or instructions that may be of use or that require a more thorough explanation.*
- *Instructions regarding inspections to be made on unit parts or systems may also be included.*

1.3 Product guide

1.3.1 Classification of RASC unit models

Unit type (RASC unit - Built in horizontal)

RASC	-	XX	H	N	P	E	Position-separating hyphen (fixed)
							Compressor power (HP): 4, 5, 6, 8, 10.
							H = Heat pump
							N = R410A refrigerant
							P = Premium series
							E = Made in Europe

1.3.2 Classification of indoor unit models

Unit type (indoor unit): RCI, RCIM, RCD, RPC, RPI, RPIM, RPK, RPF, RPF1

XXX	-	X.X	FS	N	(H)	(X)	(i)	(X)	(-DU)	Position-separating hyphen (fixed)
										Capacity (HP): 1.5, 2, 2.5, 3, 4, 5, 6, 8, 10.
										FS = SYSTEM FREE
										N = R410A refrigerant
										H = Hotel (RPK-1.5HP only)
										2/3/4 = series
										i = Version up (RCI only)
										E = Made in Europe
										M = Made in Malaysia
										- = Made in Japan
DU = Drain Up (RPIM only)										

1.3.3 Product guide: RASC units

RASC			
			
Unit	Code	Unit	Code
RASC-4HNPE	7E343107		
RASC-5HNPE	7E343108		
RASC-6HNPE	7E343109		
		RASC-8HNPE	7E343110
		RASC-10HNPE	7E343111

i NOTE

- Check the exact classification for each unit (model, type, power and series) in “1.3.1 Classification of RASC unit models”.
- All references of the “Built-in-horizontal” units contained into this Technical Catalogue, have been abbreviated as “RASC” unit.
- HITACHI has a range of remote control systems that can be used with the UTOPIA RASC units. Please, refer to the Controls Technical Catalogue.

1.3.4 Product guide: Indoor units

i NOTE

- The indoor unit models and codes are the last updated at time of publication; other previous models and coming developments could be available for combination with RASC series.
- Check the exact classification for each unit (model, type, power and series) in “1.3.2 Classification of indoor unit models”.

RCI						RCIM	
							
4-way cassette				4-way cassette (high efficiency)		4-way cassette (compact)	
Unit	Code	Unit	Code	Unit	Code	Unit	Code
						RCIM-0.8FSN3	60278172
RCI-1.0FSN3Ei	7E403014	RCI-1.0FSN3Ek	7E404001	RCI-1.0FSN3	60278119	RCIM-1.0FSN3	60278173
RCI-1.5FSN3Ei	7E403015	RCI-1.5FSN3Ek	7E404002	RCI-1.5FSN3	60278120	RCIM-1.5FSN3	60278174
RCI-2.0FSN3Ei	7E403016	RCI-2.0FSN3Ek	7E404003	RCI-2.0FSN3	60278121	RCIM-2.0FSN3	60278175
RCI-2.5FSN3Ei	7E403017	RCI-2.5FSN3Ek	7E404004	RCI-2.5FSN3	60278122		
RCI-3.0FSN3Ei	7E403018	RCI-3.0FSN3Ek	7E404005	RCI-3.0FSN3	60278123		
RCI-4.0FSN3Ei	7E403020	RCI-4.0FSN3Ek	7E404007	RCI-4.0FSN3	60278124		
RCI-5.0FSN3Ei	7E403021	RCI-5.0FSN3Ek	7E404008	RCI-5.0FSN3	60278125		
RCI-6.0FSN3Ei	7E403022	RCI-6.0FSN3Ek	7E404009	RCI-6.0FSN3	60278126		

Panels							
RCI				RCIM			
							
P-N23NA	70531000	P-AP160NA1		60297215		P-N23WAM	
		P-AP160NAE (With motion sensor)		60297217		60197160	

i NOTE

The RCI and RCIM models must be used in combination with the panels indicated above.



RCD				RPC			
							
2-way cassette				Ceiling type		Ceiling type (high efficiency)	
Unit	Code			Unit	Code	Unit	Code
RCD-1.0FSN2	60278029						
RCD-1.5FSN2	60278030					RPC-1.5FSN3	60278164
RCD-2.0FSN2	60278031					RPC-2.0FSN3	60278165
RCD-2.5FSN2	60278032					RPC-2.5FSN3	60278166
RCD-3.0FSN2	60278033			RPC-3.0FSN3E	7E443005	RPC-3.0FSN3	60278167
		RCD-4.0FSN2	60278034	RPC-4.0FSN3E	7E443007	RPC-4.0FSN3	60278168
		RCD-5.0FSN2	60278035	RPC-5.0FSN3E	7E443008	RPC-5.0FSN3	60278169
				RPC-6.0FSN3E	7E443009	RPC-6.0FSN3	60278170

Panels			
RCD			
			
P-N23DNA	60297211	P-N46DNA	60297212

 NOTE

The RCD models must be used in combination with the panels indicated above.

RPI				RPIM			
 							
							
Indoor ducted unit							
Unit	Code	Unit	Code	Unit	Code	Unit	Code
RPI-0.8FSN4E	7E424013					RPIM-0.8FSN4E	7E430013
RPI-1.0FSN4E	7E424014					RPIM-0.8FSN4E-DU	7E431013
RPI-1.5FSN4E	7E424015					RPIM-1.0FSN4E	7E430014
						RPIM-1.0FSN4E-DU	7E431014
						RPIM-1.5FSN4E	7E430015
						RPIM-1.5FSN4E-DU	7E431015
		RPI-2.0FSN4E	7E424016				
		RPI-2.5FSN4E	7E424017				
		RPI-3.0FSN4E	7E424018				
		RPI-4.0FSN4E	7E424020				
		RPI-5.0FSN4E	7E424021				
		RPI-6.0FSN4E	7E424022				
				RPI-8.0FSN3E	7E424010		
				RPI-10.0FSN3E	7E424011		

RPK		RPF		RPFI	
 					
					
Wall type		Floor type		Floor concealed type	
Unit	Code	Unit	Code	Unit	Code
RPK-0.8FSN3M	60278146				
RPK-0.8FSNH3M	60278154				
RPK-1.0FSN3M	60278147	RPF-1.0FSN2E	7E450001	RPFI-1.0FSN2E	7E460001
RPK-1.0FSNH3M	60278155				
RPK-1.5FSN3M	60278148	RPF-1.5FSN2E	7E450002	RPFI-1.5FSN2E	7E460002
RPK-1.5FSNH3M	60278156				
RPK-2.0FSN3M	60278149	RPF-2.0FSN2E	7E450003	RPFI-2.0FSN2E	7E460003
RPK-2.5FSN3M	60278150	RPF-2.5FSN2E	7E450004	RPFI-2.5FSN2E	7E460004
RPK-3.0FSN3M	60278151				
RPK-4.0FSN3M	60278152				
EV-1.5N (*)	60921791				

 **NOTE**

(*): For RPK-1.5FSNH3M model only.

1.3.5 List of accessories

◆ Remote control systems

Individual remote controls

Name	Description	Code	Figure
PC-ARF	Remote control with timer	70510001	
PC-ART	Remote control with timer	70510000	
PC-ARH	Simplified remote control	60291486	
PC-LH3A	Wireless remote control	60291056	
PC-LH3B		60291770	

Receiver kit for combination with wireless remote control switch

Name	Description	Code	Figure
PC-ALH	Receiver kit (For RCI-FSN3Ei -on the panel-) (Compatible with PC-LH3A)	60291464	
PC-ALHN		60291627	
PC-ALHC	Receiver kit (For RCIM-FSN3 -on the panel-) (Compatible with PC-LH3A)	60291476	
PC-ALHD	Receiver kit (For RCD-FSN2 -on the panel-) (Compatible with PC-LH3A)	60291467	
PC-ALH3	Receiver kit (For RCI-FSN3 and RCI-FSN3Ek -on the panel-) (Compatible with PC-LH3B)	60291767	
PC-ALHP1	Receiver kit (For RPC-FSN3 -on the panel-) (Compatible with PC-LH3B)	60291823	
PC-ALHZ	Receiver kit (For RCI-FSN3Ei, RCIM-FSN3E, RCD-FSN2, RPC-FSN2, RPI-FSN(3/4)(P)E, RPIM-FSN4E(-DU), RPK-FSN(H)2M, RPF(I)-FSN2E -on the wall-) (Compatible with PC-LH3A)	60291473	
PC-ALHZF	Receiver kit (For RCI-FSN3, RCI-FSN3Ek, RPK-FSN(H)3M and RPC-FSN3 -on the wall-) (Compatible with PC-LH3B)	60291789	

Centralised remote controls

Name	Description	Code	Figure
PSC-A64GT	Touch screen central station	60291730	
PSC-A32MN (*)	Touch screen central station mini	60291966	
PSC-A64S	Centralised remote control	60291479	
PSC-A16RS	Centralised ON/OFF control	60291484	

(*): All the data regarding PSC-A32MN are preliminary data, and therefore, they are subject to changes.

Building air conditioning controls

Name	Description	Code	Figure
CSNET WEB (PSC-A160WEB1)	Centralised control system which runs CSNET WEB software to control the indoor units	7E512000	
CSNET Manager LT	Centralised control with a touch interface of 12 inches which runs CSNET MANAGER software to control the indoor units.	7E512201	
CSNET Manager XT	Centralised control with a touch interface of 17 inches which runs CSNET MANAGER software to control the indoor units.	7E512202	
HC-A64NET	H-LINK gateway used by CSNET MANAGER Screens to communicate with indoor units (Max. 64 indoor units)	7E512200	



Gateways for building management systems (BMS)

Name	Description	Code	Figure
HC-A8MB	Integration with installation with intelligent control (Building Management System) Gateway Interface to MODBUS systems (Max. 8 indoor units).	7E513204	
HC-A64MB	Integration with installation with intelligent control (Building Management System) Gateway Interface to MODBUS systems (Max. 64 indoor units).	7E513205	
HC-A16KNX	Integration with installations with intelligent control (BMS). Gateway Interface to KNX systems.	7E513300	
KNX001	Integration with installations with intelligent control (BMS) through CSNET WEB. Gateway Interface to KNX systems.	7E5121000	
HARC-BX E (A)	Integration with installation with intelligent control (Building Management System) Gateway Interface to LONWORKS systems. (H-LINK I communication) (Max. 64 units with 8 parameters)	60290874	
HARC-BX E (B)	Integration with installation with intelligent control (Building Management System) Gateway Interface to LONWORKS systems. (H-LINK I communication) (Max. 32 units with 16 parameters)	60290875	

Control support devices

Name	Description	Code	Figure
PSC-A1T	Programmable timer	60291482	
PSC-6RAD	H-LINK RAC Adapter	60063017	
PC-A1IO	Integration of external equipment into H-LINK	7E519000	
PSC-5HR	H-LINK Relay	60291105	
PC-AMTB	Connection board for multitenant buildings	7E519200	
THM-R2AE	Remote temperature sensor (THM4)	7E299907	

Control accessories

Name	Description	Code	Figure
Wall support (*)	Wall mounted support (for both CSNET MANAGER LT/XT)	7E512300	To be informed later.
Stand support	Stand mounted support (for both CSNET MANAGER LT/XT)	7E512301	
PCC-1A	Optional function connector	70590901	
PRC-10E1	2P-Extension cord (10 metres)	7E790211	
PRC-15E1	2P-Extension cord (15 metres)	7E790212	
PRC-20E1	2P-Extension cord (20 metres)	7E790213	
PRC-30E1	2P-Extension cord (30 metres)	7E790214	
Net Config. Kit	Net configuration kit for HC-A(8/64)MB and HC-A64NET	7E512306	

(*): All the data regarding Wall support are preliminary data, and therefore, they are subject to changes.







NOTE

In addition to all the aforementioned HITACHI controls, there are some non-HITACHI devices for combination with HITACHI Air Conditioning systems. Please refer to the Technical Catalogue of Controllers for Package for more information.

◆ Complementary systems (DX-Interface)

DX-Interface		Unit	Code
 Control box  Expansion valve box		EXV-2.0E1	7E610900
		EXV-2.5E1	7E610901
		EXV-3.0E1	7E610902
		EXV-4.0E1	7E610903
		EXV-5.0E1	7E610904
		EXV-6.0E1	7E610905
		EXV-8.0E1	7E610906
		EXV-10.0E1	7E610907

Multikits

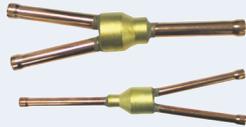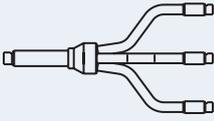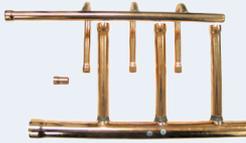Name	Description	Code	Figure
TE-03N1	Branch pipe UTOPIA (pipe kit)	70527012	
TE-04N1		70527013	
TE-56N1		70527014	
TE-08N		70800003	
TE-10N		70800004	
TW-52AN		60291816	
TW-102AN	60291817		
TG-53AN	60291818		
TG-103AN	60291819		
TRE-46N1	Distributor UTOPIA	70527015	
TRE-812N1		70527016	
QE-812N1	Distributor UTOPIA	70527017	
E-102SN3	Branch pipe (multikit)	70524101	
E-162SN3		70524102	

2. Unit installation

Index

2.1. Initial check.....	14
2.2. Transportation	15
2.2.1. Hanging method	15
2.2.2. Handling unit.....	16
2.3. Factory-supplied accessories.....	16
2.4. Installation space.....	17
2.5. Interchangeability of air inlet and outlet panels	18
2.6. Installation place provision	19
2.7. Fan performance curves	20
2.8. Duct connection.....	22

2

2.1 Initial check



CAUTION

- *Install the RASC unit in a restricted area not accessible by the general public.*
- *Do not install the unit outdoors (Water proof class: IPX0). Only indoor installation is allowed, and air for both suction and discharge must come from outside the building.*
- *Ensure that the installation area has a proper ventilation so that ambient temperature around the unit does never exceed 46°C.*
- *Install the RASC unit with sufficient clearance around it for operation and maintenance.*
- *Do not install the RASC unit where is a high level of oil mist, salty air or sulphurous atmosphere.*
- *Install the RASC unit as far as practical (being at least 3 meters) from electromagnetic wave radiator (such as medical equipment).*
- *Install the RASC unit where good ventilation is available, for working in an enclosed space may cause oxygen deficiency. Toxic gas may be produced when cleaning agent is heated to high temperature by, e.g., being exposed to fire.*
- *Cleaning liquid shall be collected after cleaning.*
- *For cleaning, use nonflammable and nontoxic cleaning liquid. Use of inflammable agent may cause explosion or fire.*
- *Pay attention not to clamp cables when attaching the service cover to avoid electric shock or fire.*
- *Keep clearance between the units of more than 50mm, and avoid obstacles that may hamper air intake, when installing more than one units together.*
- *Install the RASC unit in the shade or not exposed to direct sunshine or direct radiation from high temperature heat source.*
- *Do not install the RASC unit in a space where a seasonal wind directly blows to the RASC unit.*
- *Check to ensure that the foundation is flat, level and sufficiently strong.*
- *Aluminium fins have very sharp edges. Pay attention to the fins to avoid injury.*
- *Keep clearance between the wall (without vent holes) and air inlet/outlet part more than 3 metres in order to avoid short circuit.*
- *Install the RASC unit in the shade or not exposed to direct sunshine or direct radiation from high temperature heat source.*
- *Do not put any material on the products.*
- *Do not put any strange material (sticks, etc...) into the air inlet and outlet. These units have high speed rotating fans and it is dangerous that any object touches them.*
- *This appliance must be used only by adult and capable people having received the technical information or instructions to handle properly and safely this appliance.*
- *Children should be supervised to ensure that they do not play with the appliance.*

2.2 Transportation




DANGER

Do not put any foreign material into the RASC unit and check to ensure that none exists in the RASC unit before the installation and test run. Otherwise, a fire or failure will occur.

2.2.1 Hanging method

When hanging the unit, ensure the balance of the unit, check safety and lift it up smoothly. Do not remove any packing materials and hang the unit under packing condition with two ropes, as shown in the figure.

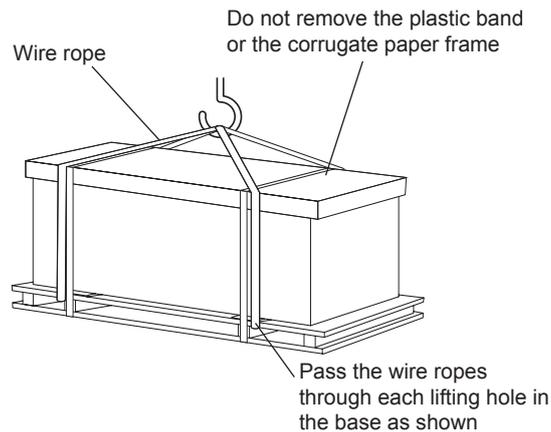

CAUTION

- Apply two lifting wires on to the RASC unit, when lifting it by crane.
- For safety reasons ensure that the RASC unit is lifted smoothly and does not lean.
- Do not attach lifting equipment to the plastic band or the corrugated paper frame, because the ropes will slip or break the materials.
- Ensure that the exterior of the unit is adequately protected with cloth or paper.
- Transport the products as close to the installation location as practical before unpacking.

2.2.2 Handling unit

When the unit is lifted, pay attention to the following points:

- 1 Do not remove the wooden base until its final position.
- 2 To prevent the unit from overturning, pay attention to the centre of gravity.
- 3 Due to the high weight of these units, use the appropriate machinery for these works.

Model	Gross weight (kg)
RASC-4HNPE	218
RASC-5HNPE	218
RASC-6HNPE	218
RASC-8HNPE	333
RASC-10HNPE	336

2.3 Factory-supplied accessories

Unpack the unit and check that:


- The package contains all the components (see next table).
- All components are in perfect condition.

Otherwise, contact the manufacturer.

Name	Quantity	Comments
Declaration of conformity	1	-
Transparent label	1	For attaching in the refrigerant label.
Installation and operation manual	1	Installation and operation unit instructions.
Product fiche	1	(Only for RASC-4HNPE)
Energy label	1	(Only for RASC-4HNPE)
Gas pipe accessory	1	For brazing to the field supplied gas line, and connecting to the gas valve. (Only for RASC-(8/10)HNPE)

2.4 Installation space

Units in mm.

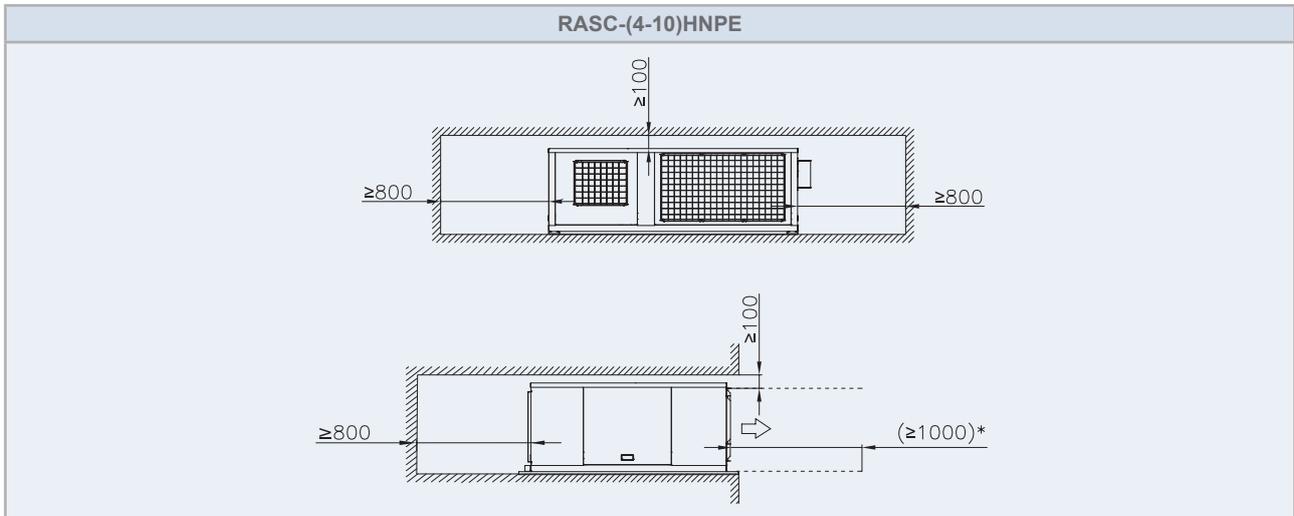


NOTE

(*): Recommended servicing space for fan unit in those cases where it is not possible to access from the unit's side. In these cases, a "removable servicing duct" or a "removable grille" (in case of installing the unit next to a wall) shall be installed to allow replacement of the fan unit whenever necessary (which should be made from the unit's front side).


2.5 Interchangeability of air inlet and outlet panels

RASC units can be used in different configurations, just by switching the air inlet and outlet panels (with respect to the air outlet panel, the change of position entails the rotation of the fan motor as well).

◆ Inlet air modification option

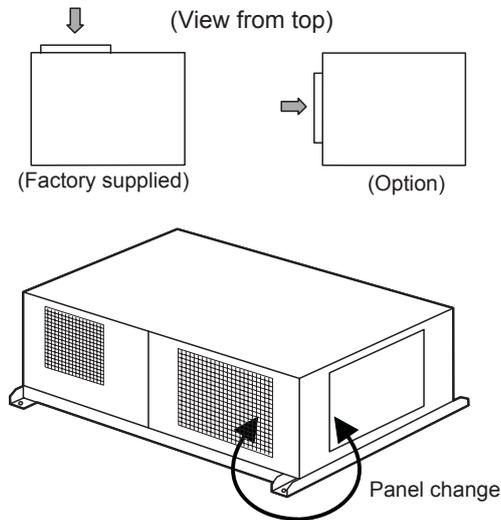


◆ Outlet air modification option

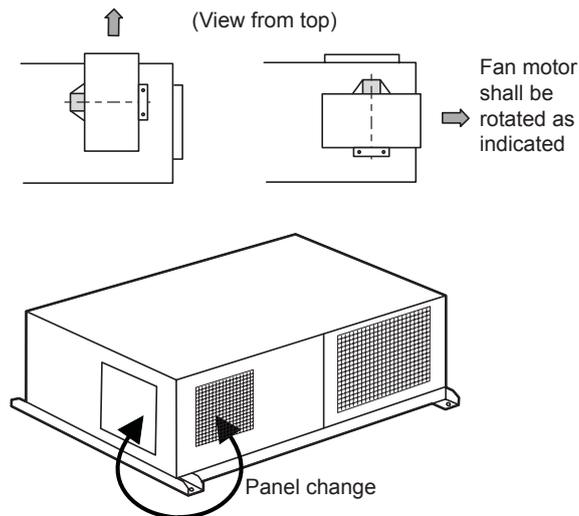


2.6 Installation place provision

◆ Floor mounted


- 1 Foundation could be on flat and is recommended be 100-300mm higher than floor level.
- 2 Install a drainage around foundation for smooth drain.
- 3 When installing the unit fix it by anchor bolts of M10.
- 4 Use vibration-proof rubber (approx. 60 degree) between the unit and foundation.
- 5 Drain water sometimes turns to ice. Therefore, avoid draining in an area that people often use because it is slippery.
- 6 Check to ensure that water-proofing measure shall be taken to the foundation.
- 7 Install the unit making sure that the drain outlet part is lower (>25mm / <30mm) than the opposite side in order to avoid incorrect drain discharge.

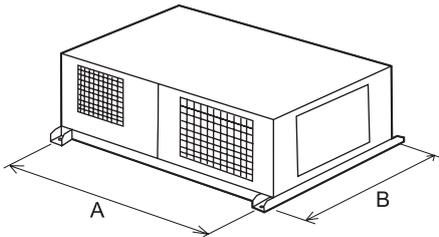

Mark	Anchor bolt pitch	
Model	(4-6)HP	(8/10)HP
A(mm)	1335	1770
B(mm)	1143	1487

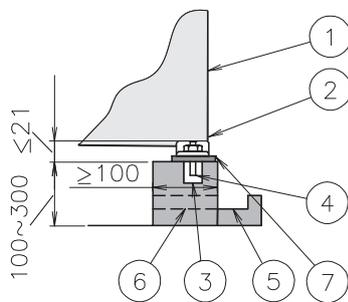


N°	Description
①	Unit
②	Cut this portion of bolt If not, it's difficult to remove Service Cover
③	Mortar Hole (Ø100xDepth 150)
④	Anchor Bolt M10
⑤	Drainage (Wide 100xDepth 150)
⑥	Drainage
⑦	Vibration-proof rubber

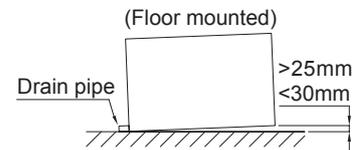


◆ Ceiling suspended

- 1 Suspend the unit as the drawing indicates.
- 2 Ensure that ceiling can resist the unit weight which is indicated into the specification label.
- 3 Install the unit so that the drain outlet parts is slightly lower (>25mm / <30mm), in order to avoid incorrect drain discharge.

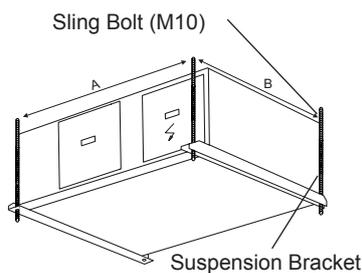

Mark	Sling bolt pitch	
Model	(4-6)HP	(8/10)HP
A(mm)	1335	1770
B(mm)	1143	1487

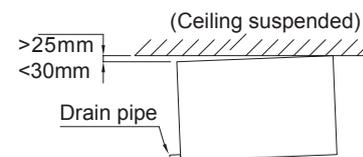


⚠ CAUTION


- If the unit is suspended in the ceiling, place for installation is sufficiently strong. If not, reinforce the place with beams, etc., (more than 150 kg for one sling bolt) otherwise, the unit may fall down or the unit wind resonance may produce abnormal noise.
- Do not install the unit using vibration-proof springs or mounting springs.

2.7 Fan performance curves

RASC unit can be installed with suction and/or discharge air ducts. Refer to the fan performance curves in order to ensure that the air volume is within the working range.

In case of using suction and/or discharge air ducts, check the fan performance curve and decide which ducts are suitable according to the external static pressure (Pa) / air flow volume (m³/min.).

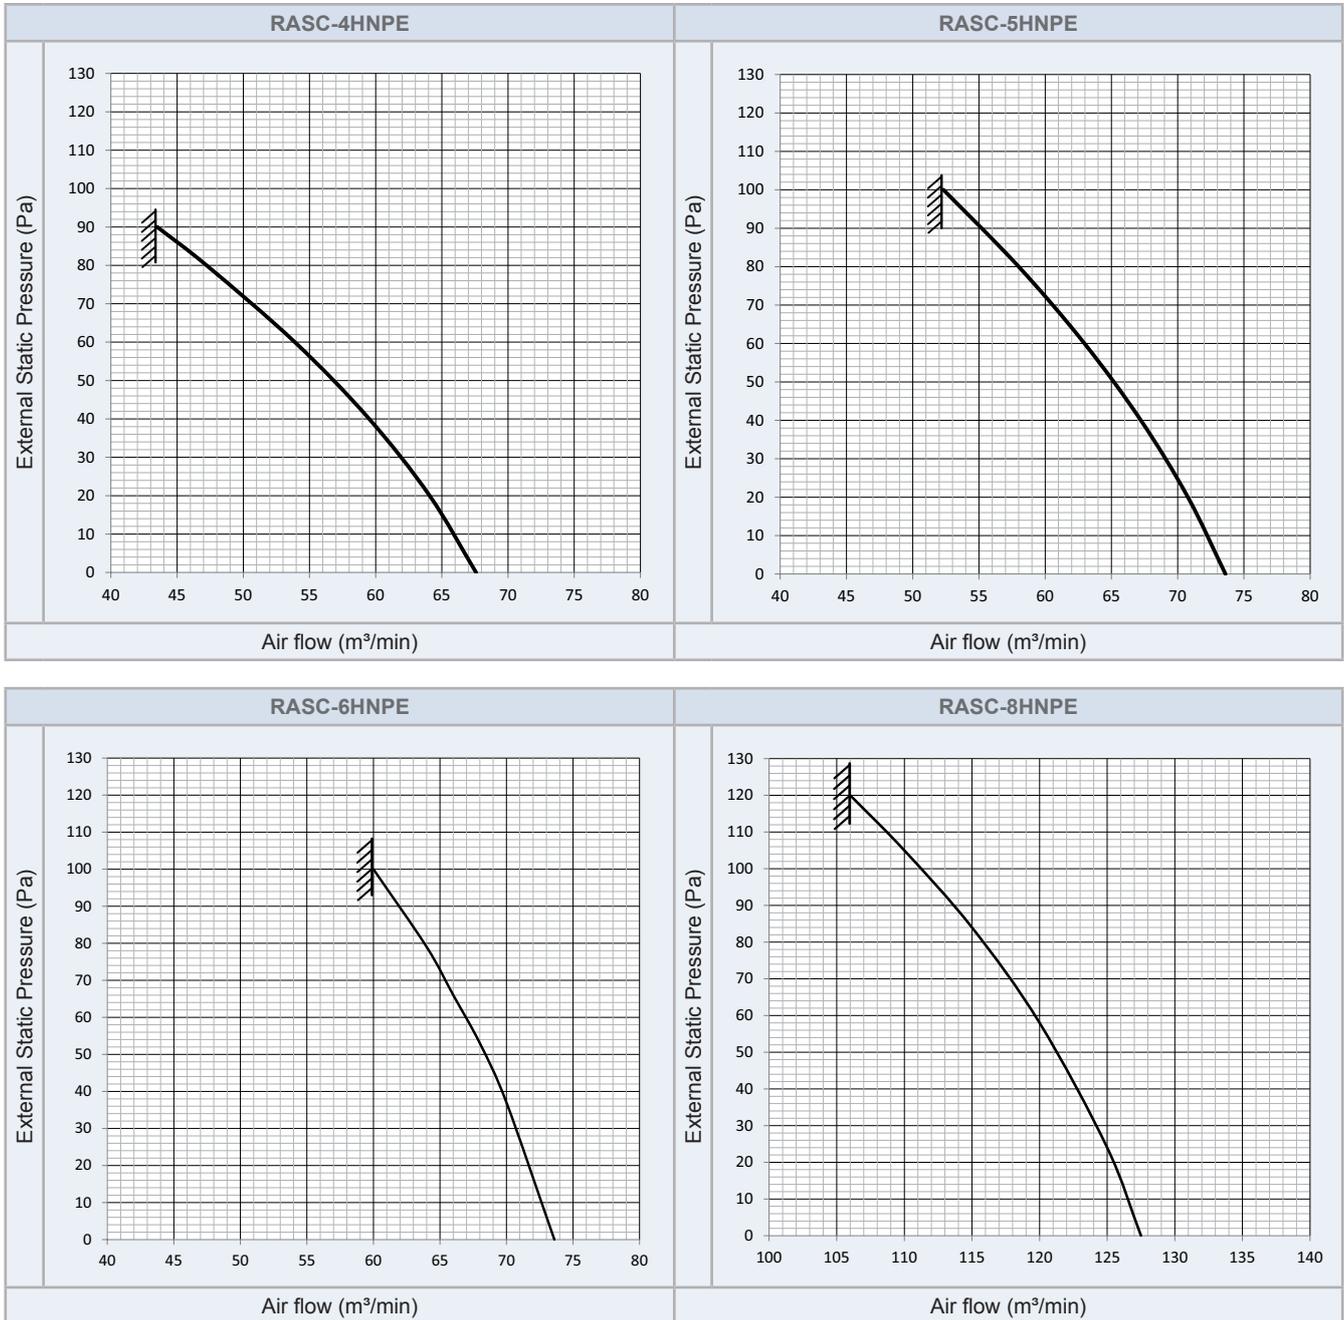

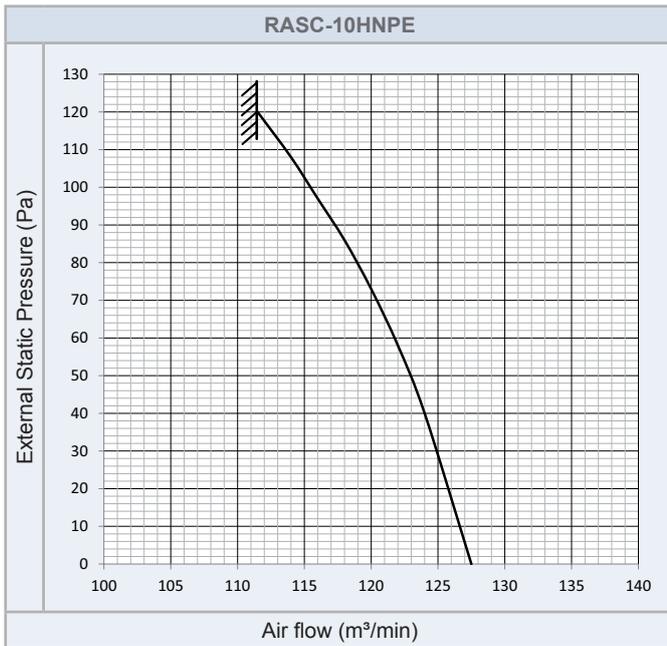

i NOTE

- When designing a duct, check to ensure that the Air volume is within working range as indicated in the fan performance curves.
- If the Air volume is set outside working range, water carry-over (drop in the ceiling or into the room), noise increase, damage to fan motor (high temperature) or insufficient Cooling/Heating capacity phenomena can occur.

◆ **Setting of the fan performance curves**


In some installations, it may be necessary to adjust the fan operation settings of RASC-(6/8/10)NPE units in order to achieve an optimal performance of the fan unit. The correct static pressure setting (Low / Medium / High) has to be selected using the PSW and 7-segment display on the RASC PCB, according to the pressure values below:

- RASC-(4/5)HP: No setting is required.
- RASC-(6/8)HP: Select the “Medium pressure setting (F2 : 1)” for external static pressures higher than 50 Pa.
- RASC-10HP: Select the most suitable static pressure setting, depending on the installation conditions:
 - “Medium pressure setting (F2 : 1)”: For external static pressures between 50 and 80 Pa.
 - “High pressure setting (F2 : 2)”: For external static pressures higher than 80 Pa.

Default value: “Low pressure setting (F2 : 0)”


In order to do so, measure the fan motor current and set the static pressure setting according to the following table: For the measurement of the fan motor current, please refer to the following drawing:

Model	Fan motor current (A)	
	Medium pressure setting (F2: 0 → 1)	High pressure setting (F2: 0 → 2)
RASC-6HP	< 1.40 A	-
RASC-8HP	< 3.10 A	-
RASC-10HP	2.65 ~ 3.10 A	< 2.65

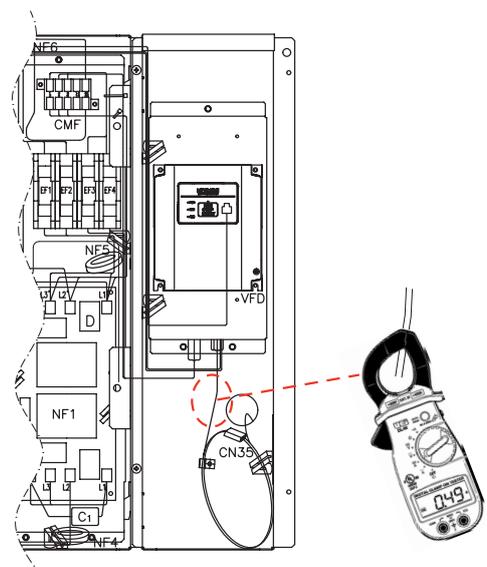

2.8 Duct connection

Install the duct with down slope to prevent entry of rain water. Also, provide insulation for duct and connection in order to prevent dew formation.

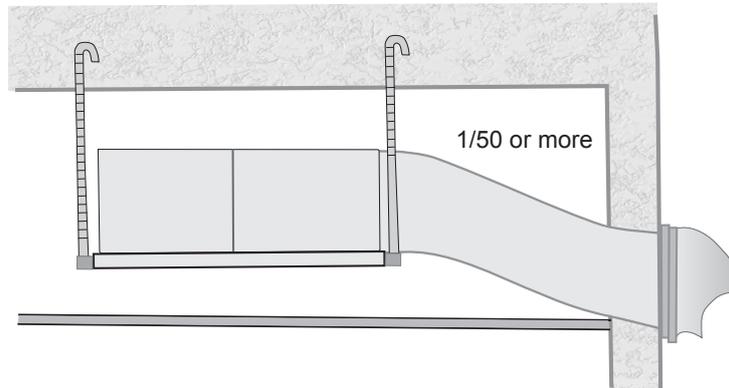

3 . Piping work and refrigerant charge

Index

3.1.	Piping work connection considerations	20
3.1.1.	Copper pipes and sizes	20
3.1.2.	Pipe connection	21
3.1.3.	Insulation	21
3.1.4.	Three principles on refrigerant piping work	22
3.1.5.	Suspension of refrigerant piping	23
3.1.6.	Brazing work.....	23
3.2.	Piping connection for RASC unit.....	24
3.3.	Refrigerant piping range.....	28
3.3.1.	Refrigerant piping length	28
3.3.2.	Piping system (Header branch installation).....	28
3.3.3.	Piping system (Line branch installation).....	31
3.3.4.	Combinations of piping size and piping length	32
3.3.5.	Refrigerant piping size and multikit/distributor selection.....	33
3.3.6.	Considerations when installing distributors	37
3.4.	Refrigerant charge.....	38
3.4.1.	Refrigerant charge amount.....	38
3.4.2.	Refrigerant charge procedure.....	40
3.4.3.	Caution of the pressure by check joint	41
3.4.4.	Pump down refrigerant	41
3.5.	Caution in case of refrigerant leakage.....	42
3.5.1.	Maximum permitted concentration of HFCs	42
3.5.2.	Calculation of refrigerant concentration.....	42
3.5.3.	Countermeasure for refrigerant leakage.....	42
3.6.	Compatibility with the piping of current installations where R22 or R407C is used	44
3.6.1.	Installation procedure for existing pipes	44
3.6.2.	When the existing air conditioner is a product of another manufacturer	44
3.6.3.	Permissible range for existing air-conditioning pipes	45
3.6.4.	Selection of the renewal kit model.....	45
3.7.	Drainage and drain pipe installation	47


3.1 Piping work connection considerations

3.1.1 Copper pipes and sizes

- 1 Prepare locally-supplied copper pipes.
- 2 Select the correct pipe size and material. Use the table below to select the required piping.

Nominal Diameter		Thickness (mm)	Copper Type
(mm)	(in)		
Ø6.35	1/4	0.80	Roll
Ø9.52	3/8	0.80	Roll
Ø12.7	1/2	0.80	Pipe/Roll
Ø15.88	5/8	1.00	Roll
Ø19.05	3/4	1.00	Pipe/Roll
Ø22.23	7/8	1.00	Pipe/Roll
Ø25.4	1	1.00	Pipe
Ø28.58	1 1/8	1.25	Coil

- 3 Select clean copper pipes. Make sure there is no dust and moisture inside. Blow the inside of the pipes through with oxygen-free nitrogen to remove any dust and foreign materials before connecting pipes.
- 4 After connecting the refrigerant piping, seal the open space between the knockout hole and refrigerant pipes by using insulation material as shown below:

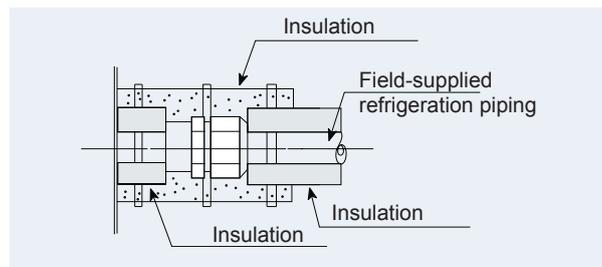

i NOTE


If copper pipe is used for piping bigger than Ø19.05 flaring work can not be performed. If necessary, use a joint adapter.

! CAUTION

- Do not use saws, grindstone or other tools which might create copper dust.
- When cutting pipes, secure the part to be soldered as shown in the Service Manual.
- Strictly follow national or local regulations regarding occupational health and safety.
- Wear appropriate means of protection during cutting or brazing operations and installation (gloves, eye protection, etc).

3.1.2 Pipe connection


Fix the connecting pipe as shown in the figure below. Use the insulation attached to the indoor unit.

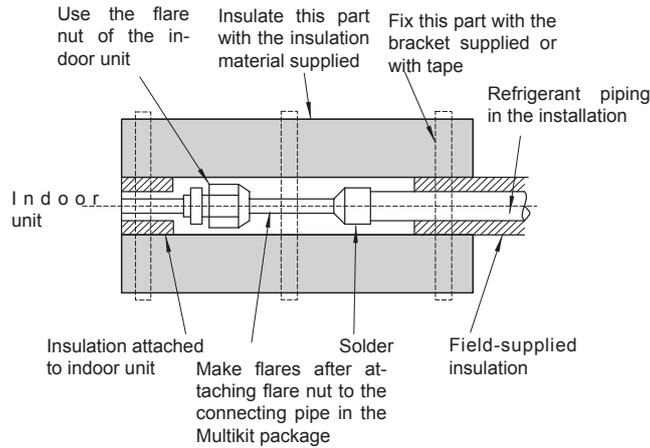

i NOTE

A system with no moisture or oil contamination will give maximum performance and life-cycle as compared with a poorly prepared system. Take particular care to ensure that all copper piping is clean and dry internally. To ensure this, blow oxygen free nitrogen through the pipes.

- Cap the end of the pipe when the pipe is to be inserted through a hole.
- Do not place pipes directly on the ground without a cap or vinyl tape covering the end.

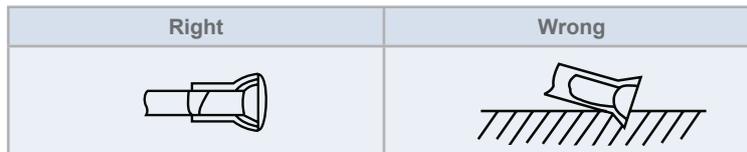

- If piping installation cannot be completed until the following day or longer, solder the ends of the piping to close them and load with oxygen-free nitrogen using an access device such as a Schrader valve to avoid moisture and contamination by extraneous particles.
- Do not use insulation material containing NH₃ as it can damage the copper piping material and may be a source of future leakage.


3.1.3 Insulation

Attach insulation package with the Multikit to each branch using vinyl tape. Also attach insulation to field-supplied piping to prevent capacity decrease due to ambient air conditions and dewing on pipe surface caused by low pressure.

i NOTE

When polyethylene foam is applied a thickness of 10mm for the liquid piping and 15mm to 20mm for the gas piping is recommended.

- 1 Cap.
- 2 Field supplied insulation.
- 3 Do not make a gap.

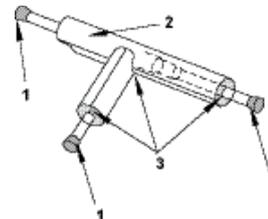

! CAUTION

- Perform insulation work when the surface temperature reaches the room temperature. Otherwise it is possible that the insulation will melt.
- If the ends of the piping system are open after accomplishing piping work securely attach caps or vinyl bags to the ends of the piping avoiding the invasion of moisture and dust.

3.1.4 Three principles on refrigerant piping work

In case of using refrigerant R410A in the refrigeration cycle, the refrigeration oil should be of a synthetic type one.


In order to avoid oxidation, pay much careful attention to basic piping work control to avoid infiltration of moisture or dust during the refrigerant piping work.

Three principles	Cause of failure	Presumable failure	Preventive action
1 Dry Keep good dryness	<ul style="list-style-type: none"> Water infiltration due to insufficient protection at pipe ends Dewing inside of pipes Insufficient vacuum pumping time 	Icing inside tube at ex. valve (Water choking) + Generation of hydration and oxidation of oil ↓ Clogged strainer, etc., insulation failure and compressor failure	<ul style="list-style-type: none"> Pipe protection 1 Pinching 2 Taping <ul style="list-style-type: none"> Flushing Vacuum drying <ul style="list-style-type: none"> - One gram of water turns into gas (approx. 1000 lrs) at 1 Torr - Therefore, it takes long time to vacuum-pump by a small vacuum pump
2 Clean No dust inside of pipes	<ul style="list-style-type: none"> Infiltration of dust or other through the pipe ends Oxidation film during brazing without blowing nitrogen Insufficient flushing by nitrogen after brazing 	Clogging of expansion valve, capillary tube and filter Oxidation of oil Compressor failure ↓ Insufficient cooling or heating compressor failure	<ul style="list-style-type: none"> Pipe protection 1 Mounting caps 2 Taping 3 Pinching <ul style="list-style-type: none"> Flushing
3 No leakage No leakage shall exist	<ul style="list-style-type: none"> Brazing failure Failed flaring work and insufficient torque of squeezing flare Insufficient torque of squeezing flanges 	Refrigerant shortage Performance decrease Oxidation of oil ☛ Overheating of compressor ↓ Insufficient cooling or heating Compressor failure	<ul style="list-style-type: none"> Careful basic brazing work Basic flaring work Basic flange connecting work Air tight test Holding of vacuum

3.1.5 Suspension of refrigerant piping


Suspend the refrigerant piping at certain points and prevent the refrigerant piping from touching the weak part of the building such as wall, ceiling, etc...

(If touched, abnormal sound may occur due to the vibration of the piping. Pay special attention in case of short piping length).

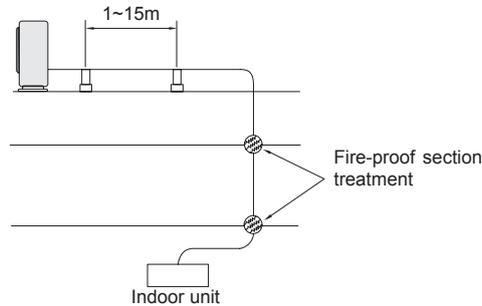

Do not fix the refrigerant piping directly with the metal fittings (The refrigerant piping may expand and contract).

Some examples for suspension method are shown below.

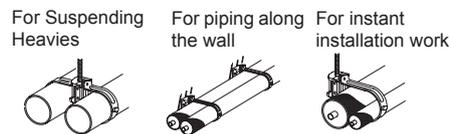


3.1.6 Brazing work

The most important work in the refrigerant piping installation work is the brazing of the pipes. If it accidentally occurs a leakage due to a careless brazing process, it will cause clogged capillary pipes or serious compressor failure.

It is important to control the clearance of the pipe fitting portion as shown below. In the case that a cooper tube expansion jig is used, following dimensions should be secured.

In order to guarantee a proper brazing neck between different pipes surfaces, accurate pipe dimensions after the expansion process (see the following table):

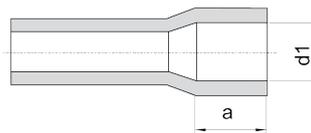


Copper pipe size		Ød1	Gap	a
Ø6.35	+0.08	Ø6.5	+0.1	0.33
	-0.08		0	
Ø9.52	+0.08	Ø9.7	+0.1	0.35
	-0.08		0	
Ø12.7	+0.08	Ø12.9	+0.1	0.38
	-0.08		0	
Ø15.88	+0.09	Ø16.1	+0.1	0.41
	-0.09		0	
Ø19.05	+0.09	Ø19.3	+0.1	0.44
	-0.09		0	

Copper pipe size		Ød1	Gap	a
Ø22.22	+0.09	Ø22.42	+0.1	0.39
	-0.09		0	
Ø25.4	+0.12	Ø25.6	+0.1	0.42
	-0.12		0	
Ø28.58	+0.12	Ø28.78	+0.1	0.42
	-0.12		0	
Ø31.75	+0.12	Ø32.0	+0.1	0.47
	-0.12		0	
Ø38.1	+0.12	Ø38.3	+0.1	0.52
	-0.12		0	

A basic brazing method is shown below.

- ❶ Pre-heat the outer tube for better flowing of the filler metal
- ❷ Heat inner side tube evenly
- ❸ Rubber plug
- ❹ Packless valve
- ❺ High pressure hose
- ❻ 0.03 to 0.05 MPa (0.3 to 0.5 kg/cm² G)
- ❼ Reducer valve: open this valve only when the gas is needed
- ❽ Nitrogen gas flow 0.05 m³/h or smaller

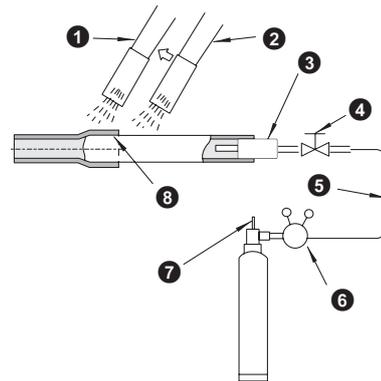


⚠ CAUTION

- Use nitrogen gas for blowing during pipe brazing. If oxygen, acetylene or fluorocarbon gas is used, it will cause an explosion or poisonous gas.
- A lot of oxidation film will occur inside of tubes if no nitrogen gas blowing is performed during brazing work. This film will be flecked off after operation and will circulate in the cycle, resulting in clogged expansion valves, etc. This will cause bad influence to the compressor.
- Use a reducer valve when nitrogen gas blowing is performed during brazing. The gas pressure should be maintained within 0.03 to 0.05 MPa. If a excessively high pressure is applied to a pipe, it will cause an explosion.

3.2 Piping connection for RASC unit

The stop valves are located on the right side of unit cover. Before connecting refrigerant piping, the stop valve protection cover shall be removed.

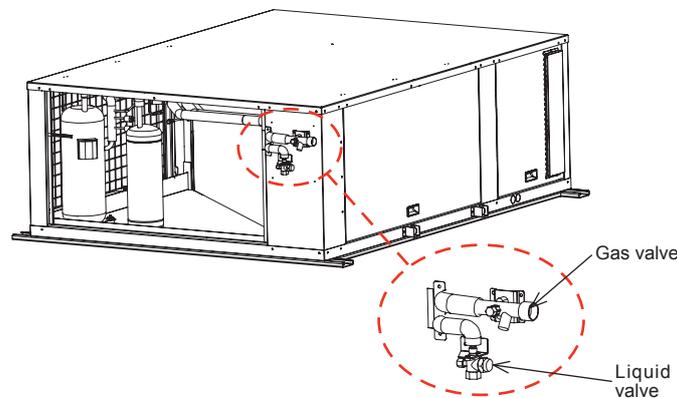


- 1 Mount the piping cover in order to avoid water entering into the unit. Seal the holes where pipes and wires are inserted, by using a insulation (field-supplied).
- 2 If the field-supplied piping is connected with stop valves directly, it is recommended use a tube bender.
- 3 Check to ensure that the stop valves are completely closed before connecting pipes.
- 4 Connect the field supplied refrigerant pipes to the indoor unit and RASC unit. Apply the oil thinly at the seat flare nut and pipe before tightening.

The required tightening torque is as follows:

Pipe Size	Tightening Torque (Nm)
Ø 6.35 mm (1/4")	20
Ø 9.52 mm (3/8")	40
Ø 12.70 mm (1/2")	60
Ø 15.88 mm (5/8")	80
Ø 19.05 mm (3/4")	100


- 5 After connecting the refrigerant piping, seal the open space between knockout hole and refrigerant pipes by using insulation material.

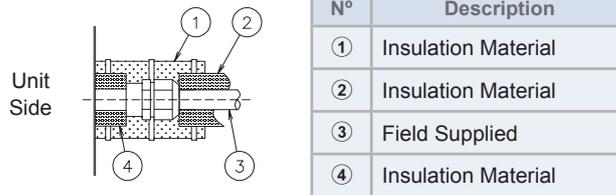

- 6 Operation of stop valve should be performed according to the indications below:


RASC unit stop valve

- 1 Remove the stop valve cap before performing the air tight test after connecting the flare nut. Tighten the spindle valve in clockwise according to the following table “Tightening Torque of Stop Valves”.
- 2 Tighten the flare nut according to the specified torque. If the tightening torque is excessive, it may cause refrigerant leakage from the spindle part.
- 3 Perform the air tight test after the tightening work. It is more effective to perform this work after fix the flare nuts for the piping connection to the stop valves.
- 4 Use the charging hose for the check joint connection. When removing the charging hose from the check joint, a sound may be heard by a small quantity of refrigerant leak. However it is not abnormality. Do not apply excessive force to the end of opening the spindle. (Tightening Torque: < 5.0 N·m).

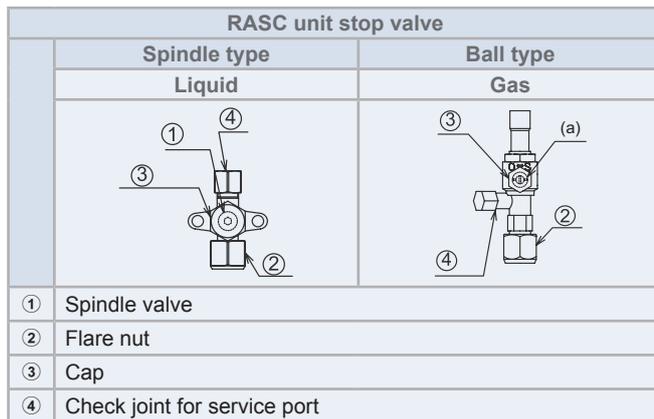



RASC unit	Tightening torque (N·m)							
	①		②		③		④	
	Gas valve	Liquid valve	Gas valve	Liquid valve	Gas valve	Liquid valve	Gas valve	Liquid valve
RASC-(4-6)HNPE			68-82	33-42				
RASC-8HNPE	-	7-9	100-120	50-62	20-25	33-42	14-18	14-18
RASC-10HNPE								



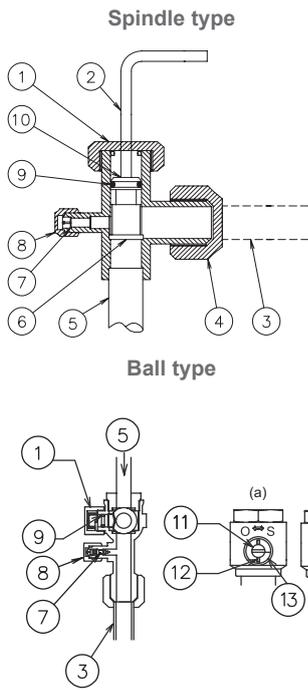

N°	Description	Remarks
①	Cap	
②	Allen wrench	Hex 4 mm
③	Refrigerant piping	Field supplied
④	Flare nut	
⑤	Refrigerant pressure	To RASC unit
⑥	Seat Surface	Fully closed position
⑦	Check joint	Only the charging those can be connected
⑧	Charge port cap	
⑨	O-Ring	Rubber
⑩	Spindle valve	Open – Counterclockwise Close – Clockwise
⑪	Shaft	
⑫	Pin	
⑬	Stopper	
(a)	Closed	This valve is opened or closed with rotating 90 degrees at the ball valve part. Rotate the shaft until the pin touches the stopper. Do not apply the extra force. Use a slotted screwdriver to control the shaft. Do not leave the ball valve partly open
(b)	Opened	

Do not apply two spanners at this position. If applied, leakage will occur.

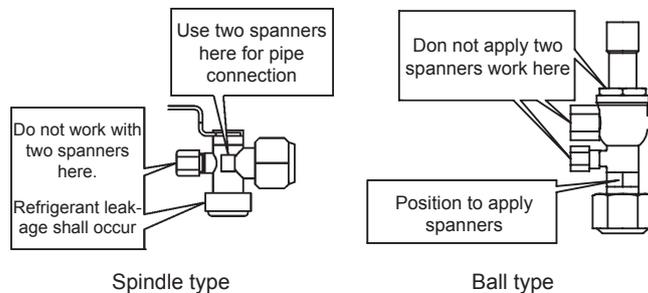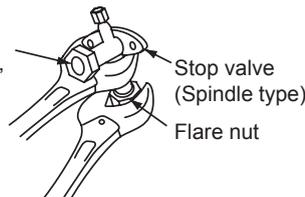


CAUTION

- At the test run, fully open the spindle and ball stop valve.
- If not fully opened, the devices will be damaged.
- Do not attempt to turn service valve rod beyond its stop.
- Do not loosen the stop ring. If the stop ring is loosened, it is dangerous since the spindle will hop out.
- An excess or a shortage of refrigerant is the main cause of trouble to the units. Charge the correct refrigerant quantity according to the description of label at the inside of service cover.
- Check for refrigerant leakage in detail. If a large refrigerant leakage occurs, it will cause difficulty with breathing or harmful gases would occur if a fire was being used in the room.

◆ Gas pipe accessory (Only for RASC-(8/10)HNPE)

The gas pipe accessory (factory-supplied silencer) shall be brazed to the field supplied gas line, and connected to the gas valve as indicated in the drawing:


**Brazing work****CAUTION**

- Use nitrogen gas for blowing during pipe brazing. If oxygen, acetylene or fluorocarbon gas is used, it will cause an explosion or poisonous gas.
- A lot of oxidation film will occur inside of tubes if no nitrogen gas blowing is performed during brazing work. This film will be flecked off after operation and will circulate in the cycle, resulting in clogged expansion valves, etc. This will cause bad influence to the compressor.
- Use a reducer valve when nitrogen gas blowing is performed during brazing. The gas pressure should be maintained within 0.03 to 0.05 MPa. If an excessively high pressure is applied to a pipe, it will cause an explosion.

3.3 Refrigerant piping range

3.3.1 Refrigerant piping length

The refrigerant piping between the indoor unit and the RASC unit should be designed using the following instructions. Keep the design point within the area of the chart, which shows the applicable height difference according to piping length.

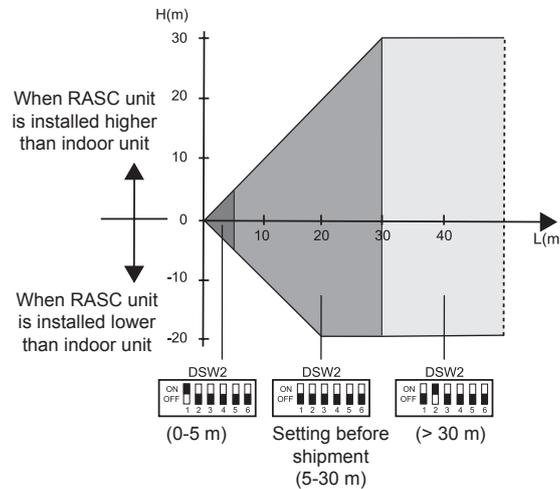

3.3.2 Piping system (Header branch installation)

1 indoor unit system	2 indoor units system	3 indoor units system
-	$L = A + \text{the longest of B \& C}$	$L = A + \text{the longest of B, C \& D}$
4 indoor units system		
Case a)	Case b) Only for (8/10)HP	
$L = A + \text{the longest of (B + the longest of D \& E) \& (C + the longest of F \& G)}$	$L = A + \text{the longest of B, C, D \& E}$	



NOTE

- *L and H are the length and height indicated in the above chart. For 1, 2 or 3 indoor unit systems, the length is the distance between the RASC unit and the farthest indoor unit.*
- *The liquid piping and the gas piping must be of the same length and run along the same route.*
- *Multi-kits for multiple connections (optional accessory as system parts) must be used to install the branch pipe to the indoor unit. Install them at the same horizontal level.*
- *Install the branch piping as close as possible to the indoor units.*

◆ **Maximum refrigerant piping length (Header branch installation)**

(m)

Item		4HP	5HP	6HP	8HP	10HP	
Maximum piping length between the RASC unit and the farthest indoor unit	Actual piping length (L)	75			100		
	Equivalent piping length (EL)	95			125		
Maximum total piping length	2 indoor units (A + B + C)	85			100	115	
	3 indoor units (A + B + C + D)	95			100	130	
	4 indoor units	Case a) (A + B + C + D + E + F + G)	95			100	145
		Case b) (A + B + C + D + E)	-			100	145
Maximum piping length between multikit and indoor unit	2 indoor units (B, C)	10			15		
	3 indoor units (B, C, D)	10			15		
	4 indoor units	Case a) B + D, B + E, C + F, C + G	10			15	
		Case b) B, C, D, E	-			15	
Maximum height difference between RASC unit and indoor unit (H)	RASC unit higher than indoor unit	30					
	Indoor unit higher than RASC unit	20					
Maximum height difference between indoor units		10					
Maximum height difference between multikits and between multikit and indoor unit		3					



NOTE


- The refrigerant piping length from the RASC unit to the first branch (A) must be higher than the piping length from the first branch to the farthest indoor unit.
- All branch piping should be balanced, and the difference between these sections cannot be greater than indicated in the tables below:

(m)

			(4/10)HP
2 indoor units		(B-C)	8
3 indoor units		(B-C, B-D, C-D)	
4 indoor units	Case a)	(B+(D or E)) - (C+(F or G))	
		(D-E)	
		(F-G)	
	Case b) Only for (8/10)HP	(B-C, B-D, B-E, C-D, C-E, D-E)	



◆ **Maximum height difference (clarification)**

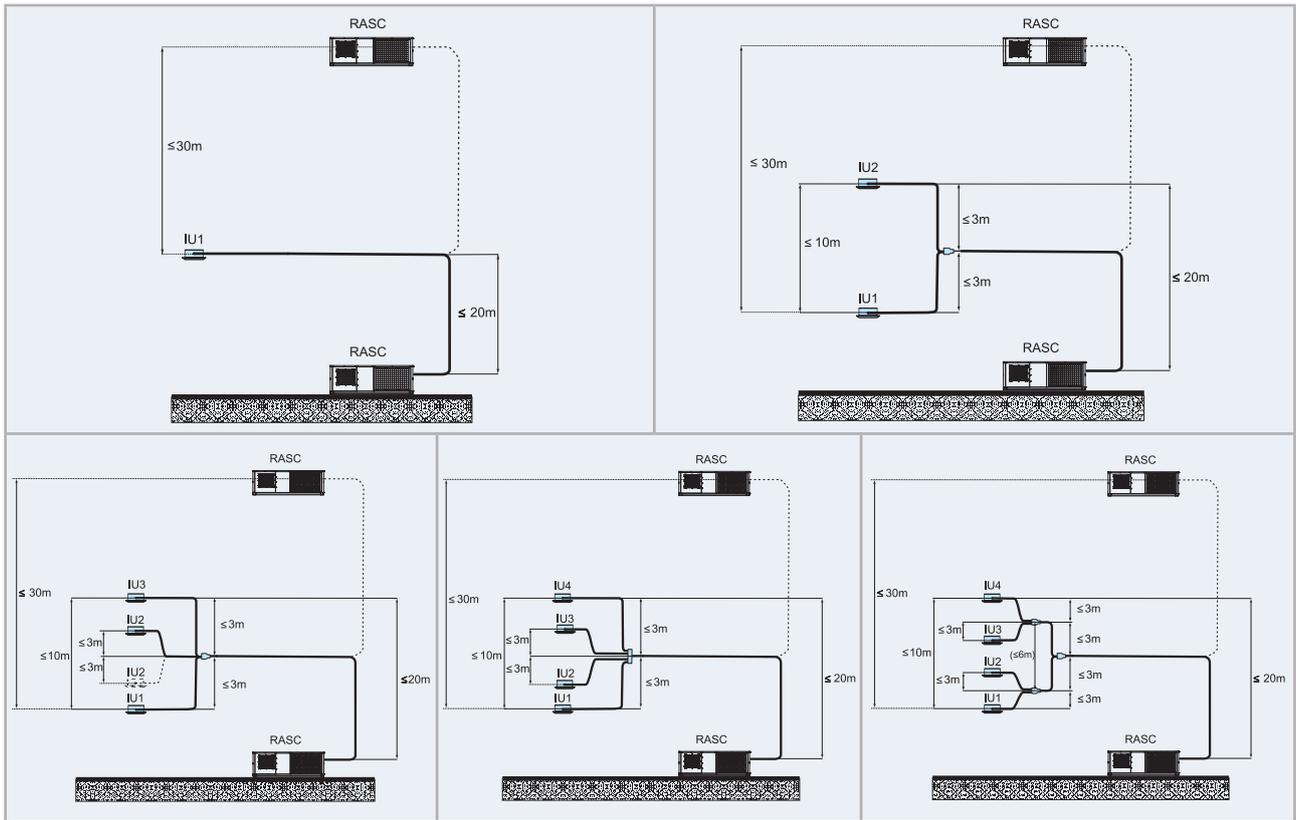


i **NOTE**

All pictures are shown as an example.

3.3.3 Piping system (Line branch installation)

RASC unit	4 HP	5 HP	6 HP	8 HP	10 HP
Allowed quantity of indoor units	2 - 5 (*)			2 - 6 (*)	

(*): In case of more than 4 indoor units, please respect the restrictions shown in chapter [Combinability](#).

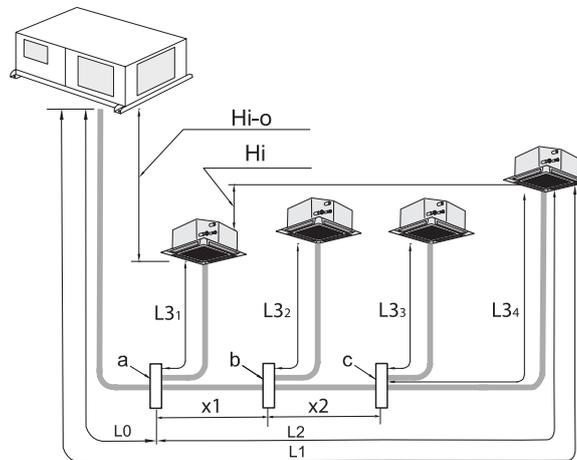


◆ Maximum refrigerant piping length (Line branch installation)

(m)

Item		4HP	5HP	6HP	8HP	10HP
Maximum piping length between the RASC unit and the farthest indoor unit	Actual piping length (L1)	75			100	
	Equivalent piping length (EL)	95			125	
Maximum total piping length (L1+ L3 ₁ + L3 ₂ + ... + L3 _{n-1})		95			100	145
Maximum piping length from the 1st multikit to the furthest indoor unit (L2)		30			40	
Maximum piping length between multikit and indoor unit (L3 ₁ , L3 ₂ , L3 ₃ , ..., L3 _n)		10			15	
Maximum height difference between RASC unit and indoor unit (Hi-o)	RASC unit higher than indoor unit	30				
	Indoor unit higher than RASC unit	20				
Maximum height difference between indoor units (Hi)		10				
Maximum height difference between multikits and between multikit and indoor unit		3				



◆ **Maximum height difference (clarification)**

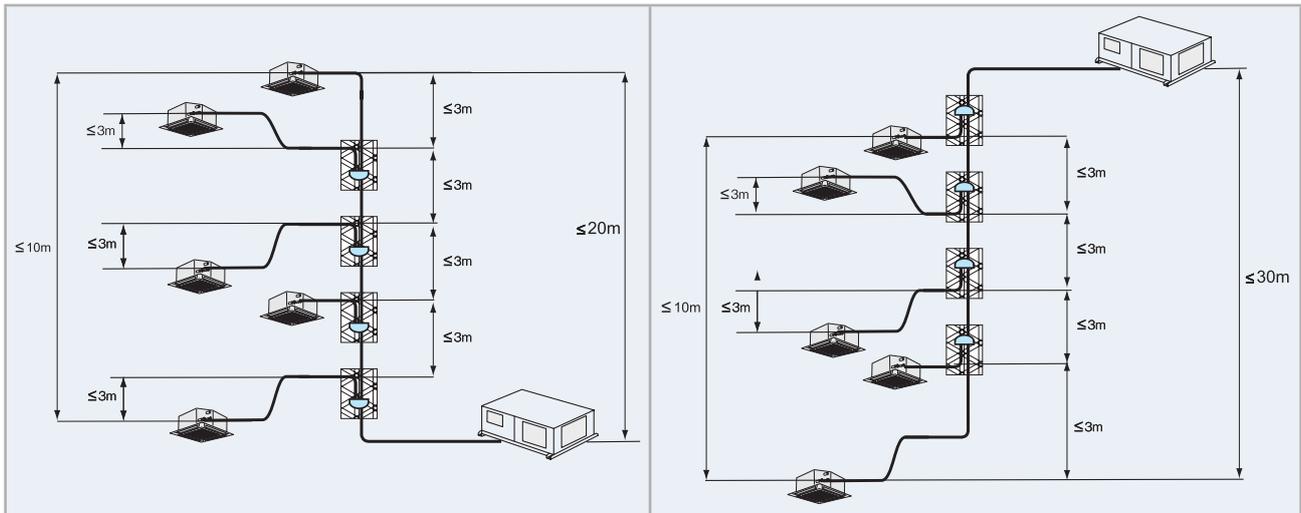

i **NOTE**

All pictures are shown as an example.

3.3.4 Combinations of piping size and piping length

Liquid	Refrigerant piping length between RASC unit and the farthest indoor unit (m)														
	Ø6.35		Ø9.52					Ø12.70				Ø15.88			
Gas	Ø15.88	Ø19.05	Ø12.70	Ø15.88	Ø19.05	Ø22.20	Ø25.40	Ø15.88	Ø19.05	Ø22.20	Ø25.40	Ø28.58	Ø22.20	Ø25.40	Ø28.58
(4-6) HP	5 ⁽²⁾	5 ⁽²⁾	40 ⁽¹⁾	75	5 ⁽⁴⁾	-	-	30 ⁽³⁾	30 ⁽³⁾⁽⁴⁾	-	-	-	-	-	-
8 HP	-	-	-	-	50 ⁽¹⁾⁽⁴⁾⁽⁶⁾	50 ⁽¹⁾⁽⁶⁾	70 ⁽⁵⁾⁽⁶⁾	-	50 ⁽¹⁾⁽³⁾⁽⁴⁾	50 ⁽¹⁾⁽³⁾	100	-	50 ⁽¹⁾⁽³⁾	50 ⁽³⁾	-
10 HP	-	-	-	-	-	-	-	-	-	50 ⁽¹⁾	100	50	50 ⁽¹⁾⁽³⁾	50 ⁽³⁾	50 ⁽³⁾

(1). Reducing gas pipe size will reduce cooling capacity due to larger pressure loss in gas piping and narrow operation range.

(2). Reducing liquid pipe size will narrow operation range due to the indoor unit relation with expansion valve capacity. In these cases, set the DSW2-1 to ON position.

(3). Increasing liquid pipe size will require additional refrigerant charge.

(4). When using Ø19.05 gas pipe (soft-annealed), please switch ON DSW2-4# in the RASC Unit PCB.

(5). In case that pipe length exceeds 70m in 8HP, please use a Ø12.7 pipe as a liquid pipe.

Standard


3.3.5 Refrigerant piping size and multikit/distributor selection

Select the piping connection sizes according to the following procedures:

- Between RASC unit and branch pipe: Select the same pipe connection size as the pipe size of the RASC unit.
- Between branch pipe and indoor unit: Select the same pipe connection size as the pipe size of the indoor unit.

◆ Header branch installation

1 indoor unit system

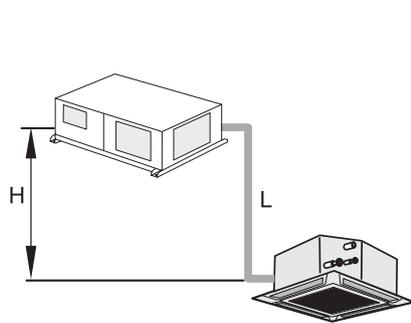


(mm)

RASC unit	Pipe size (L)	
	Gas	Liquid
(4-6) HP	Ø15.88	Ø9.52
8 HP (*)	Ø25.4	Ø9.52
10 HP (**)	Ø25.4	Ø12.7

(*) Indoor unit RPI-8.0HP supplied with one adapter:
 • Gas pipe adapter: Ø19.05 to Ø25.4

(**) Indoor unit RPI-10.0HP supplied with two adapters:
 • Gas pipe adapter: Ø22.2 to Ø25.4
 • Liquid pipe adapter: Ø9.52 to Ø12.7

2 indoor units system

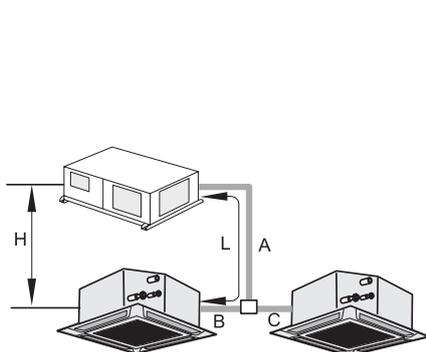

(mm)

RASC unit	Pipe size (A)		Multi-kit (**)	
	Gas	Liquid	TE option	TW option
4 HP	Ø15.88	Ø9.52	TE-04N1	TW-52AN
(5/6) HP	Ø15.88	Ø9.52	TE-56N1	TW-52AN
8 HP	Ø25.4	Ø9.52 (*)	TE-08N (***)	TW-102AN (***)
10 HP	Ø25.4	Ø12.7	TE-10N	TW-102AN


• (*): In case that pipe length exceeds 70m in 8 HP, please use a Ø12.7 pipe as a liquid pipe, with its respective multi-kit.
 • (**): In case of combinations with 8.0HP or 10.0HP indoor units, install a line branch system with multi-kit E-162SN3.
 • (***): In combinations with indoor units of 2.0HP or less, use the multi-kits TE-56N1 or TW-52AN for the liquid refrigerant pipe.
 • The dimensions for TE and TW multi-kits are different. Refer to the Indoor units' Technical Catalogue in order to check the dimensions.

(mm)

Indoor unit capacity after branch	Pipe size (B, C)	
	Gas	Liquid
(0.8-1.5) HP	Ø12.7	Ø6.35
(1.8/2.0) HP	Ø15.88	Ø6.35
(2.3-6.0) HP	Ø15.88	Ø9.52
8.0 HP	Ø19.05	Ø9.52
10.0 HP	Ø22.20	Ø9.52



3 indoor units system

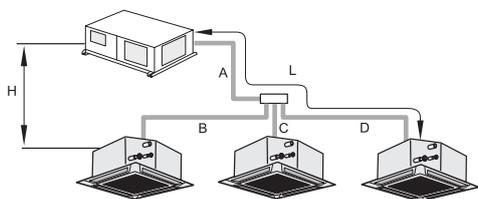


RASC unit	(mm)		Multi-kit (**)	
	Pipe Size (A)		TRE option	TG option
	Gas	Liquid		
(4-6) HP	Ø15.88	Ø9.52	TRE-46N1	TG-53AN
8 HP	Ø25.4	Ø9.52 (*)	TRE-812N1	TG-103AN
10 HP	Ø25.4	Ø12.7	TRE-812N1 (**)	TG-103AN (**)

- (*): In case that pipe length (A+B or A+C or A+D) exceeds 70m in 8 HP, please use a Ø12.7 pipe as a liquid pipe.
- (**): In case of combinations with 8.0HP or 10.0HP indoor units, install a line branch system with multi-kits E-162SN3 and E-102SN3.
- The dimensions for TRE and TG multi-kits are different. Refer to the Indoor units' Technical Catalogue in order to check the dimensions.

Indoor unit capacity after branch	(mm)	
	Pipe size (B, C)	
	Gas	Liquid
(0.8-1.5) HP	Ø12.7	Ø6.35
(1.8/2.0) HP	Ø15.88	Ø6.35
(2.3-6.0) HP	Ø15.88	Ø9.52
8.0 HP	Ø19.05	Ø9.52
10.0 HP	Ø22.20	Ø9.52

4 indoor units system

• **Case a)**

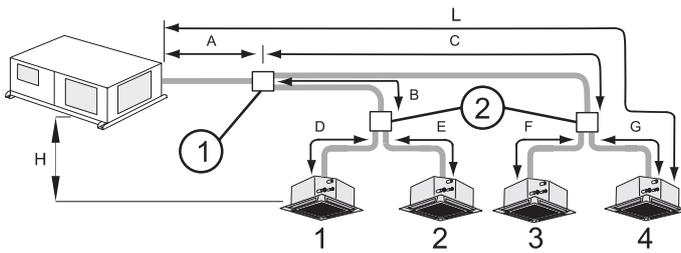

NOTE

If the capacity ratio between IU group 1+2 and 3+4 is higher than 60/40%, install a line branch system or contact with your Hitachi dealer.

RASC unit	Pipe Size (A)		Multi-kit ①	
	Gas	Liquid	TE option	TW option
	4 HP	Ø15.88	Ø9.52	TE-04N1
(5/6) HP	Ø15.88	Ø9.52	TE-56N1	TW-52AN
8 HP	Ø25.4	Ø9.52 (*)	TE-08N	TW-102AN
10 HP	Ø25.4	Ø12.7	TE-10N	TW-102AN

(*) : In case that pipe length (A+B+(C or D) or A+C+(F or G)) exceeds 70m in 8 HP, please use a Ø12.7 pipe as a liquid pipe.


The dimensions for TRE and TW multi-kits are different. Refer to the Indoor units' Technical Catalogue in order to check the dimensions.

Total indoor unit capacity after first branch (1+2) or (3+4)	Pipe Size (B,C)		Multi-kit ②	
	Gas	Liquid	TE option	TW option
	(0.8-1.5) HP	Ø12.7	Ø6.35	TE-03N1
(1.8/2.0) HP	Ø15.88	Ø6.35	TE-03N1	TW-52AN
≥ 2.3 HP	Ø15.88	Ø9.52	<4HP: TE-03N1 =4HP: TE-04N1 ≥5HP: TE-56N1	TW-52AN

Indoor unit capacity	Pipe Size (D,E,F,G)	
	Gas	Liquid
(0.8-1.5) HP	Ø12.7	Ø6.35
(1.8/2.0) HP	Ø15.88	Ø6.35
≥ 2.3HP	Ø9.52	Ø6.35

Connections including 8.0HP or 10.0HP indoor units are not possible.

• **Case b)**

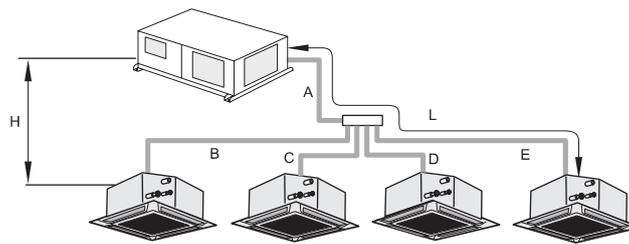


RASC unit	Pipe Size (A)		Multi-kit
	Gas	Liquid	
	8 HP	Ø25.4	
10 HP	Ø25.4	Ø12.7	QE-812N1

(*) : In case that pipe length (A+B or A+C or A+D or A+E) exceeds 70m in 8 HP, please use a Ø12.7 pipe as a liquid pipe.

Indoor unit capacity	Pipe Size (B,C,D,E)	
	Gas	Liquid
(0.8-1.5) HP	Ø12.7	Ø6.35
(1.8/2.0) HP	Ø15.88	Ø6.35
≥ 2.3HP	Ø15.88	Ø9.52

Connections including 8.0HP or 10.0HP indoor units are not possible.

◆ **Line branch installation**

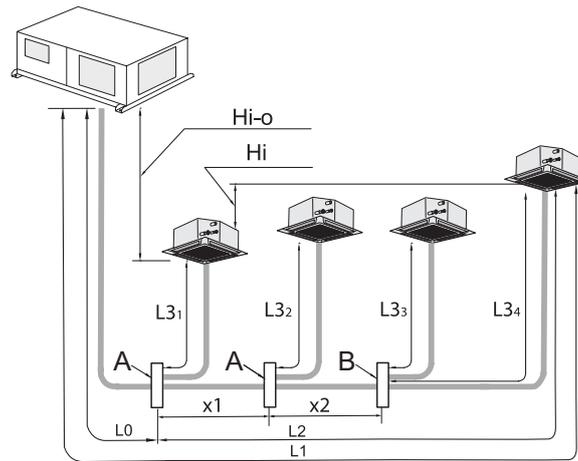

(mm)

RASC unit	Pipe Size (L0,x1,x2)		Multi-kit model A	Multi-kit model B
	Gas	Liquid		
(4-6) HP	Ø15.88	Ø9.52	E-102SN3	E-102SN3
8 HP	Ø25.4	Ø9.52 (*)	E-162SN3	E-102SN3
10 HP	Ø25.4	Ø12.7	E-162SN3	E-102SN3

(*) : In case that pipe length between RASC unit and the farthest indoor unit exceeds 70m in 8 HP, please use a Ø12.7 pipe as a liquid pipe.

(mm)

Indoor unit capacity	Pipe Size (L3)	
	Gas	Liquid
(0.8-1.5) HP	Ø12.7	Ø6.35
(1.8/2.0) HP	Ø15.88	Ø6.35
(2.3-6.0) HP	Ø15.88	Ø9.52
8.0 HP	Ø19.05	Ø9.52
10.0 HP (*)	Ø22.20	Ø9.52

i **NOTE**

(*) : In combinations with 10.0HP indoor units, only one of the two connections of the E-102SN3 multi-kit admits the Ø22.20 mm diameter corresponding to the gas pipe of the 10.0HP indoor unit. Please take this restriction into account in case that the installation requires the connection of gas piping of 10.0HP indoor units.

3.3.6 Considerations when installing distributors

1 Install the Distributor supplied by HITACHI on request.

A tee can not be installed instead of a branch pipe.


Sample: Twin System



2 Installing the distributor

Fix the branch pipe horizontally to the pillar, wall or ceiling. Piping must not be fixed rigidly to the wall as thermal expansion and contraction can cause pipe fracture.

Sample: Twin System

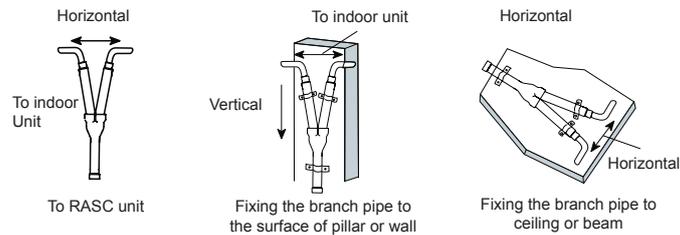


i **NOTE**


Fix the piping from outside of insulation or inserting absorber between the pipe and a fixing metal.

3 Correct position of twin distributor (available also for quad installation).

- This is the correct position.

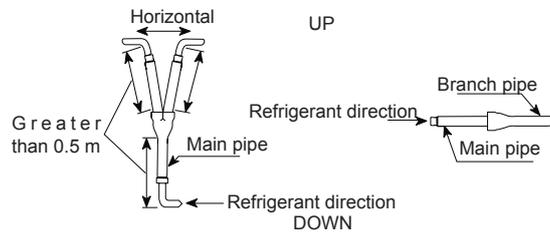


This is wrong position.

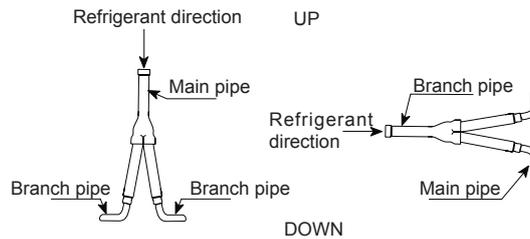

4 Correct position of Triple/Quad distributor.

- Install the header horizontally

Sample: Quad Branch pipe

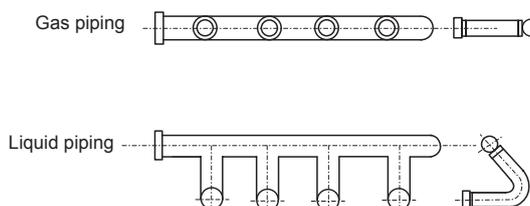

3.4 Refrigerant charge

3.4.1 Refrigerant charge amount

Although refrigerant has been charged into this unit, the adequate refrigerant charge depends on the piping length.

- The adequate refrigerant quantity should be determined according to the following procedure.
- Record the adequate refrigerant quantity in order to facilitate maintenance and servicing activities.



CAUTION

- *When charging or removing refrigerant, measure the amount precisely. Overcharging or undercharging of refrigerant may cause compressor problems.*
- *In case of actual piping length less than 5 m, consult your distributor.*

◆ Refrigerant charge before shipment (W_0 (kg))

W_0 is the RASC unit refrigerant charge before shipment explained before, and it's shown in the following table:

Model	Refrigerant charge before shipment (W_0 (kg))	Additional refrigerant charge (P (g/m))	Maximum additional charge (kg)
RASC-4HNPE	4.1	60	3.9
RASC-5HNPE	4.2	60	3.9
RASC-6HNPE	4.2	60	3.9
RASC-8HNPE	5.7	(1)	6.3
RASC-10HNPE	6.2	(1)	8.1

(1): Needs to be calculated.

◆ Calculation method for the additional refrigerant charge

Calculate the additional refrigerant charge amount according to the following steps:

Step 1: Additional refrigerant charge calculation for liquid piping (W_1 (kg))

RASC units have been charged with refrigerant for 30 m of actual piping length. In systems with longer actual piping length, an additional refrigerant charge is required.

For RASC-(4-6)HNPE units

Use the following formula:

$$W_1 = (L-30) \times P$$

L: Total piping length (m)

P: Additional refrigerant charge (kg/m) (Refer to the "[Refrigerant charge before shipment \(\$W_0\$ \(kg\)\)](#)" section)

For RASC-(8/10)HNPE units

The additional refrigerant charge for **RASC-(8/10)HNPE** units must be calculated by multiplying the total piping length of each diameter per its calculation factor according to the following table. The result is the additional refrigerant charge for liquid piping W_1 .

Pipe size (mm)	Additional refrigerant charge factor (kg/m)
Ø15.88	x 0.19
Ø12.7	x 0.12
Ø9.52	x 0.065
Ø6.35	x 0.065 (*)

(*): For RASC-(8/10)HNPE units, add 0.030 kg/m (instead of 0.065 kg/m) when there are 5 or more indoor units connected to the RASC unit.

Step 2: Additional refrigerant charge calculation for indoor unit (W₂ (kg))

When the RASC unit is combined with indoor units RPI-(8/10)HP, an additional refrigerant charge is required (W₂) = 1 kg/unit. For indoor units lower than 8 HP, an additional refrigerant charge is not needed.

Indoor unit capacity	Additional refrigerant charge (W ₂ (kg))
≥ 8 HP	1
< 8 HP	0

Step 3: Calculation of total additional refrigerant charge (W (kg))

For RASC-(4-6)HNPE units

Put weight W₁ and W₂ calculated in step 1 and step 2 into the following formula:

W = W₁ + W₂					
System example (W) =		+		=	kg

For RASC-(8/10)HNPE units

In case of RASC-(8/10)HNPE units, the following formula must be used:

W = W₁ + W₂ - C					
System example (W) =		+		-	kg

C: Compensation value (kg) (Refer to the following table)

Model	Compensation value (C (kg))
RASC-8HNPE	1.6
RASC-10HNPE	2.0

CAUTION

Do not exceed the allowed maximum additional charge..

Step 4: Total refrigerant charge of the system (W_{TOT} (kg))

The total refrigerant charge of this system is calculated by the following formula:

W_{TOT} = W + W₀					
System example (W _{TOT}) =		+		=	kg

Finally, record the refrigerant charge quantity in the F-Gas label in order to facilitate maintenance and servicing activities.

(EN) This equipment contains fluorinated greenhouse gases covered by the Kyoto protocol.
 (ES) Este equipo contiene gases fluorados de efecto invernadero contemplados en el protocolo de Kyoto.
 (DE) Diese Anlage enthält im Rahmen des Kyoto Protokolls genannte, fluorierte Treibhausgase.
 (FR) Cet appareil contient des gaz fluorés à effet de serre visés par le protocole de Kyoto.
 (IT) Questa apparecchiatura contiene gas fluorati ad effetto serra che rientrano nel protocollo di Kyoto.
 (PT) Este equipamento contém gases fluorados que provocam efeito de estufa, segundo o protocolo de Kyoto.
 (DA) Dette udstyr indeholder fluorholdige drivhusgasser, der er omfattet af Kyoto-protokollen.
 (NL) Deze apparatuur bevat gefluoreerde broeikasgassen die vallen onder het protocol van Kyoto.
 (SV) Denna anläggning innehåller fluorhaltiga växthusgaser som regleras av Kyoto-protokollet.
 (EL) Ο παρών εξοπλισμός περιέχει φθοριωμένα αέρια θερμοκηπίου τα οποία αναφέρονται στο πρωτόκολλο του Κιότο

Do not vent R410A into the atmosphere.
 No descargue el R410A en la atmósfera. Não efectue a ventilação do R410A para a atmosfera.
 Lassen sie R410A nicht in die Luft entweichen. Slip ikke R410A ud i atmosfæren.
 Ne laissez pas le R410A se répandre dans l'atmosphère. Laat geen R410A ontsnappen in de atmosfeer.
 Non scaricare R410A nell'atmosfera. Μην ελιβερώσετε το R410A στην ατμόσφαιρα.

REFRIGERANT INFORMATION - INFORMACIÓN SOBRE EL REFRIGERANTE - KÜHLMITTELINFORMATION
 INFORMATION CONCERNANT LE FLUIDE FRIGORIGÈNE - INFORMAZIONI RELATIVE AL REFRIGERANTE
 INFORMAÇÕES SOBRE O REFRIGERANTE - OPLYSNINGER OM KØLEMIDDEL - INFORMATIE OVER KOELSTOF
 KYLNINGSSINFORMATION - ΣΤΟΙΧΕΙΑ ΨΥΚΤΙΚΟΥ ΜΕΣΟΥ

Refrigerant - Refrigérant - Kühlmittel - Fluide frigorigène - Køllemiddel - Koelstof - Kyltings - Μέσος **R410A**

Factory Charge - Carga de fábrica - Werksbeállítás - Charge en usine
 (Ποσό φόρτισης εργοστασίου) (Carga de fábrica) (Fabrieks vullings) (Carga de fábrica)
 Quantity/gas charged - Carga de fábrica - Pályfeltt fra fabrikken - In fabriek gevould
 (Ποσότητα αερίου φόρτισης εργοστασίου) (Carga de fábrica) (In fabriek gevuld)
 Pályföltöltés from the factory - Εργοστασιακή πλήρωση (In fabriek gevuld)

Additional Charge - Carga adicional - Zusätzliche Füllmenge - Charge supplémentaire
 Carica aggiuntiva - Carga adicional - Ekstra påfyldning - Extra vulling - terligare påfyllning
 Πρόσθετη πλήρωση

Total Charge - Carga Total - Gesamtfüllmenge - Charge totale - Carica totale
 Carga total - Samlet påfyldning - Totale vulling - Total påfyllning - Συνολική πλήρωση

W₀ (R410A) kg
 W_{TOT} - W₀ kg
 W_{TOT} kg



3.4.2 Refrigerant charge procedure


⚠ CAUTION

- Use refrigerant R410A in the refrigerant cycle. Do not charge oxygen, acetylene or other flammable and poisonous gases into the refrigerant cycle when performing a leakage test or an air-tight test.
- These types of gases are extremely dangerous and can cause an explosion. It is recommended that compressed air, nitrogen or refrigerant be used for these types of tests.
- Check to ensure that no pressure exists inside the stop valve before removing the flange.

◆ Evacuation and refrigerant charge

Evacuation and refrigerant charging procedure should be performed according to the following instructions.

- The stop valve has been closed before shipment. However, make sure that the stop valves are closed completely.
- Connect the indoor unit and the RASC unit with field-supplied refrigerant piping.
- Connect the gauge manifold using charging hoses with a vacuum pump or a nitrogen cylinder to the check joints of the liquid line and the gas line stop valve.
- Check for any gas leakage at the flare nut connection, by using nitrogen gas to increase the pressure at 4.15 MPa inside of the field-supplied piping.
- Operate the vacuum pump for 1 to 2 hours until the pressure decreases lower than a pressure of 756 mmHg in vacuum.
- For charging refrigerant, connect the gauge manifold using charging hoses with a refrigerant charging cylinder to the check joint of the liquid line stop valve.
- Charge the proper quantity of refrigerant according to the piping length (Calculate the quantity of the refrigerant charge).
- Fully open the gas line stop valve, and slightly open the liquid line stop valve.
- Charge refrigerant by opening the gauge manifold valve.
- Charge the required refrigerant within the difference range of $\pm 0.5\text{kg}$ by operating the system in cooling.
- Fully open the liquid line stop valve after completing refrigerant charge.
- Continue cooling operation for more than 10 minutes to circulate the refrigerant.
- Remove the "close" plate from the stop valve and hook the attached "open" plate at the stop valve.

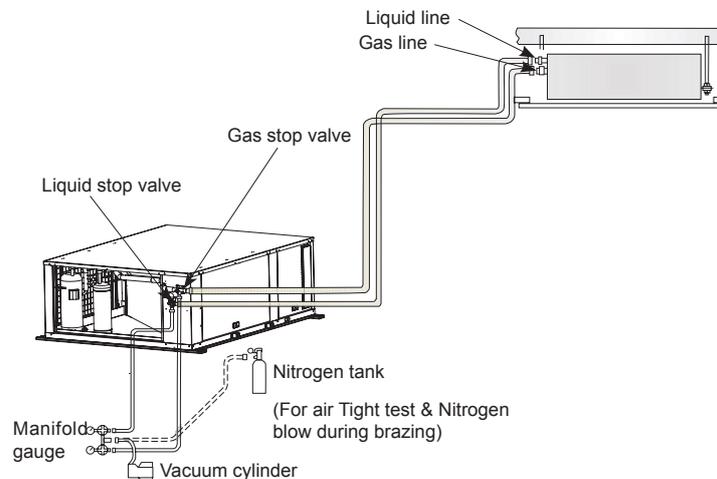

Example of Evacuation and Refrigerant Charge for RASC unit.

i NOTE

- Charge the refrigerant correctly. Overcharge and insufficient charge of the refrigerant may cause the compressor failure.
- Insulate the unions and flare-nuts at the piping connection part completely.
- Insulate the liquid pipe for prevention of the capacity decrease according to the ambient air conditions and the dewing on the pipe surface by the low pressure.
- Check to ensure that there is no gas leakage. When large amount of the refrigerant leaks, the troubles as follows may occur:
 - Oxygen deficiency
 - Harmful gas generation due to chemical reaction with fire.
- Use thick gloves to protect your hands from liquid refrigerant injuries when handling refrigerant.

CAUTION

Check for refrigerant leakage thoroughly. In case that a large amount of refrigerant is leaked, it may cause difficulty to breathe or the emission of harmful gases if fire is lit up in the room. An excess or a shortage of refrigerant is the main cause of trouble with the units.

3.4.3 Caution of the pressure by check joint

When the pressure is measured, use the check joint of gas stop valve (A), and use the check joint of liquid piping (B) in the figure below.


At that time, connect the pressure gauge according to the following table because of high pressure side and low pressure side changes by operation mode.

	Cooling Operation	Heating Operation
Check Joint for Gas Stop Valve "A"	Low Pressure	High Pressure
Check Joint for Piping "B"	Exclusive for Vacuum Pump and Refrigerant Charge	
Check Joint for Liquid Stop Valve "C"	High Pressure	Low Pressure

3

NOTE

Be careful that refrigerant and oil do not splash to the electrical parts at removing the charge hoses.

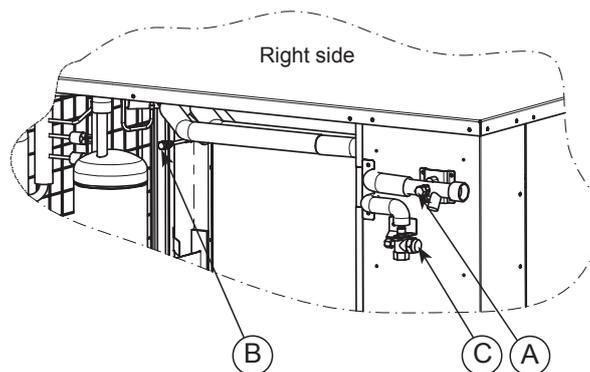

3.4.4 Pump down refrigerant

When the refrigerant should be collected into the RASC unit due to indoor/RASC unit relocation, collect the refrigerant as follows:

- 1 Attach the manifold gauge to the gas stop valve and the liquid stop valve.
- 2 Turn ON the power source.
- 3 Set the DSW1-1 pin of the RASC unit PCB at the "ON" side for cooling operation. Close the liquid stop valve and collect the refrigerant.
- 4 When the pressure at lower pressure side (gas stop valve) indicates -0.01 MPa (-100 mmHg), perform the following procedures immediately.
 - Close the gas stop valve.
 - Set the DSW1-1 pin at the "OFF" side (To stop the unit operation).

3.5 Caution in case of refrigerant leakage

The installers and those responsible for drafting the specifications are obliged to comply with local safety codes and regulations in the case of refrigerant leakage.

3.5.1 Maximum permitted concentration of HFCs

The refrigerant R410A, charged in the RASC series system, is an incombustible and non-toxic gas. However, if leakage occurs and gas fills a room, it may cause suffocation.

The maximum permissible concentration of HFC gas, R410A in air is 0.44 kg/m³, according to EN378-1.

Therefore, some effective measure must be taken to lower the R410A concentration in air below 0.44 kg/ m³, in case of leakage.

3.5.2 Calculation of refrigerant concentration

- 1 Calculate the total quantity of refrigerant R (kg) charged in the system by connecting all the indoor units in the rooms to be air-conditioned.
- 2 Calculate the room volume V (m³) of each room.
- 3 Calculate the refrigerant concentration C (kg/m³) of the room according to the following equation:

$C = R / V$	R: Total quantity of refrigerant charged (kg)
	V: Room volume (m ³)
	C: Refrigerant concentration (=0.44* kg/m ³ for R410A)

3.5.3 Countermeasure for refrigerant leakage

The facility must have the following features in case of a refrigerant leakage occurs:


- 1 Provide a shutterless opening which will allow fresh air to circulate into the room.
- 2 Provide a doorless opening of 0.15% or more size to the floor area.
- 3 There must be a ventilator fan connected to a gas leak detector, with a ventilator capacity of 0.4 m³/min or higher per Japanese refrigeration ton (= compressor displacement volume / 5.7m³/h) of the air conditioning system using the refrigerant.

Model	Tonnes
RASC-(4-6)HNPE	2.27
RASC-8HNPE	3.16
RASC-10HNPE	4.11

- 4 Pay a special attention to the place, such as a basement, etc., where refrigerant can stay, since refrigerant is heavier than air.

(See the example of the following page)

- General example of application

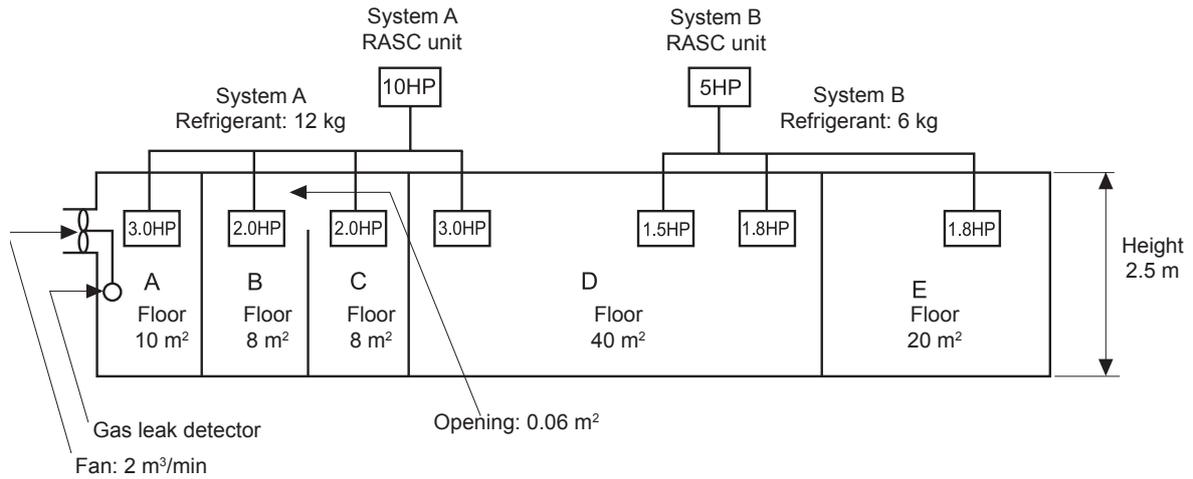

Room	R (kg)	V (m ³)	C (kg/m ³)	Countermeasure
A	12	25	0.48	2 m ³ /min fan linked with gas leak detector
B	12	20	0.60	0.06 m ² aprox. opening
C	12	20	0.60	0.06 m ² aprox. opening
B + C	12	40	0.30	-
D	18	100	0.18	-
E	6	50	0.12	-



3.6 Compatibility with the piping of current installations where R22 or R407C is used

This chapter describes the works in piping for compatibility with the piping of current installations where R22 or R407C is used. (Contact your Hitachi dealer for specific support on your installation).

The new RASC-HNPE series is compatible with those installations that have been operating with R22 or R407C. This allows installing the RASC units, which operate with R410A, without having to change piping installation.

3.6.1 Installation procedure for existing pipes



NOTE

- For systems with several indoor units, branch pipes shall be changed to Hitachi-specified model for RASC-HNPE series (R410A).
- Existing RASC and indoor units for R22 or R407C can not be used.

1 Recover refrigerant (R22 or R407C):

a. Compressor of the existing unit is working

Pump down. Perform refrigerant recovery operation of existing air conditioner without stopping during 30 minutes in cooling mode.

b. Compressor of the existing unit is not working

Recover refrigerant with a refrigerant recovery device.

2 Remove existing air conditioning system (RASC and indoor unit).

3 For the existing pipes, proceed with one of the following operations:

a. Clean the existing piping.

b. Install renewal kit (optional accessory).

4 Install the new unit of the RASC series.

5 Vacuum process.

6 Refrigerant charge (R410A)

Follow the normal process described in order to determine whether additional refrigerant charge is necessary.



CAUTION

Recovering R22 and R407C is mandatory to remove an existing air conditioner and piping. Do not vent into the atmosphere.

◆ Conditions to use existing pipes with cleaning process

After the piping cleaning process, follow the normal installation process as if they corresponded to a new installation, considering all the restrictions and limitations. Special attention is required with regard to the piping thickness for R410A.

◆ Conditions to use existing pipes without cleaning process

A Renewal Kit (sold separately) can be used even in cases where there is a history of compressor failure, allowing diversion to existing piping without cleaning. Thus, the burden of installation works at renewal can be reduced.

Existing pipes can be used without cleaning if the following conditions are satisfied:

- 1 The renewal kit shall be installed. (mandatory)
- 2 Maximum piping length shall be 50 m (If the pipe is longer than 50m, existing pipes can be used if cleaning is performed).
- 3 The capacity of the new unit must be equivalent to the one previously installed.
- 4 Existing pipes shall be free of corrosion, cracks, scratches or deformations.
- 5 Dirt inside the pipes shall not be noticeable.
- 6 The specifications of piping, flare nuts, gaskets, etc. shall be compliant.
- 7 Flare shall be reprocessed.
- 8 Piping airtightness and vacuuming shall be ensured in the same way as with new piping.

3.6.2 When the existing air conditioner is a product of another manufacturer

Existing pipes made by other manufacturer can also be used if the following conditions are satisfied:

- 1 For systems with several indoor units, branch pipes shall be changed to the model specified by Hitachi.
- 2 Pipes shall be cleaned.

3.6.3 Permissible range for existing air-conditioning pipes

◆ Pipe length in the case of “without cleaning process”

Liquid (mm)	Ø6.35		Ø9.52					Ø12.70					Ø15.88		
Thickness (mm)	0.8		0.8					0.8					1.0		
Gas (mm)	Ø15.88	Ø19.05	Ø12.70	Ø15.88	Ø19.05	Ø22.20	Ø25.40	Ø15.88	Ø19.05	Ø22.20	Ø25.40	Ø28.58	Ø22.20	Ø25.40	Ø28.58
Thickness (mm)	1.0	1.0	0.8	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0
Material soft-annealed	x	x	x	x	x			x	x						
Material drawn		x			x	x	x		x	x	x	x	x	x	x
Performance capacity	(m)														
(4-6) HP	5 ⁽²⁾	5 ⁽²⁾	40 ⁽¹⁾	50	50 ⁽⁴⁾	-	-	30 ⁽³⁾	30 ⁽³⁾⁽⁴⁾	-	-	-	-	-	-
8 HP	-	-	-	-	50 ⁽¹⁾⁽⁴⁾	50 ⁽¹⁾	50	-	50 ⁽¹⁾⁽³⁾⁽⁴⁾	50 ⁽¹⁾⁽³⁾	50 ⁽³⁾	-	50 ⁽¹⁾⁽³⁾	50 ⁽³⁾	-
10 HP	-	-	-	-	-	-	-	-	-	50 ⁽¹⁾	50	50	50 ⁽¹⁾⁽³⁾	50 ⁽³⁾	50 ⁽³⁾

(1). Reducing gas pipe size will reduce cooling capacity due to larger pressure loss in gas piping and narrow operation range.

(2). Reducing liquid pipe size will narrow operation range due to the indoor unit relation with expansion valve capacity. In these cases, set the DSW2-1 to ON position.

(3). Increasing liquid pipe size will require additional refrigerant charge.

(4). When using Ø19.05 gas pipe (soft-annealed), please switch ON DSW2-4# in the RASC Unit PCB.


Standard

⚠ CAUTION

In case that its thickness is less than the R410A piping specifications, set DSW2, pin 4 ON. With this setting the control system adjusts the pressure in order to avoid damage to the existing pipe for R22.

3.6.4 Selection of the renewal kit model

Hitachi offers a renewal kit as an accessory.



◆ Recommended renewal kit

RASC unit	Renewal kit
	External attachment to RASC unit [Short pipe (local) + Kit + existing piping]
RASC-(4-6)HNPE	TRF-NP160S
RASC-8HNPE	(*)
RASC-10HNPE	(*)

ⓘ NOTE

(*): The availability of the renewal kit for RASC-(8/10)HNPE is to be confirmed.


⚠ CAUTION

In case that its thickness is less than the R410A piping specifications, set DSW2, pin 4 ON. With this setting the control system adjusts the pressure in order to avoid damage to the existing pipe for R22.

◆ **Details of renewal kit**

Pipe	Model	TRF-NP160S
For liquid pipe		
For gas pipe		

◆ **Renewal kit installation (Example)**

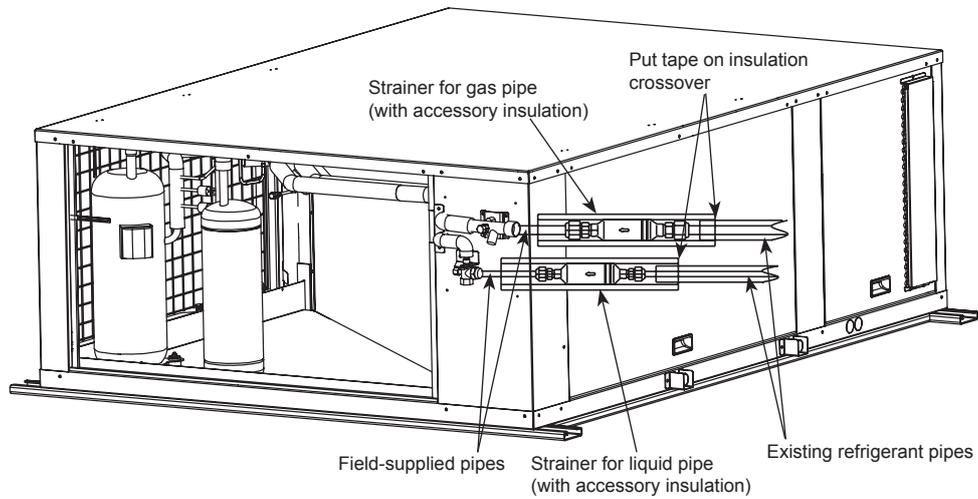


3.7 Drainage and drain pipe installation

◆ Provision regarding installation place


Drain water sometimes turns to ice. Therefore, avoid draining in a transit area, since it may become slippery.

Install the unit making sure that the drain outlet part is lower (>25mm / <30mm) than the opposite side in order to avoid incorrect drain discharge.

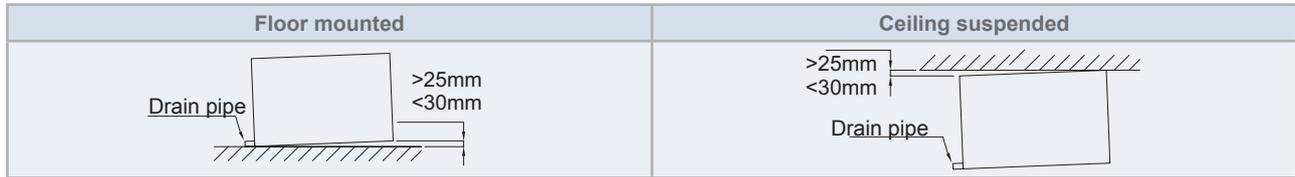

◆ Drain pipe location

Drain pipe location is indicated in the figures below:

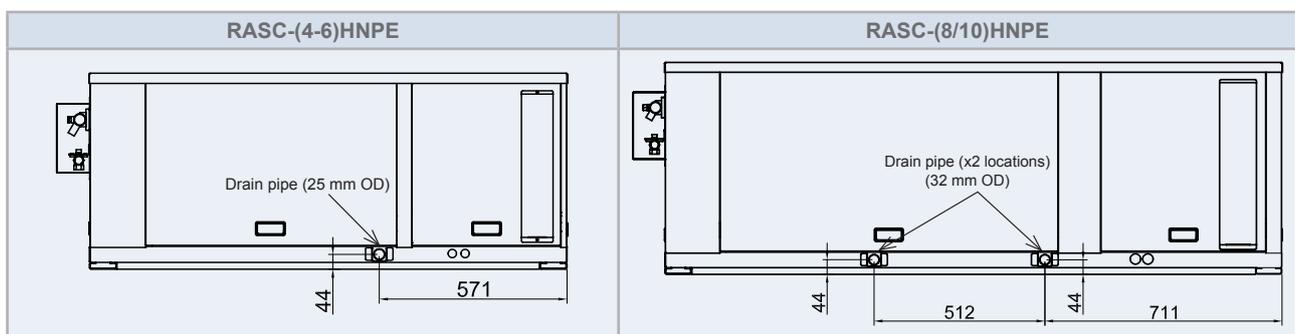

◆ Drain pipe connection

- It is mandatory to connect a siphon as shown in the figure below. Pay special attention when connecting it to the unit (proper installation work is needed in order to guarantee matching of connection pipes).



- Fasten the siphon to the drain hose with an adhesive and a field-supplied clamp.
- Prepare a draining pipe of 25 mm OD (outer diameter) for RASC-(4-6)HNPE and 32 mm OD for RASC-(8/10)HNPE for the draining line which shall be bent with a down slope > 2 %.
- Check to ensure that the water drains smoothly by pouring some water into the drain pan.
- Check to ensure that the water does not remain in the drain pan.
- Check the drain connections periodically (once a year), to avoid occurrence of water leakage.

⚠ CAUTION

- If the unit is installed in a cold area, the drain water may freeze. Install an electric heater (field-supplied) at the drain connection.
- Do not install the unit using vibration-proof springs or mounting springs.

4 . Electrical and control settings

Index

4.1. General check	50
4.2. System wiring diagram	51
4.3. Electrical connection of the RASC unit.....	52
4.3.1. Wiring size	52
4.3.2. Minimum requirements of the protection devices	52
4.4. Transmission wiring between RASC and indoor unit	53
4.5. Printed circuit board	54
4.5.1. RASC-(4-6)HNPE	54
4.5.2. RASC-(8-10)HNPE	55
4.6. Setting and function of DIP and RSW switches for RASC units.....	56
4.6.1. Location of DIP switches and RSW switches	56
4.6.2. Functions of dip switches and rotary switches	56
4.6.3. Jumper lead setting (JP1~6)	59
4.6.4. LED's indication	59
4.7. H-LINK II system	60
4.7.1. Application	60
4.7.2. Features	60
4.7.3. Specifications	60
4.7.4. DIP Switch setting for multiple H-LINK system.....	61
4.7.5. Examples of the system of connection between H-LINK and H-LINK II units	62
4.7.6. Examples of H-LINK II system.....	63
4.8. Electrical wiring diagrams.....	65
4.8.1. RASC-(4-6)HNPE (3N~ 400V 50Hz).....	65
4.8.2. RASC-(8/10)HNPE (3N~ 400V 50Hz).....	66

4.1 General check

- 1 Ensure that the field-supplied electrical components (mains power switches, circuit breakers, wires, connectors and wire terminals) have been properly selected according to the electrical data indicated. Make sure that they comply with national and regional electrical codes.
- 2 Following the Council Directive 2004/108/EC(89/336/EEC), relating to electromagnetic compatibility, next table indicates: Maximum permissible system impedance Z_{max} at the interface point of the user's supply, in accordance with EN61000-3-11.

MODEL	Z_{max} (Ω)
RASC-4HNPE	-
RASC-5HNPE	-
RASC-6HNPE	-
RASC-8HNPE	-
RASC-10HNPE	-

- 3 Harmonics situation of each model regarding IEC 61000-3-2 and IEC 61000-3-12 is as follows:

MODELS SITUATION REGARDING IEC 61000-3-2 AND IEC 61000-3-12 Ssc "xx"	MODELS	Ssc "xx" (kVA)
Equipment complying with IEC 61000-3-12 (professional use)	RASC-4HNPE RASC-5HNPE RASC-6HNPE	-
This equipment complies with IEC 61000-3-12 provided that the short-circuit power Ssc is greater than or equal to xx (see Ssc column) at the interface point between the user's supply and the public system. It is the responsibility of the installer or user of the equipment to ensure, by consultation with the distribution network operator if necessary, that the equipment is connected only to a supply with a short-circuit power Ssc greater than or equal to xx (see Ssc column)	RASC-8HNPE RASC-10HNPE	3138

- 4 Check to ensure that the power supply voltage is within +/-10% of the rated voltage.
- 5 Check to ensure that power supply has an impedance low enough to warranty not reduce the starting voltage more than 85% of the rated voltage.
- 6 Check to ensure that the ground wire is connected.
- 7 Connect a fuse of specified capacity.



CAUTION

- Check to ensure that screws for terminal block are tightly tightened.
- Check to ensure that the indoor unit fan and the RASC fan have stopped before electrical wiring work or periodical check is performed.
- Protect the wires, drain pipe, electrical parts, from rats or other small animals. If not protected, rats may damage unprotected parts, and at the worst, a fire will occur.
- Wrap the accessory packing around the wires, and plug the wiring connection hole with the seal material to protect the product from any condensed water and insects.
- Tightly secure the wires with the cord clamp inside the indoor unit.
- Lead the wires through the knockout hole in the side cover when using conduit.
- Secure the cable of the remote control switch with the cord clamp inside the electrical box.
- Electrical wiring must comply with national and local codes. Contact your local authority in regards to standards, rules, regulations, etc.
- Check that the ground wire is securely connected.
- Connect a fuse of specified capacity.



DANGER

- Do not connect or adjust any wiring or connections unless the main power switch is OFF.
- Check that the earth wire is securely connected, tagged and locked in accordance with national and local codes.



NOTE

Check and test to ensure that if there is more than one source of power supply, that all are turned OFF.

4.2 System wiring diagram


Connect the units (RASC and indoor unit) according to the following electric diagram:

- Connect the operation wiring to the units in the same refrigerant cycle (The refrigerant piping and the control wiring should be connected to the same indoor units). If the refrigerant piping and the control wiring are connected to the units in the different refrigerant cycle, it may cause a abnormal operation.
- Use twist pair wire (more than 0.75 mm²) for operation wiring between RASC unit and indoor unit, and operation wiring between indoor units (H-Link connection). It can be also used shielded pair wiring. Shield shall be connected to earth only in one cable side.
- Use shielded wires for intermediate wiring to protect the units from noise obstacle at length of less than 300 m and size complied with local code.
- Do not use more than 3 cores for operation wiring (H-Link). Core sizes must be selected according to the national regulations.
- Open a hole near the connection hole of power source wiring when multiple RASC units are connected from one power source line.
- The recommended breaker sizes are shown in Table of electrical data and recommended Wiring, Breaker Size/1 RASC unit.
- In the case that a conduit tube for field-wiring is not used, fix rubber bushes with adhesive on the panel.

⚠ CAUTION

- All the field wiring and electrical components must comply with local codes.
- Pay attention to the connection of the operating line. Incorrect connection may cause the failure of PCB.

4

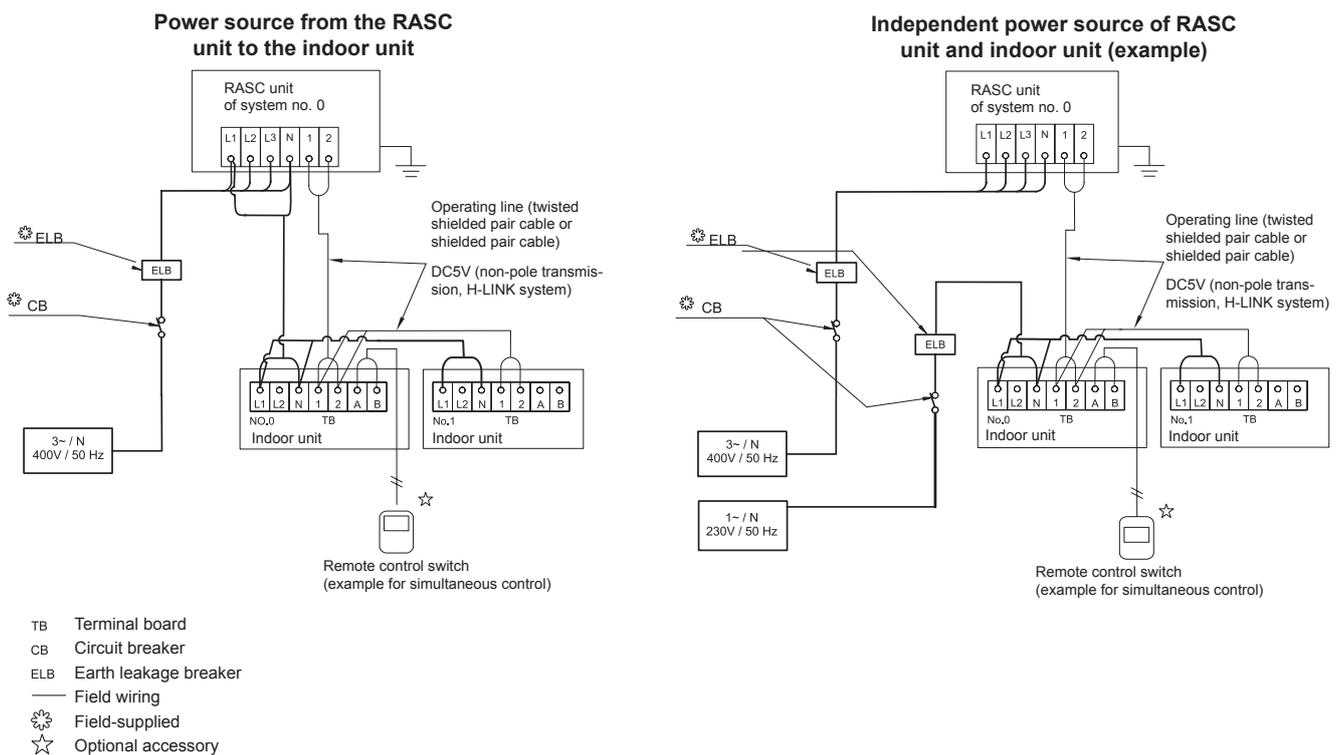

4.3 Electrical connection of the RASC unit

CAUTION

Check to ensure that the field supplied electrical components (mains power switches, circuit breakers, wires, connectors and wire terminals) have been properly selected according to the electrical data indicated on this chapter and they comply with national and local codes. If it is necessary, contact with your local authority in regards to standards, rules, regulations, etc.

4.3.1 Wiring size

Recommended minimum sizes for field provided wires:

Model	Power supply	Max. current (A)	Power supply cable size	Transmitting cable size
			EN60 335-1	EN60 335-1
RASC-4HNPE	3N~ 400V 50Hz	14.1	4 x 4.0mm ² + GND	2 x 0.75mm ²
RASC-5HNPE		14.1	4 x 4.0mm ² + GND	
RASC-6HNPE		16.0	4 x 4.0mm ² + GND	
RASC-8HNPE		24.7	4 x 6.0mm ² + GND	
RASC-10HNPE		24.7	4 x 6.0mm ² + GND	

NOTE

Use wires which are not lighter than the polychloroprene sheathed flexible cord (code designation 60245 IEC 57).

4.3.2 Minimum requirements of the protection devices

CAUTION

- Ensure specifically that there is an Earth Leakage Breaker (ELB) installed for the units (RASC and indoor unit).
- If the installation is already equipped with an Earth Leakage Breaker (ELB), ensure that its rated current is large enough to hold the current of the units (RASC and indoor).

NOTE

- Electric fuses can be used instead of magnetic Circuit Breakers (CB). In that case, select fuses with similar rated values as the CB.
- The Earth Leakage Breaker (ELB) mentioned on this manual is also commonly known as Residual Current Device (RCD) or Residual Current Circuit Breaker (RCCB).
- The Circuit Breakers (CB) are also known as Thermal-Magnetic Circuit Breakers or just Magnetic Circuit Breakers (MCB).

◆ Main switch protection


Select the main switches in according to the next table:

Model	Power source	Max. current (A)	CB (A)	ELB (no. poles/A/mA)
RASC-4HNPE	3N~ 400V 50Hz	14.1	20	4/40/30
RASC-5HNPE		14.1	20	
RASC-6HNPE		16.0	20	
RASC-8HNPE		24.7	30	
RASC-10HNPE		24.7	30	

ELB: Earth leakage breaker; CB: Circuit breaker

4.4 Transmission wiring between RASC and indoor unit

- The transmission is wired to terminals 1-2.
- The H-LINK II wiring system requires only two transmission cables that connect the indoor unit and the RASC unit.

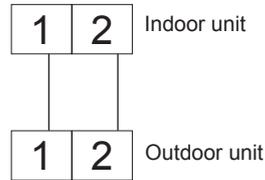


- Use twist pair wires (0.75 mm²) for operation wiring between RASC unit and indoor unit.
- The wiring must consist of 2-core wires (Do not use wire with more than 3 cores).
- Use shielded wires for intermediate wiring to protect the units from noise interference, with a length of less than 300m and a size in compliance with local codes.
- In the event that a conduit tube for field-wiring is not used, fix rubber bushes to the panel with adhesive.

CAUTION

Ensure that the transmission wiring is not wrongly connected to any live part that could be damaged the PCB.



4.5 Printed circuit board

4.5.1 RASC-(4-6)HNPE

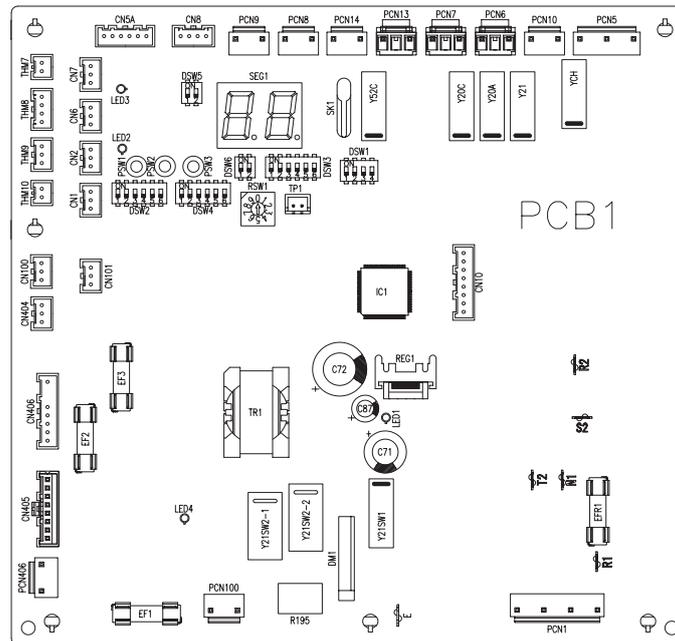

Connector indication		Switch indication		
PCN1	Power supply connector (1~ only)	DSW1	Test run	
R1,N1,R2, S2,T2	Power supply and reverse phase detection (3N~ only)	DSW2	Auxiliary function setting	
PCN5	Crankcase heater of compressor (oil)	DSW3	Capacity code	
PCN7	Solenoid valve	DSW4/RSW1	Refrigerant cycle number	
PCN8	High pressure switch protection, variable frequency driver, internal thermostat protection of the motor and float switch.	DSW5	End terminal resistance	
PCN9	Magnetic contactor for compressor and fan	DSW6	Simultaneous / individual operation	
PCN10	Low pressure switch protection	PSW1	Forced defrosting	
PCN14	Solenoid valve	PSW2	Checking mode (▽)	
PCN100	4-way solenoid valve	PSW3	Checking mode (△)	
PCN406	Power connection between PCB1 and DIP-IPM			
THM7	Outdoor air temperature thermistor	LED indication		
THM8	Pipe evaporation temperature thermistor	LED1	Red	Power source for the PCB
THM9	Compressor discharge temperature thermistor	LED2	Green	This LED indicates the transmission status between the indoor unit and the RCS
CN1	Input function	LED3	Yellow	This LED indicates the transmission status between the indoor unit and the RASC unit
CN2	Demand input	LED4	Red	Power source at 280V for the PCB
CN5A	Micro electronic expansion valve			
CN6	Transmission between PCB1 and DIP-IPM			
CN7	External output			
CN8	Transmission from RASC to indoor unit			
CN10	Line connection between PCB1 and PCB3			
CN100	Discharge pressure (Pd)			
CN404	Line connection between PCB1 and DIP-IPM			
EF1,2,3 EFR1	Power protection			

4.5.2 RASC-(8-10)HNPE

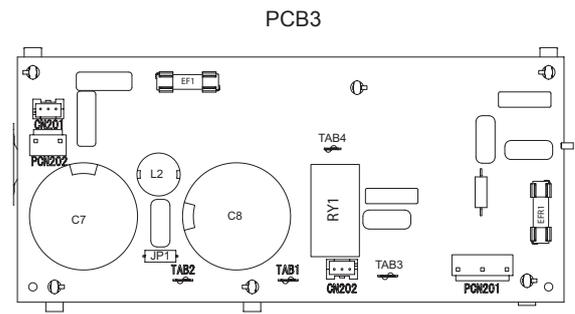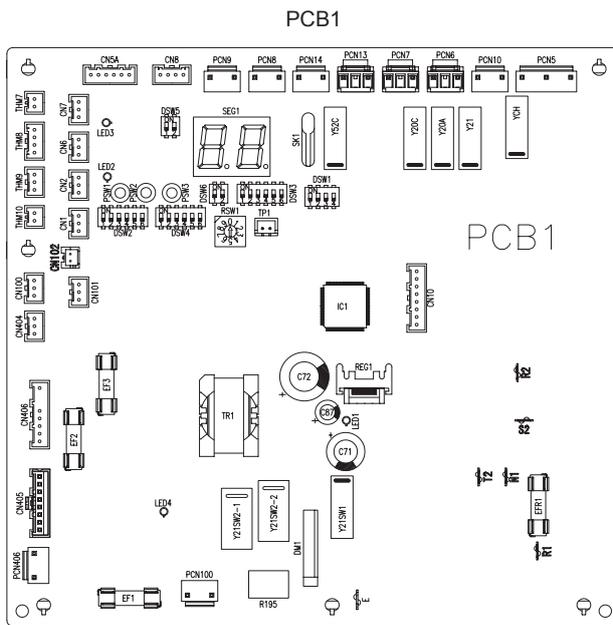

PCB1 Connector indication	
Connector	Name
R1,N1,R2, S2,T2	Power supply and reverse phase detection
PCN5	Crankcase heater of compressor (oil)
PCN7	Solenoid valve
PCN8	High pressure switch protection, variable frequency driver, internal thermostat protection of the motor and float switch.
PCN9	Magnetic contactor for compressor and fan
PCN10	Low pressure switch protection
PCN14	Solenoid valve
PCN100	4-way solenoid valve
PCN406	Power connection between PCB1 and PCB3
THM7	Outdoor air temperature thermistor
THM8	Pipe evaporation temperature thermistor
THM9	Compressor discharge temperature thermistor
CN1	Input function
CN2	Demand input
CN5A	Micro electronic expansion valve
CN6	Transmission between PCB1 and DIP-IPM
CN7	External output
CN8	Transmission from RASC to indoor unit
CN10	Line connection between PCB1 and PCB3
CN100	Discharge pressure (Pd)
CN102	Line connection between PCB1 and PCB3
CN404	Line connection between PCB1 and PCB3
EF1,2,3 EFR1	Power protection

PCB1 Switch indication	
Connector	Name
DSW1	Test run
DSW2	Auxiliary function setting
DSW3	Capacity code
DSW4/RSW1	Refrigerant cycle number
DSW5	End terminal resistance
DSW6	Simultaneous / individual operation
PSW1	Forced defrosting
PSW2	Checking mode (▽)
PSW3	Checking mode (△)


PCB1 LED indication		
LED	Colour	Name
LED1	Red	Power source for the PCB
LED2	Green	This LED indicates the transmission status between the indoor unit and the RCS
LED3	Yellow	This LED indicates the transmission status between the indoor unit and the RASC unit
LED4	Red	Power source at 280V for the PCB

PCB3 Connector indication	
Connector	Name
PCN201	Power supply
PCN202	Power connection between PCB3 and PCB1
CN201	Line connection between PCB3 and PCB1
CN202	Line connection between PCB3 and PCB1
EFR1	Power protection



4.6 Setting and function of DIP and RSW switches for RASC units

4.6.1 Location of DIP switches and RSW switches

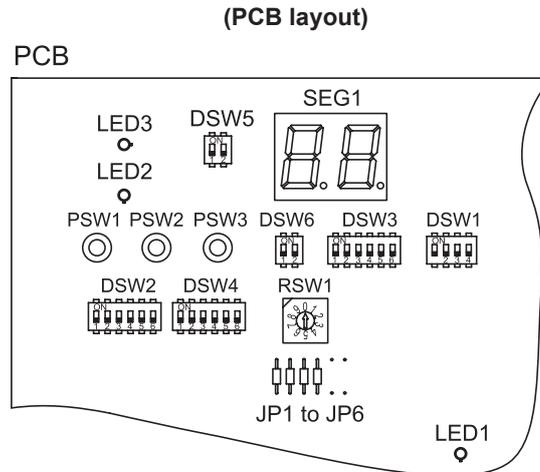

4.6.2 Functions of dip switches and rotary switches



NOTE

- The mark “■” indicates the dip switches positions.
- No mark “■” indicates pin position is not affected.
- The figures show the settings before shipment or after selection.



CAUTION

Before setting dips switches, firstly turn off power source and set the position of the dips switches. If the switches are set without turning off the power source, the contents of the setting are invalid.

DSW1: Test run




Setting before shipment		-
Test Run for cooling		Continuous operation during 2 hours is performed without thermo OFF.
Test Run for heating		The 3 minutes guard for compressor protection is not effective during the test run operation.
Enforced compressor OFF		Compressor operation is OFF during the operation.






NOTE

- This operation is reset once the compressor is in Thermo-ON mode.
- During the test run operation the units will operate continuously during 2 hours without Thermo-OFF and the 3-minutes guard for compressor protection will be effective.
- Test run will start within 20 seconds after setting DSW1 pin 1 to ON position


DSW2: Pipe length setting (Setting is required) / Optional function setting

Setting before shipment (5-30m)		-
Piping length (0~5 m)		Initial expansion valve opening is changed according to the piping.
Piping length (More than 30 m)		Initial expansion valve opening is changed according to the piping.
Piping pressure setting		Control to support existing pipes or when using Ø19.05 gas pipe (soft-annealed).
Function selection setting		Function selection is set by PSW.
External input/output selection		External input/output selection is set by PSW.

DSW3: Capacity setting (No setting is required)

RASC-4HNPE		Setting before shipment.
RASC-5HNPE		
RASC-6HNPE		
RASC-8HNPE		
RASC-10HNPE		

DSW4 and RSW1: Setting number of refrigerant cycles (Setting is required)

Setting for the tenth digit		Setting before shipment.
Setting for the last digit		




DSW5: Setting of end-terminal resistance

It is not necessary to set when the number of RASC units in the same H-LINK line is one. In case of more than one RASC unit in the same H-LINK line, set as follows:

- First RASC unit: keep DSW5-1 in “ON”.
- Rest of RASC units: set DSW5-1 to “OFF”.


Setting before shipment	
Cancellation (Setting of end terminal resistance)	

Turn OFF DSW5 number 1 pin for cancel of end terminal resistance setting

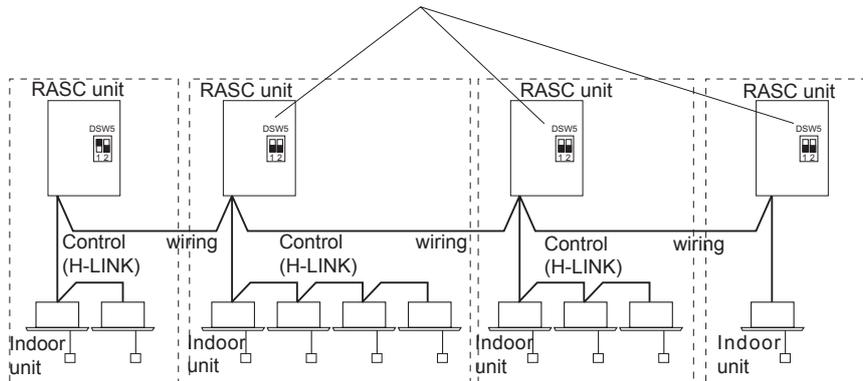

DSW6: Setting of indoor unit control operation

Individual control operation (Setting before shipment)	
Simultaneous control operation	

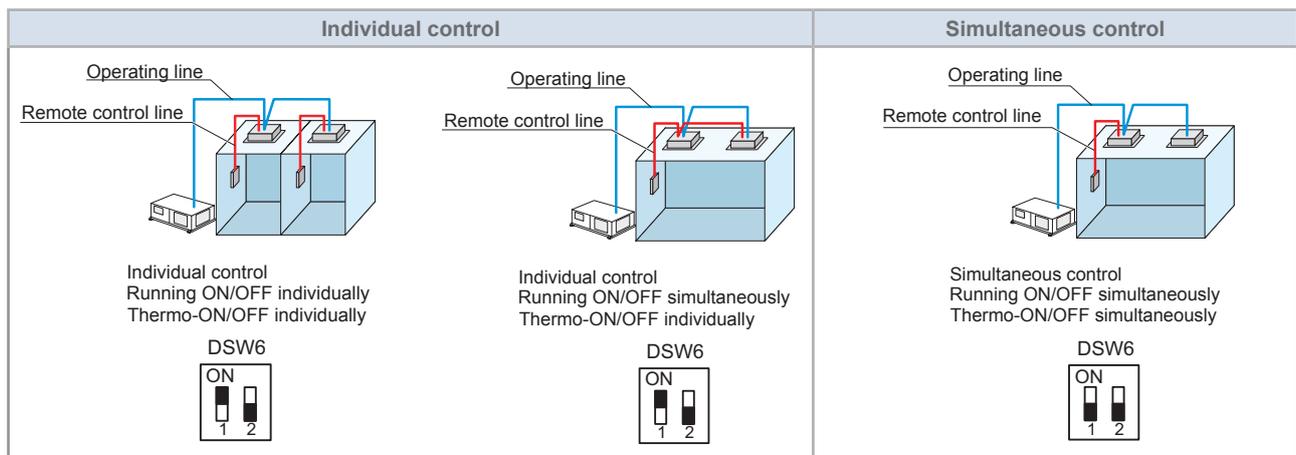

4.6.3 Jumper lead setting (JP1~6)

Setting before shipment:

System	JP1	JP2	JP3	JP4	JP5	JP6
Three-phase (3N~)	1	1	0	1	0	0



NOTE

- 0: Open
- 1: Short circuit

The function selection using the jumper lead setting is shown in the tables below:

Setting	Function	Details
JP1	Not used	-
JP2	Not used	-
JP3	400V power source voltage	When JP3 is set to "open", current protection parameters are set for a 400 V power source voltage.
JP4	Fixing for cooling only	When JP4 is set to "open", operation mode is fixed for cooling. Thermo-ON is available only by "COOL" or "DRY" mode at indoor unit.
JP5	Self diagnosis	For function test of the RASC unit control PCB. Factory default setting is open. When power ON in short condition it enters self diagnosis.
JP6	Phase detection release	Phase detection abnormality not detected. When short, doesn't affect phase detection.

4.6.4 LED's indication

LED Indication		
LED1	Red	This LED indicates the transmission status between the indoor unit and the RCS
LED2	Yellow	This LED indicates the transmission status between the indoor unit and the RASC unit
LED3	Green	Power source for the PCB

4.7 H-LINK II system

The H-LINK II is the wiring connection system between units.

The H-LINK II wiring system only needs:

- Two transmission wires connecting each indoor and RASC unit for a total of 64 refrigerant cycles.
- Connection wiring for all indoor and RASC units in series.

4.7.1 Application

The H-LINK II system can be applied to the following models:

Indoor unit	RASC unit
System Free	RASC-(4-10)HNPE
RCI	
RCIM	
RCD	
RPI	
RPIM	
RPK	
RPF	
RPFI	
RPC	



CAUTION

The H-LINK II system cannot be applied to the models with the old cycle, nor to units with an old transmission.

4.7.2 Features

- The total wiring length is considerably reduced compared to traditional connections.
- Only one connection is required for the wiring between the indoor and RASC units.
- The wiring connection of the complementary central control devices is easy.




NOTE

CSNET WEB or CSNET Manager are centralised control systems which allow the installation to be controlled remotely. They can be connected at any point of the local corporate network, or even via the Internet.

4.7.3 Specifications

- Transmission cable: 2-wire.
- Polarity of transmission cable: non-polar wire.
- Maximum number of units that can be connected: 64 RASC units and 160 indoor units per H-LINK II system.
- Maximum wiring length: total 1000 m (including CSNET WEB or CSNET Manager).
- It is possible to increase the maximum wiring length up to 5000 m by using up to four PSC-5HR units.
- Recommended cable: shielded twisted pair cable, over 0.75 mm² (Equivalent to KPEV-S).
- Voltage: 5 V DC.

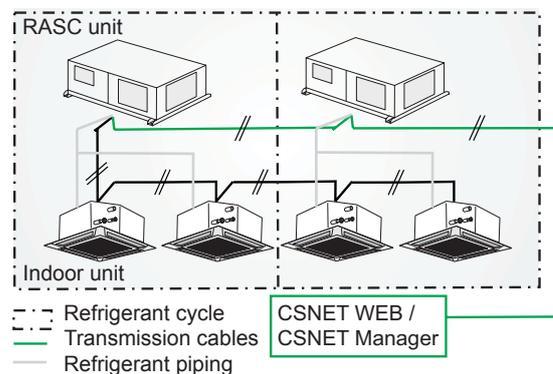

CAUTION


For the H-LINK II system must use twisted shielded pair cable or shielded pair cable.

4.7.4 DIP Switch setting for multiple H-LINK system

The DIP switches of all the RASC and indoor units have to be set as follows:


Unit	Name of DIP switch	Mark	Setting before the Shipment	Function
RASC unit	Terminal resistance	DSW5		It is not necessary to set when the number of RASC units in the same H-LINK line is one. In case of more than one RASC unit in the same H-LINK line, set as follows: • First RASC unit: keep DSW5-1 in "ON". • Rest of RASC units: set DSW5-1 to "OFF".
	Refrigerant cycle	DSW4 RSW1		For setting the refrigerant cycle address of the RASC unit. Set the DSW4 and RSW1 to overlap the setting of other RASC units in the same H-LINK system.
Indoor unit	Refrigerant cycle	DSW5 RSW2		For setting the refrigerant cycle address of the indoor unit. Set the DSW5 and RSW2 corresponding to the address of RASC unit in the same refrigerant cycle.
	Address of the indoor unit	DSW6 RSW1		Setting indoor unit address. Set the DSW6 and RSW1 not to overlap the setting of other indoor units in the same refrigerant cycle. (If no set, the automatic address function is performed.)

- Example of the setting of the DIP switches.

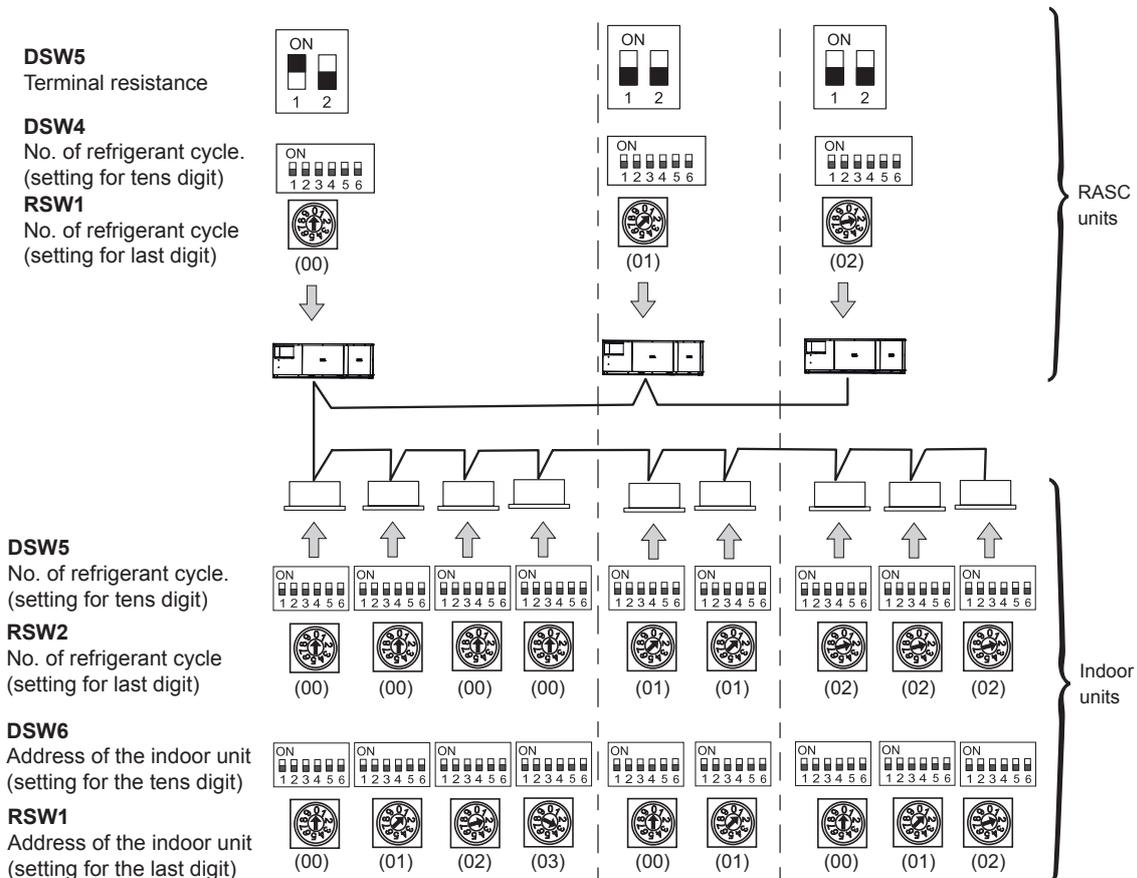

4.7.5 Examples of the system of connection between H-LINK and H-LINK II units

In the case of mixed systems with H-LINK and H-LINK II, set the H-LINK units in the first 16 position of the system, as in the following example where 42 systems are connected, 16 with indoor FSN1E units and 26 with indoor FSN(H)(2/3/4)(E)(M)(i)(-DU) units.

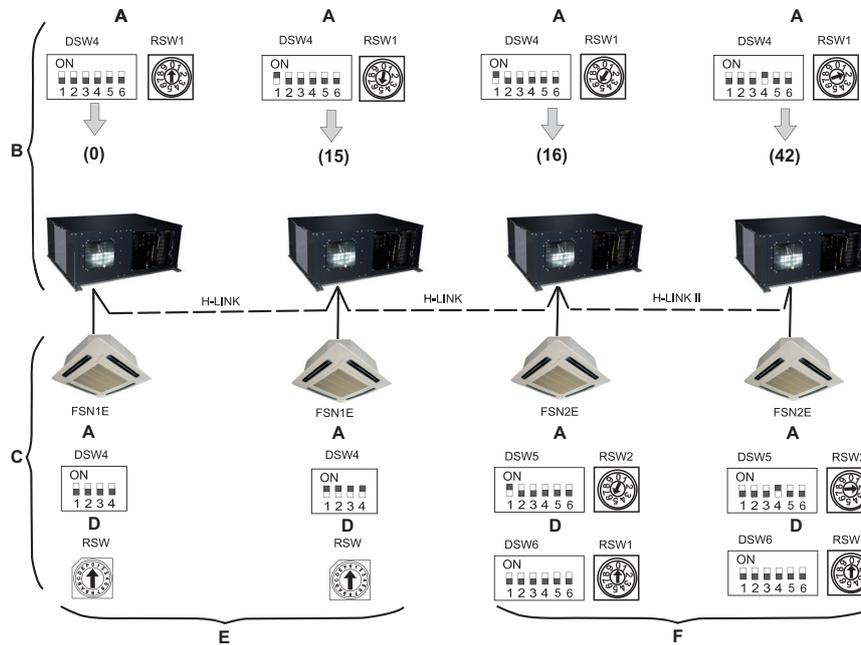

A. Refrigerant cycle.

B. RASC unit.

C. Indoor unit.

D. Indoor unit address.


E. Either the current remote control switch (H-LINK) or the new one (H-LINK II) can be used.

F. Only the new remote control switch (H-LINK II) can be used.

4.7.6 Examples of H-LINK II system


1 Using the H-LINK II system for air conditioning systems without a central control device (Neither centralised remote controls nor Building air conditioning controls)

- Line connection with all units.

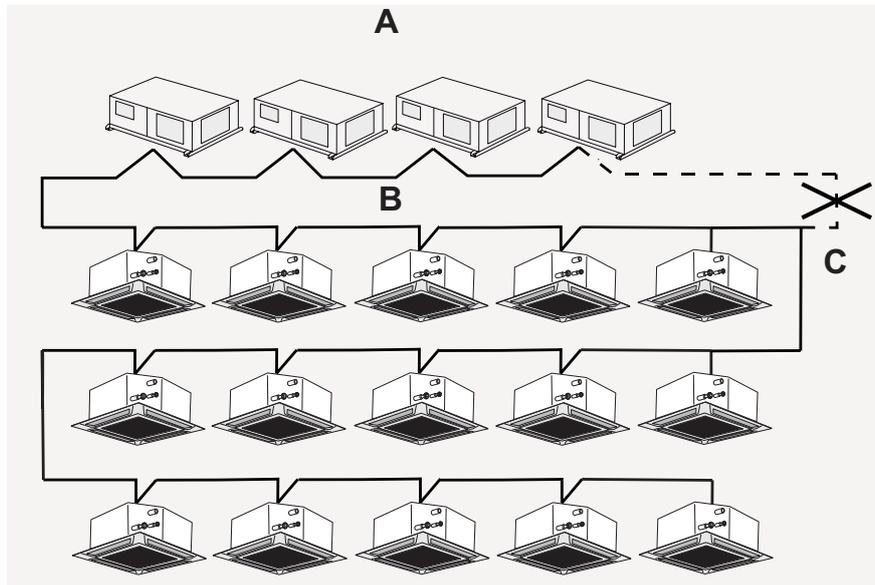

- A. RASC units.
- B. Indoor units.
- C. Do not install wiring in a loop.


- Line connection for each floor.

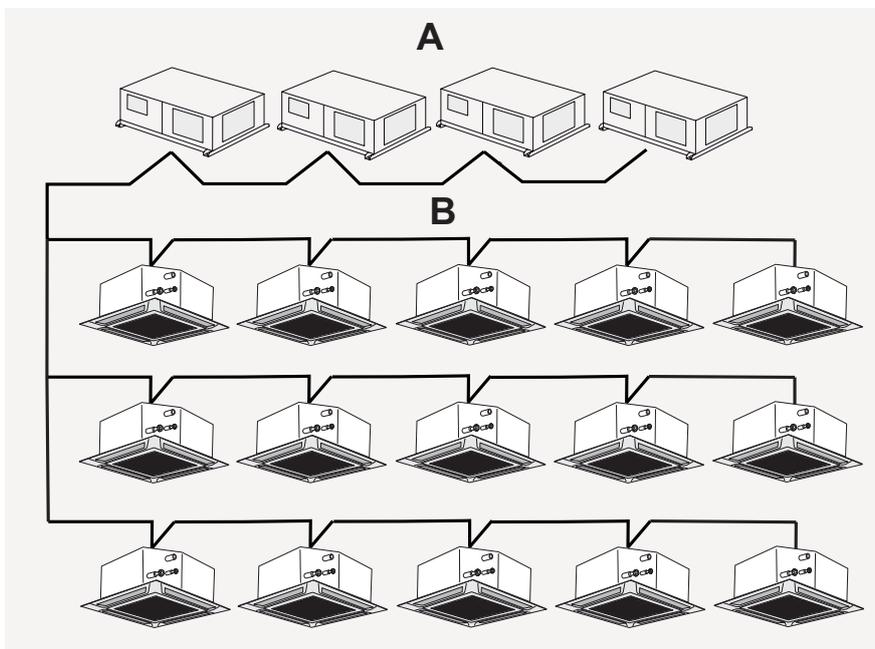

- A. RASC units.
- B. Indoor units.



- Connection with one main line and with the branch lines for the units.

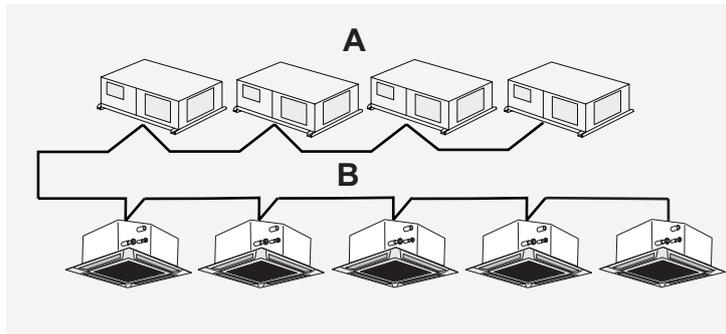

A. RASC units.


B. Indoor units.

! CAUTION

- Do not install the wiring in a loop.
- If the H-LINK II system is not used when carrying out the electrical wiring as shown above, it must be used once the wiring of the instrument is completed. The DIP switches must therefore be set as specified in the DIP switches on the PCB.

2 Using the H-LINK II system for air conditioning systems with a central control device (Either centralised remote controls or Building air conditioning controls)

- If the central control device is used when carrying out electrical wiring, it can be connected at any point of the H-LINK II wiring.

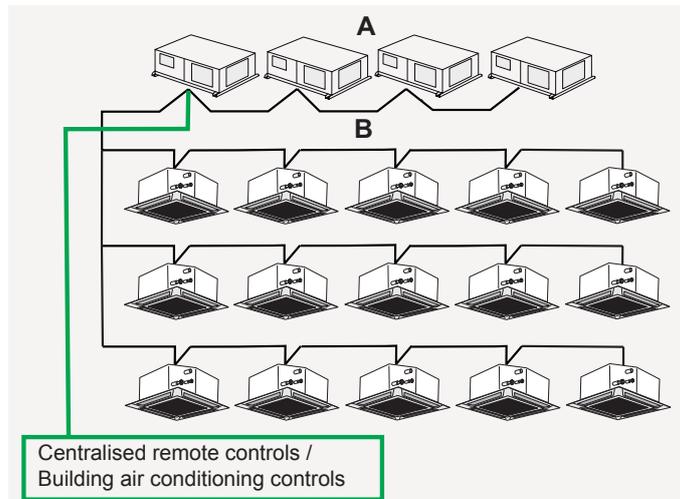


A. RASC units.

B. Indoor units.

- If the central control device is not used when electrical wiring is carried out, you must connect the H-LINK II wiring to all the systems. The easiest method is usually to connect the RASC units.




4.8 Electrical wiring diagrams

4.8.1 RASC-(4-6)HNPE (3N~ 400V 50Hz)

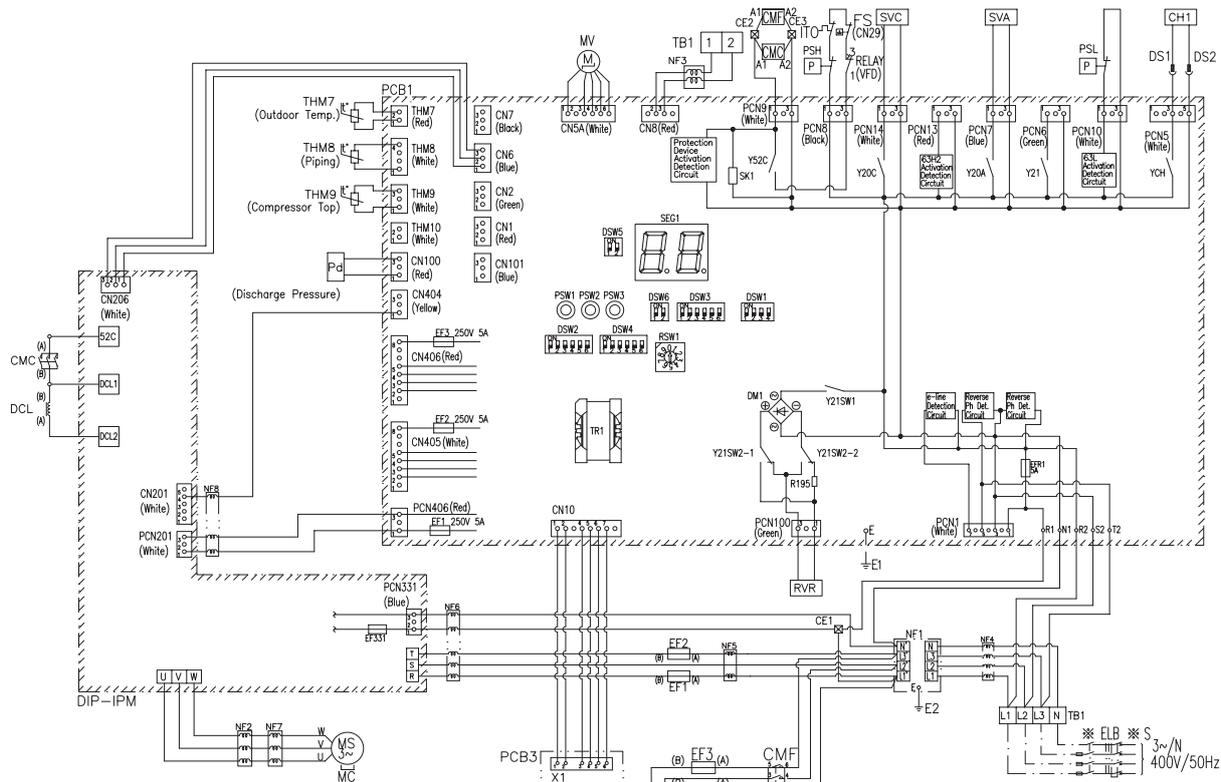

— : Factory Wiring
 - - - : Earth Wiring
 - · - · : Field Wiring
 * : Field-Supplied

Disposal of Electric Parts in RASC Unit

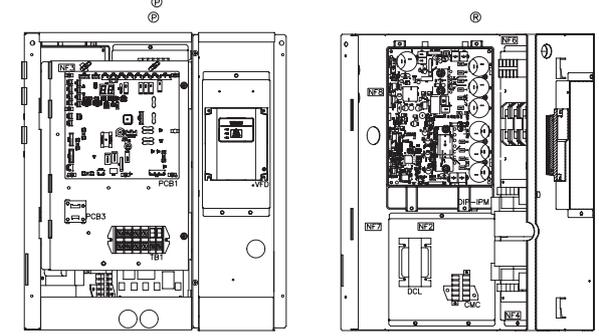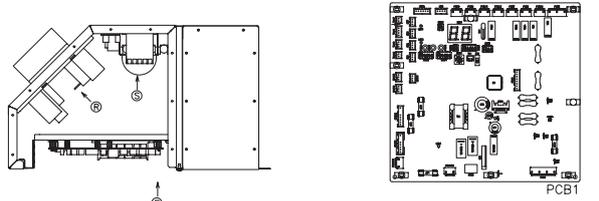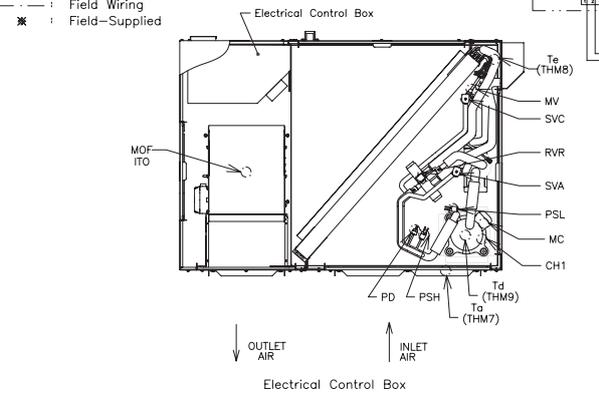

Code	Name of Parts	Remarks
MC	Motor (for Compressor)	
MOF	Motor (for Fan)	
EF1~4	Power Fuse	
EF1~3	Fuse	on PCB1
CMC	Magnetic Contactor (for Compressor)	
CMF	Magnetic Contactor (for Fan)	
SVA	Solenoid Valve	
RVR	Magnetic 4-Way Valve	
MV	Electrical Expansion Valve	
TB1	Terminal Board	
E1,2	Earth	
FS	Floot Switch	
TR1	Transformer	on PCB1
Ych	Auxiliary Relay (Oil Heater)	DC Coil
Y20a, Y20c	Auxiliary Relay (Solenoid 4-Way Valve)	DC Coil
Y21	Auxiliary Relay (Solenoid 4-Way Valve)	DC Coil
Y2c	Auxiliary Relay (Compressor)	DC Coil
THM7	Thermistor (for Outdoor Air)	
THM8	Thermistor (for Piping)	
THM9	Thermistor (for Comp. Top)	
Pa	Pressure Sensor (Discharge Side)	
PSH	High Pressure Switch (for Protection)	
PSL	Low Pressure Switch (Control)	
DCL	Reactor	
IPM	Inverter Module	
PCB1	Control PCB	
PCB3	Power Source PCB	
NF1~9	Noise Filter	
EFR1	Fuse	on PCB1
PSW1	Switch (Forced Defrosting)	on PCB1
PSW2	Switch (Checking)	on PCB1
PSW3	Switch (Checking)	on PCB1
DSW1	Switch (Test Run)	on PCB1
DSW2	Switch (Auxiliary Option Setting)	on PCB1
DSW3	Switch (Outdoor Capacity Setting)	on PCB1
DSW4	Switch (Refrigerant Cycle Setting)	on PCB1
DSW5	Switch	on PCB1
DSW6	Switch	on PCB1
CH	Crankcase Heater	
DSL, DS2	Plug-in Connector	
VDF	Variable frequency driver	
CE	Connector	



5. Control system

Index


5.1. Device control system	68
5.2. Safety protection and control.....	70
5.3. Standard operation sequence	71
5.3.1. Cooling operation	71
5.3.2. Dry operation	73
5.3.3. Heating operation	75
5.3.4. Automatic cooling and heating operation	77
5.3.5. Defrost operation control	78
5.4. Standard control functions.....	80
5.4.1. Freezing protection during cooling process or dry operation.....	80
5.4.2. Prevention control for high pressure increase during cooling operation.....	81
5.4.3. Prevention control for excessively high discharge gas temperature	81
5.4.4. Activation for protection device control.....	82
5.4.5. Preheating control of compressor.....	83
5.4.6. Prevention control for high pressure increase	83

5.1 Device control system

Control subject	Purpose		
	Cooling operation	Heating operation	Defrost operation
Control frequency of inverter compressor	<p>The frequency control is determined with the next parameters:</p> <ul style="list-style-type: none"> Ratio (IU capacity/RASC capacity) for individual operation. Temperature difference between indoor unit air inlet temperature and room setting temperature. 	<p>The frequency control is determined with the next parameters:</p> <ul style="list-style-type: none"> Ratio (IU capacity/RASC capacity) for individual operation. Temperature difference between indoor unit air inlet temperature and room setting temperature. 	<p>Fixed frequency (stop compressor during 30 sec. After defrosting condition was completed).</p>
Opening degree expansion valve of RASC	Fully open	<ul style="list-style-type: none"> Control range of expansion valve opening degree is determined to optimise temperature on the top of compressor. When number of IU has decreased, the expansion valve opening degree is determined with IU capacity ratio of before/after decrease or with control range for individual operation. 	Fully open
Opening degree expansion valve of indoor unit	<ul style="list-style-type: none"> Control range of expansion valve opening degree is determined to optimise IU gas pipe temperature (Tg) - I.U. liquid pipe temperature (Tl) difference. The expansion valve opening degree is controlled according to the number of connected IU for individual operation. 	<ul style="list-style-type: none"> Specified opening degree at normal control starting. Afterward, controlled to optimise IU liquid pipe temperature (Tl) The expansion valve opening degree is controlled according to the number of connected IU for individual operation. 	Specified opening degrees controlled by temperature on the top of compressor. (Td).
RASC fan	<ul style="list-style-type: none"> Fan step is operated for RASC liquid pipe temperature (Te) stabilization control. <ul style="list-style-type: none"> Increased number of I.U.: Step-up. Decreased number of I.U.: Step-down. 	<ul style="list-style-type: none"> Fan step is controlled according to RASC liquid pipe temperature and temperature on the top of compressor. <ul style="list-style-type: none"> Increased number of I.U.: Step-up. Decreased number of I.U.: Step-down (limited the lowest by outdoor temperature) 	Fan stop.
4-Way valve (RVR)	OFF	ON	OFF
Solenoid valve (SVA) (Equalised pressure valve)	<ul style="list-style-type: none"> Turn ON at starting. <p>Pd increase protection control.</p>	<ul style="list-style-type: none"> Turn ON at starting. <p>Pd increase protection control.</p>	Turn ON at starting
Solenoid valve (SVC) (Hot gas discharge bypass)	—	Turn ON depending on I.U. discharge / suction temperature, outdoor temperature, outdoor liquid temperature, etc.	—
High/Low pressure balance	Turn ON SVA during stop.	Turn ON SVA during stop.	—

- I.U.: Indoor unit
Tc / Te: Condensing temperature / Evaporating temperature
Td: Discharge temperature
Tl: Liquid temperature
Tg: Gas temperature
Pd: Discharge pressure
Cap: Capacity
Temp.: Temperature

The figure below shows the outline of the control system:

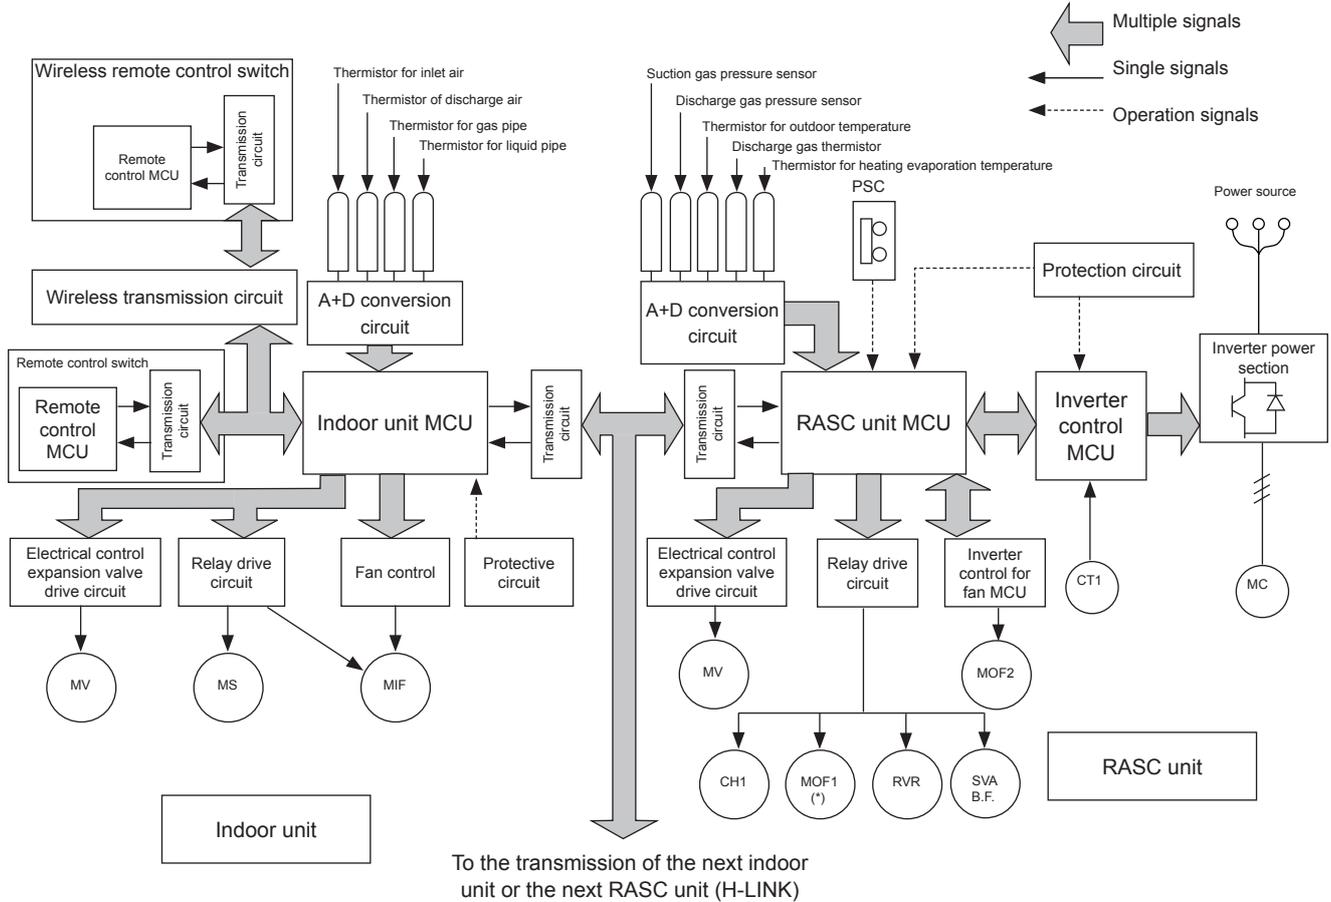

Symbol	Name	Symbol	Name
MC	Motor (for compressor)	CH	Crankcase heater
MIF	Motor (for indoor fan)	CT1	Current transformer
MOF1, 2	Motor (for outdoor fan)	RVR	4-Way valve
MS	Motor (for auto-louver)	SVA,B,F	Solenoid valve
MV	Electronic expansion valve	PSC	Pressure switch for control
CMC	Compressor magnetic contactor		

5.2 Safety protection and control

◆ Compressor and fan motor protections

The following devices and their combinations protect the compressor and fan motor.


High-pressure switch	This switch cuts out the operation of the compressor when the discharge pressure exceeds the setting.
Oil heater	This band heater protects against the oil carry-over during the cold starting, as the band heater is energized while the compressor is stopped.
Fan motor protection	Internal thermostat that is embedded in the fan motor winding: this internal thermostat cuts out the operation of the fan motor when the temperature of the fan motor winding exceeds the setting.

◆ RASC safety and control device setting

Model			RASC(4-6)HNPE	RASC-(8/10)HNPE
High pressure switch for compressor	Type		Automatic Reset, Non-Adjustable (each one for each compressor)	
	Cut-Out	MPa	-0.05	-0.05
			4.15	4.15
	Cut-In	MPa	-0.15	-0.15
+0.15			+0.15	
		3.20	3.20	
		-0.15	-0.15	
Fuse	3N~ 400V 50Hz	A	20 x 2	40 x 2
Crankcase heater	Output	W	52.0	40.8
CCP Timer		-	Non-Adjustable	
Setting Time		min.	3	3
Fan Motor Fuse		A	10 x 2	10 x 2
Internal Thermostat for fan motor	Cut-Out	°C	165 ± 10	165 ± 10
	Cut-In	°C	130 ± 15	130 ± 15
Fuse capacity on PCB		A	5.0	5.0

5.3 Standard operation sequence

5.3.1 Cooling operation

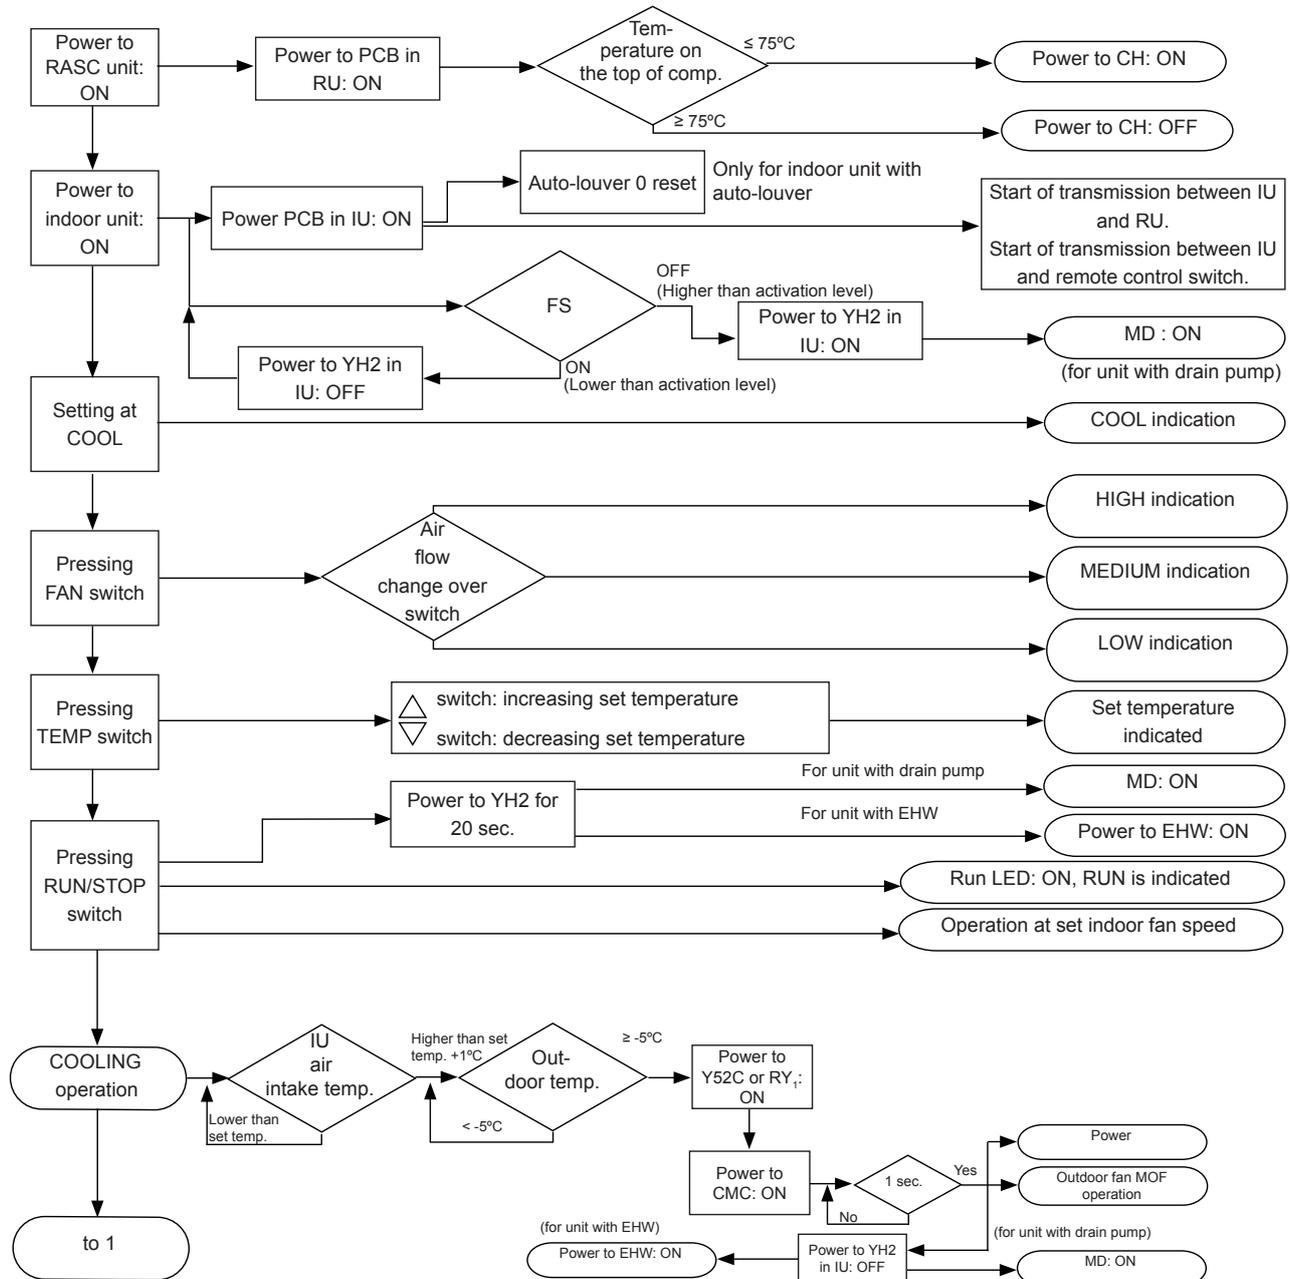

IU: Indoor unit

RU: RASC unit




NOTE

RY1 in RASC PCB3 (8/10HP only)

YH2 in IU's PCB

Y52C in RASC PCB1


Continues in the next page.

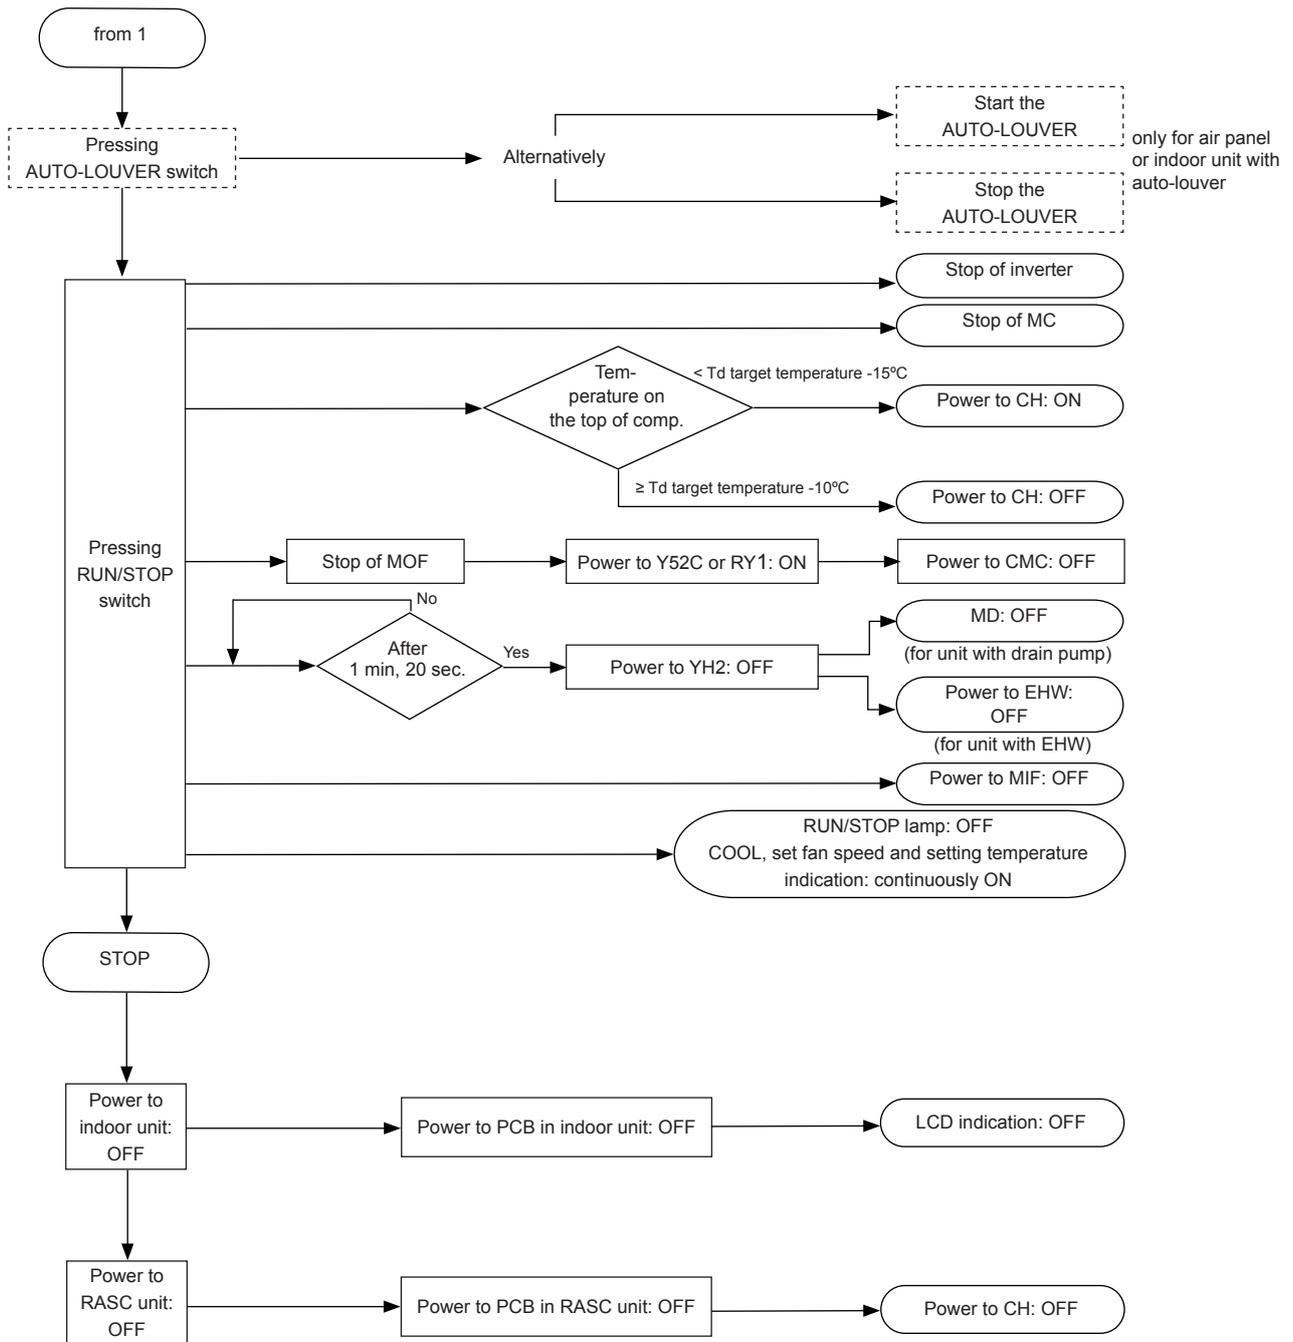

IU: Indoor unit

RU: RASC unit


5.3.2 Dry operation

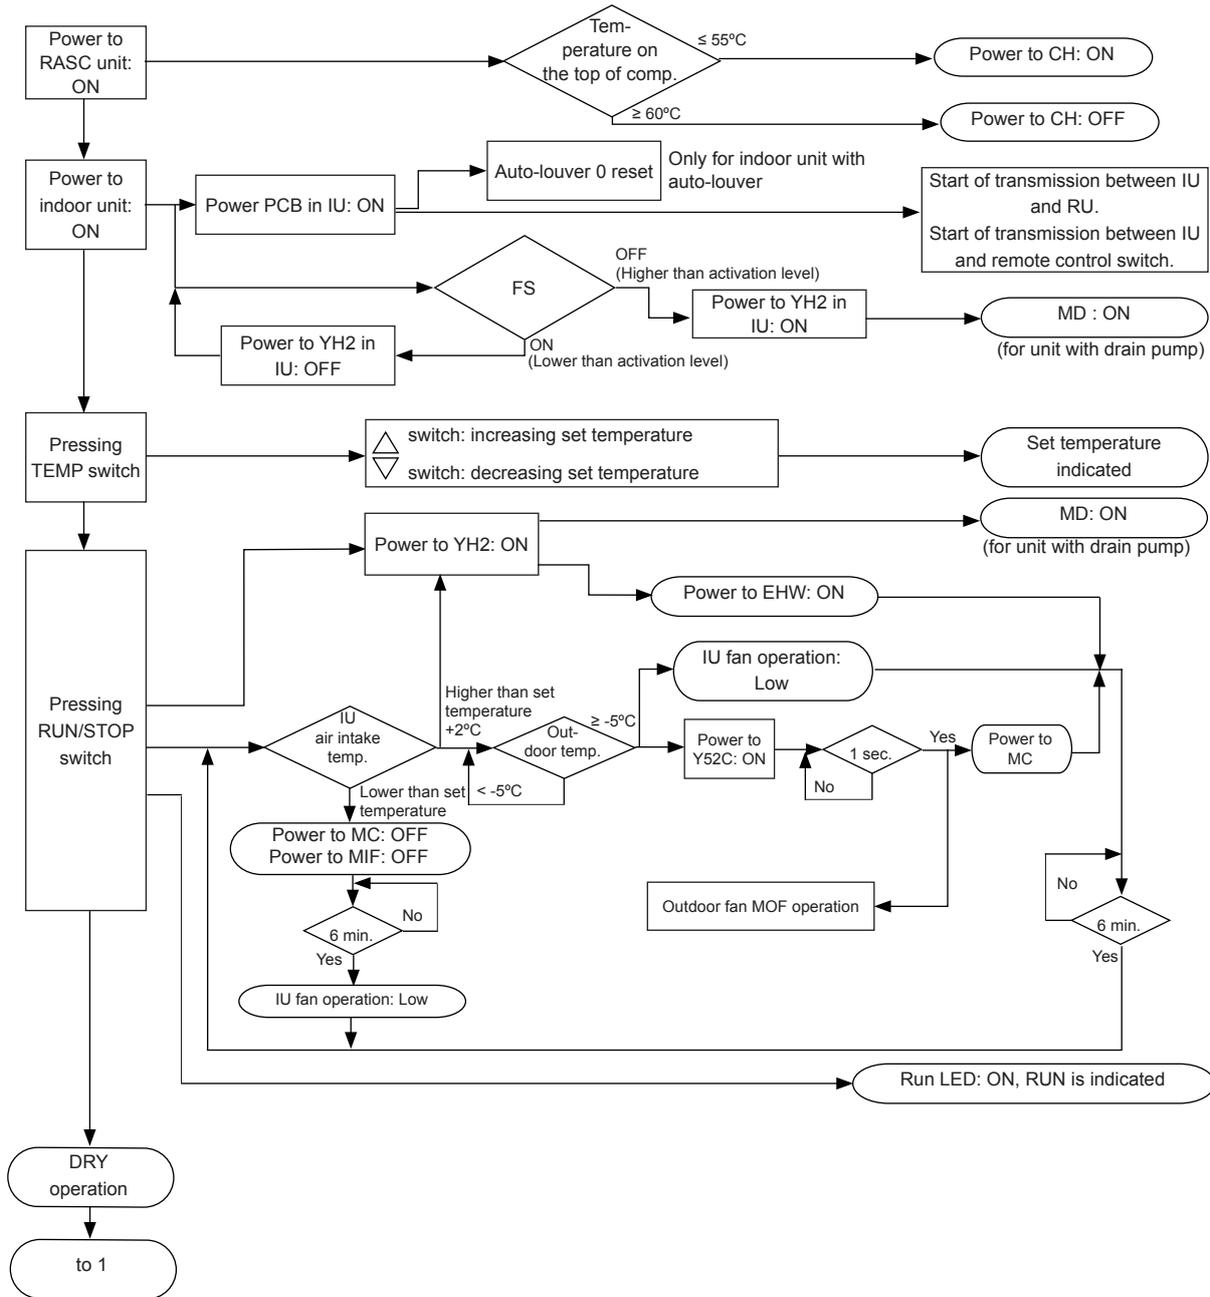


IU: Indoor unit
RU: RASC unit

Continues in the next page.



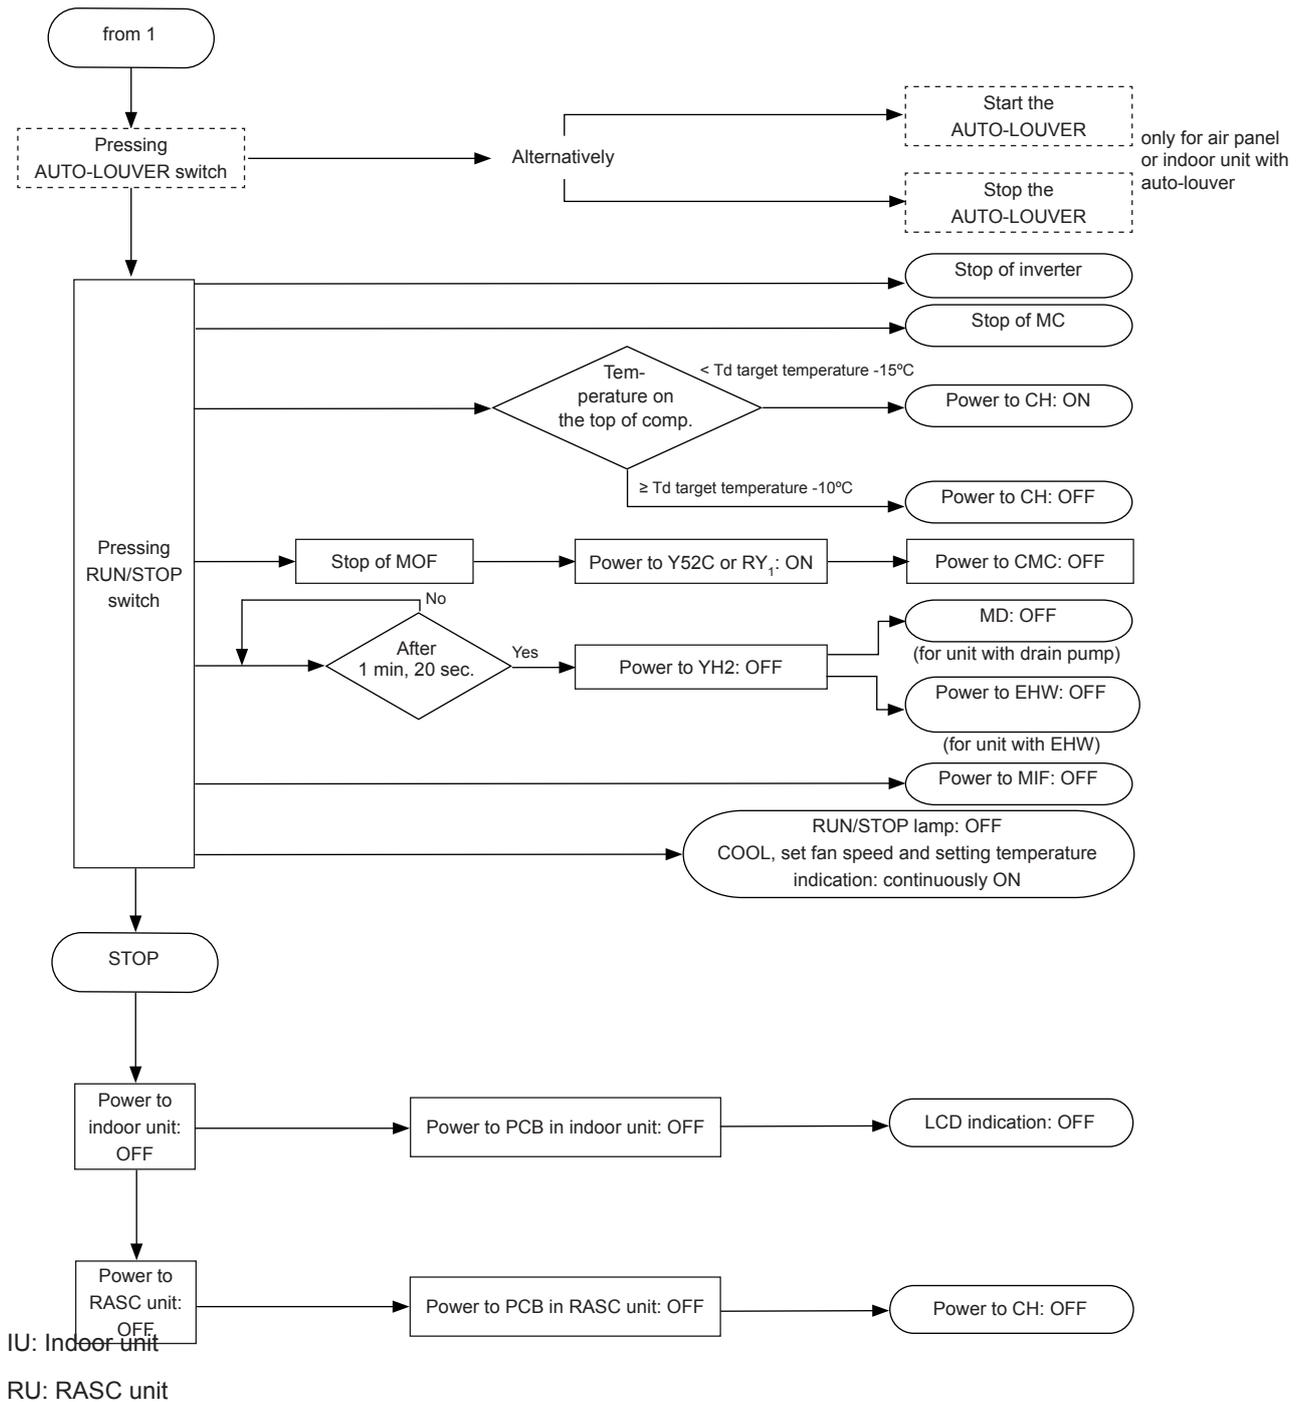


5.3.3 Heating operation

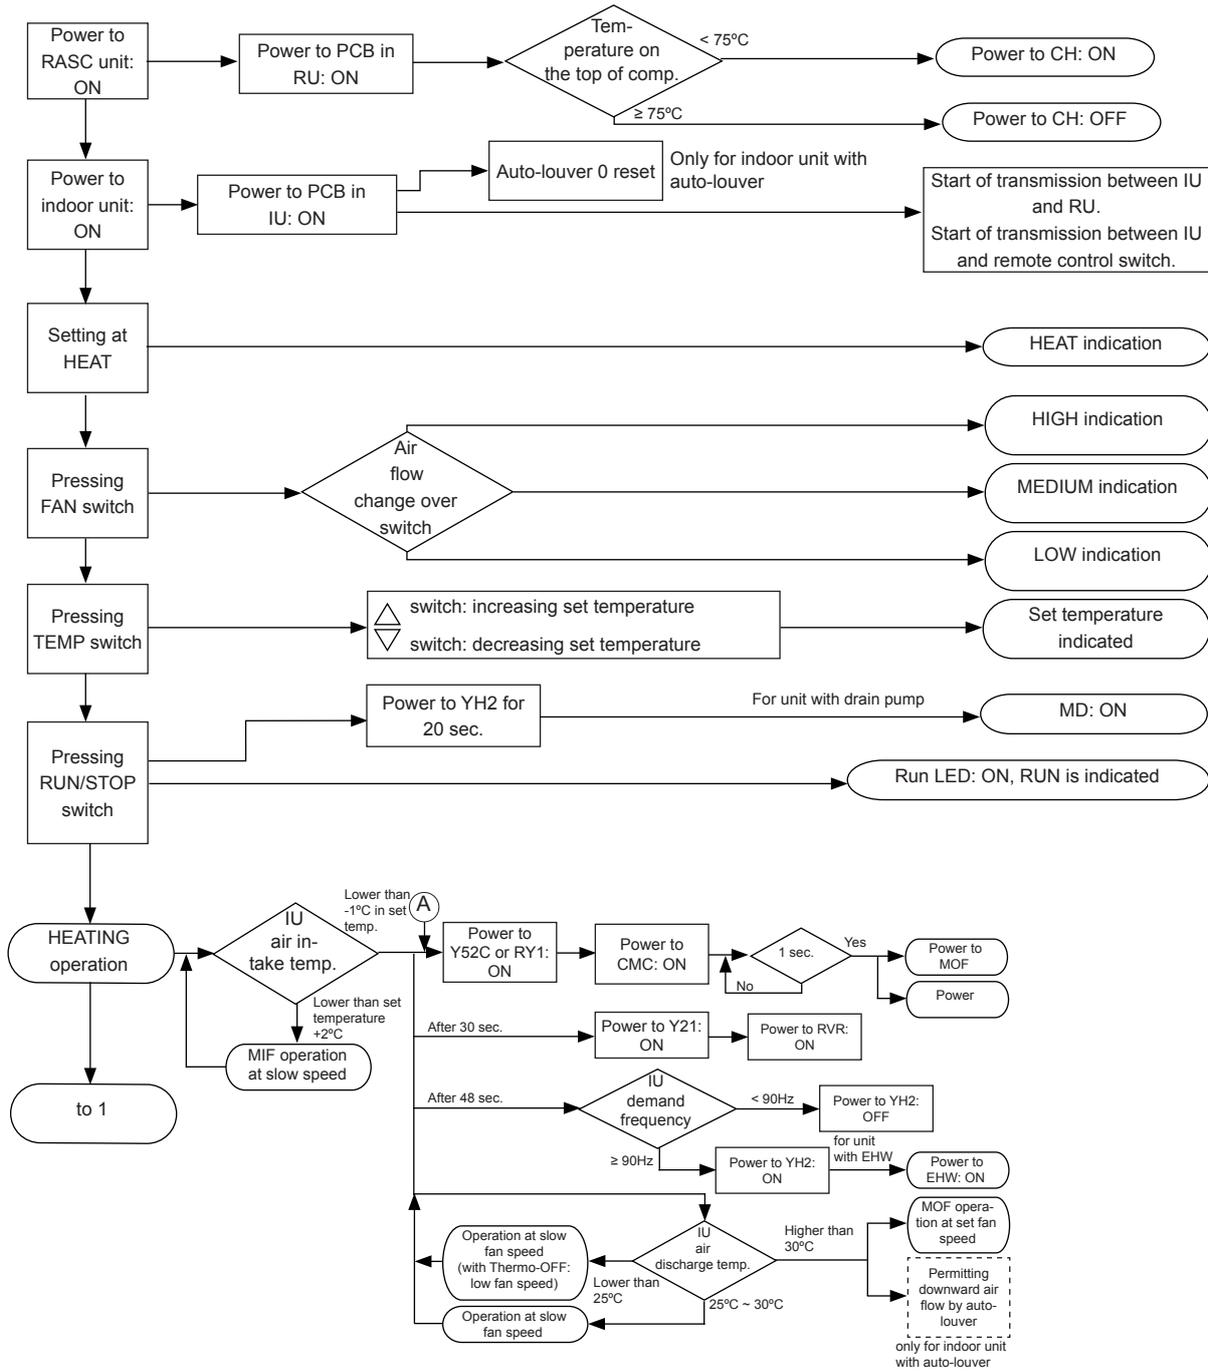


IU: Indoor unit
RU: RASC unit
Continues in the next page.



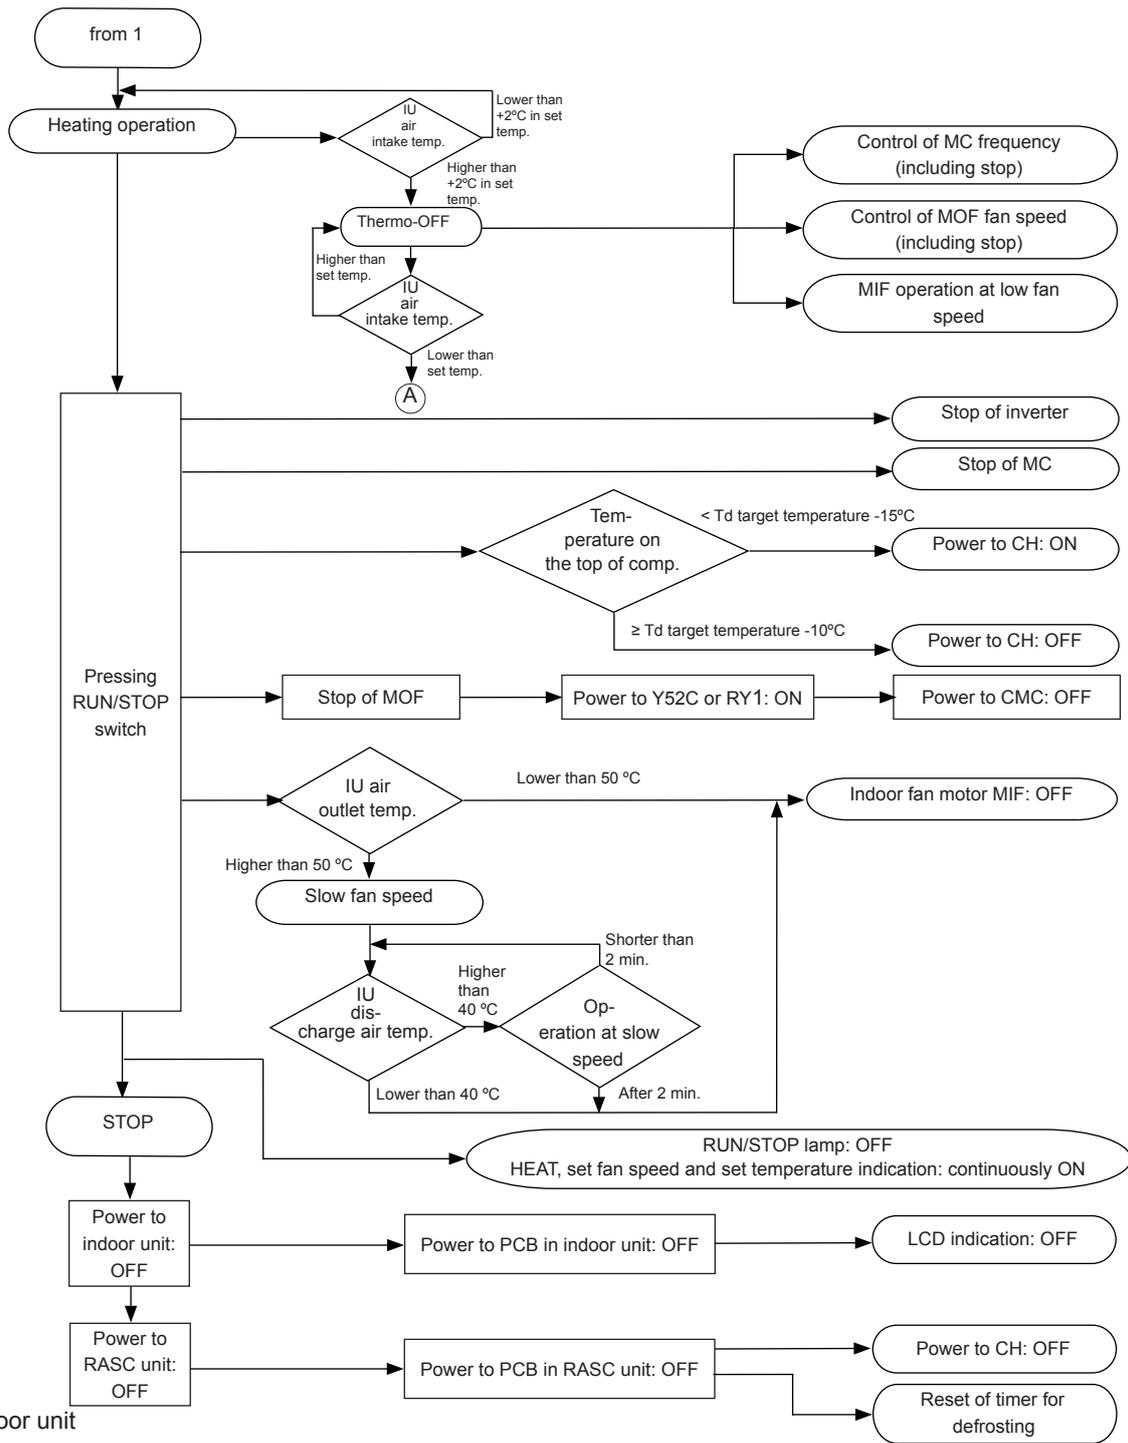


5.3.4 Automatic cooling and heating operation

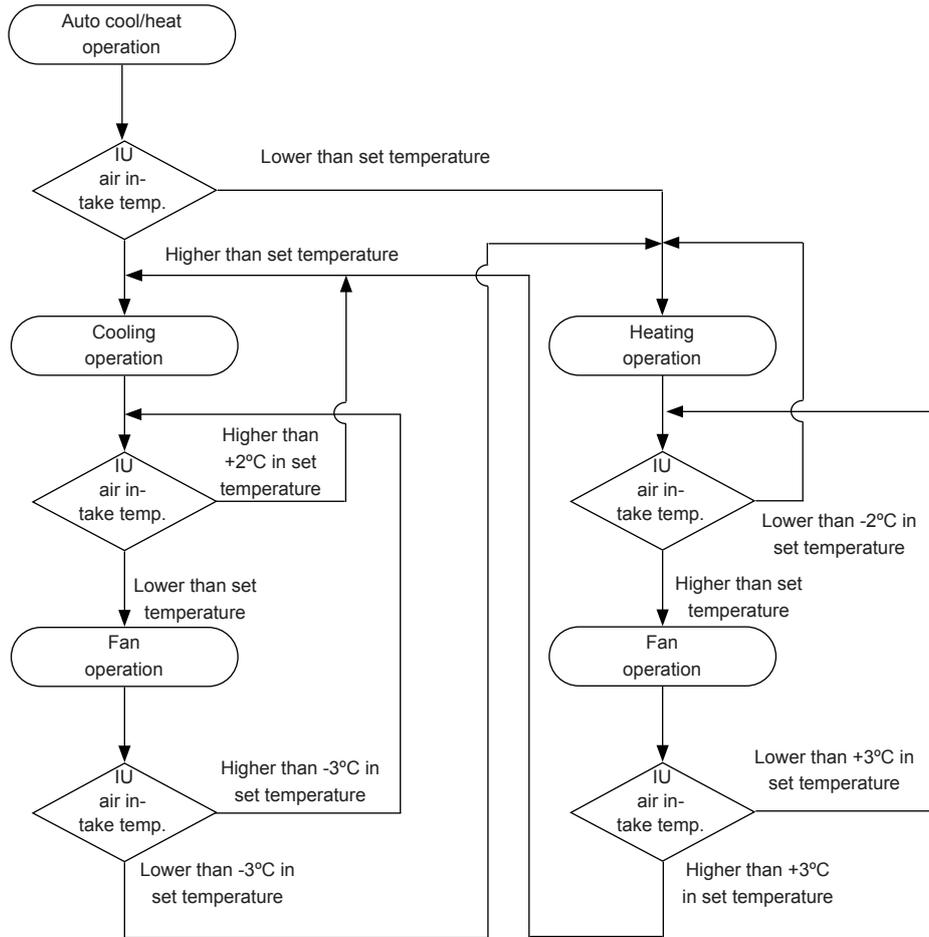

IU: Indoor unit



5.3.5 Defrost operation control

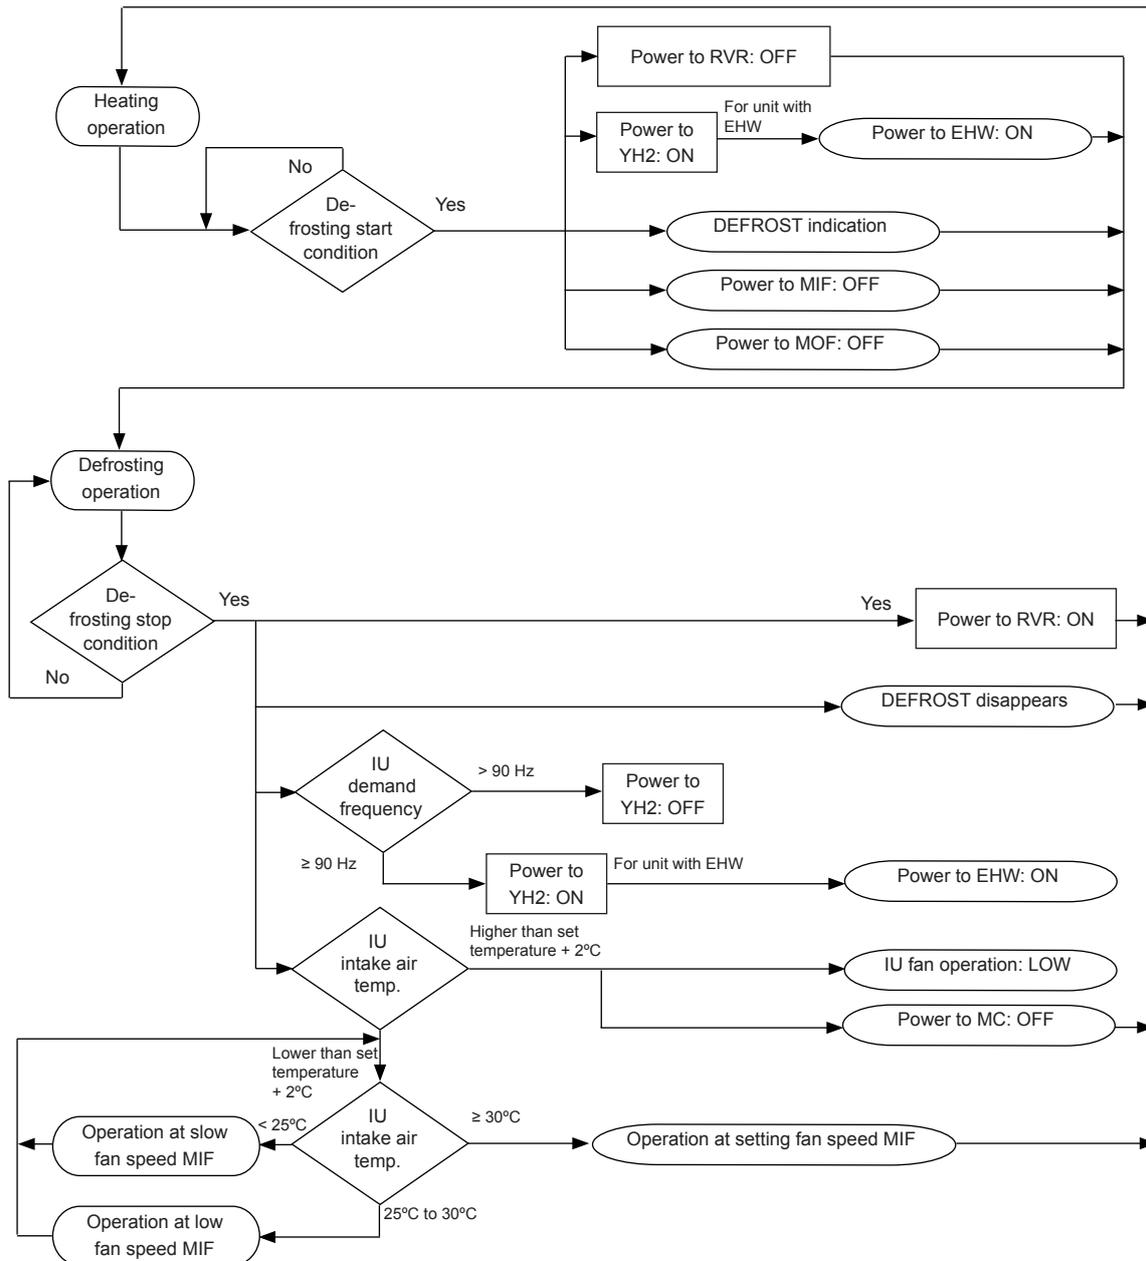

◆ Defrosting Operation

The following defrosting operations, “Standard Defrost”, “Forced Defrost” and “Manual Defrost” are available.

1 Standard Defrost

This operation is started according to the outdoor temperature, the outdoor evaporating temperature and operating time.

2 Forced Defrost

This operation starts when the indoor unit is operated Thermo-ON/OFF repeatedly and the standard defrost is not used.

3 Manual Defrost

This operation starts when the push switch “PSW1” on the RASC PCB is pressed and hold for more than 3 seconds during the maintenance work. (It is not performed when the defrosting operation is started, the high pressure and the outdoor evaporating temperature is high.)




NOTE

Do not repeat defrost operation frequently.

◆ **Condition for Starting Defrost**

1 Standard defrost

a. Temperature condition

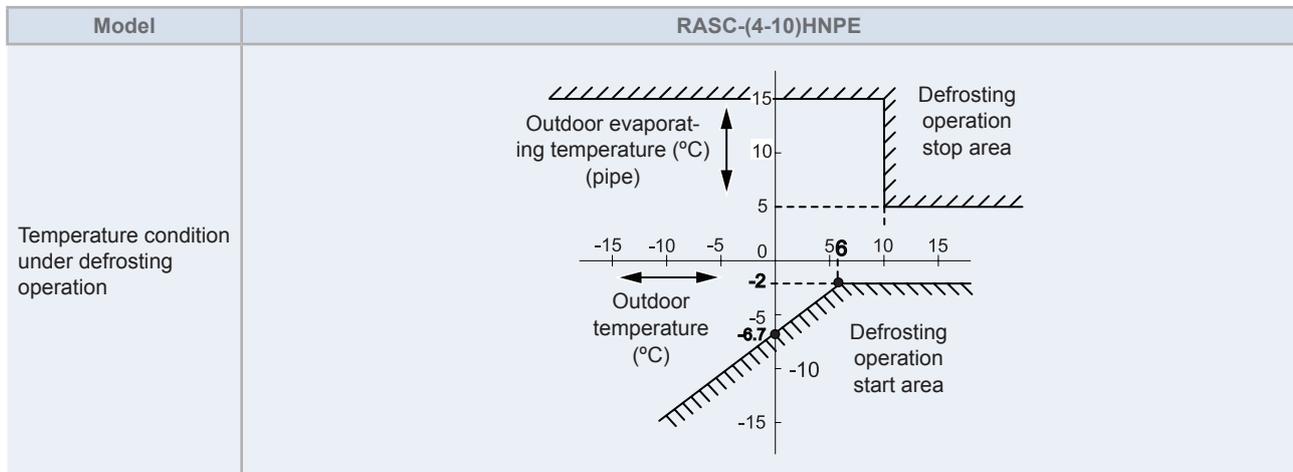

b. Condition for Operating Time of Defrost Operation Start

The defrosting operation is started when the temperature condition is met “(a) Temperature Condition” after the heating operation is performed for 40 to 120 minutes. The heating operation time is determined by estimating the amount of frosting on the heat exchanger.

2 Forced Defrost

Condition for Starting

The forced defrosting operation is started when all the following conditions are met.

- a. 120 minutes are passed after the reversing valve is “ON”.
- b. The outdoor temperature is lower than 10°C.
- c. The accumulated heating operation time is more than 60 minutes.
 (The accumulated time is reset when the operation is stopped or the defrosting operation is performed.)
- d. The compressor is operated continuously for more than 1 and half minutes.
- e. The outdoor evaporating temperature is lower than 5°C right before starting the operation.
- f. The pressure switch for control is “OFF”.

◆ **Condition for completing defrost operation**

The defrosting operation is stopped when any of following conditions are met.

- 1 The outdoor evaporating temperature becomes more than 25°C for 2 minutes from starting the defrosting operation.
- 2 The outdoor evaporating temperature becomes more than 15°C (the outdoor temperature < 10°C) after passing 2 minutes from starting the defrosting operation.
- 3 The outdoor evaporating temperature becomes more than 5°C (the outdoor temperature > 10°C) after passing 2 minutes from starting the defrosting operation.
- 4 The pressure switch for control is “ON”.
- 5 More than 9 minutes are passed after starting the defrosting operation.




NOTE

- The defrosting operation is not started immediately even if the above conditions are met. (The defrosting condition may be met temporally depending on the refrigerant cycle variability.)
- The defrosting operation is started when the conditions are met continuously for period of time.

5.4 Standard control functions

5.4.1 Freezing protection during cooling process or dry operation

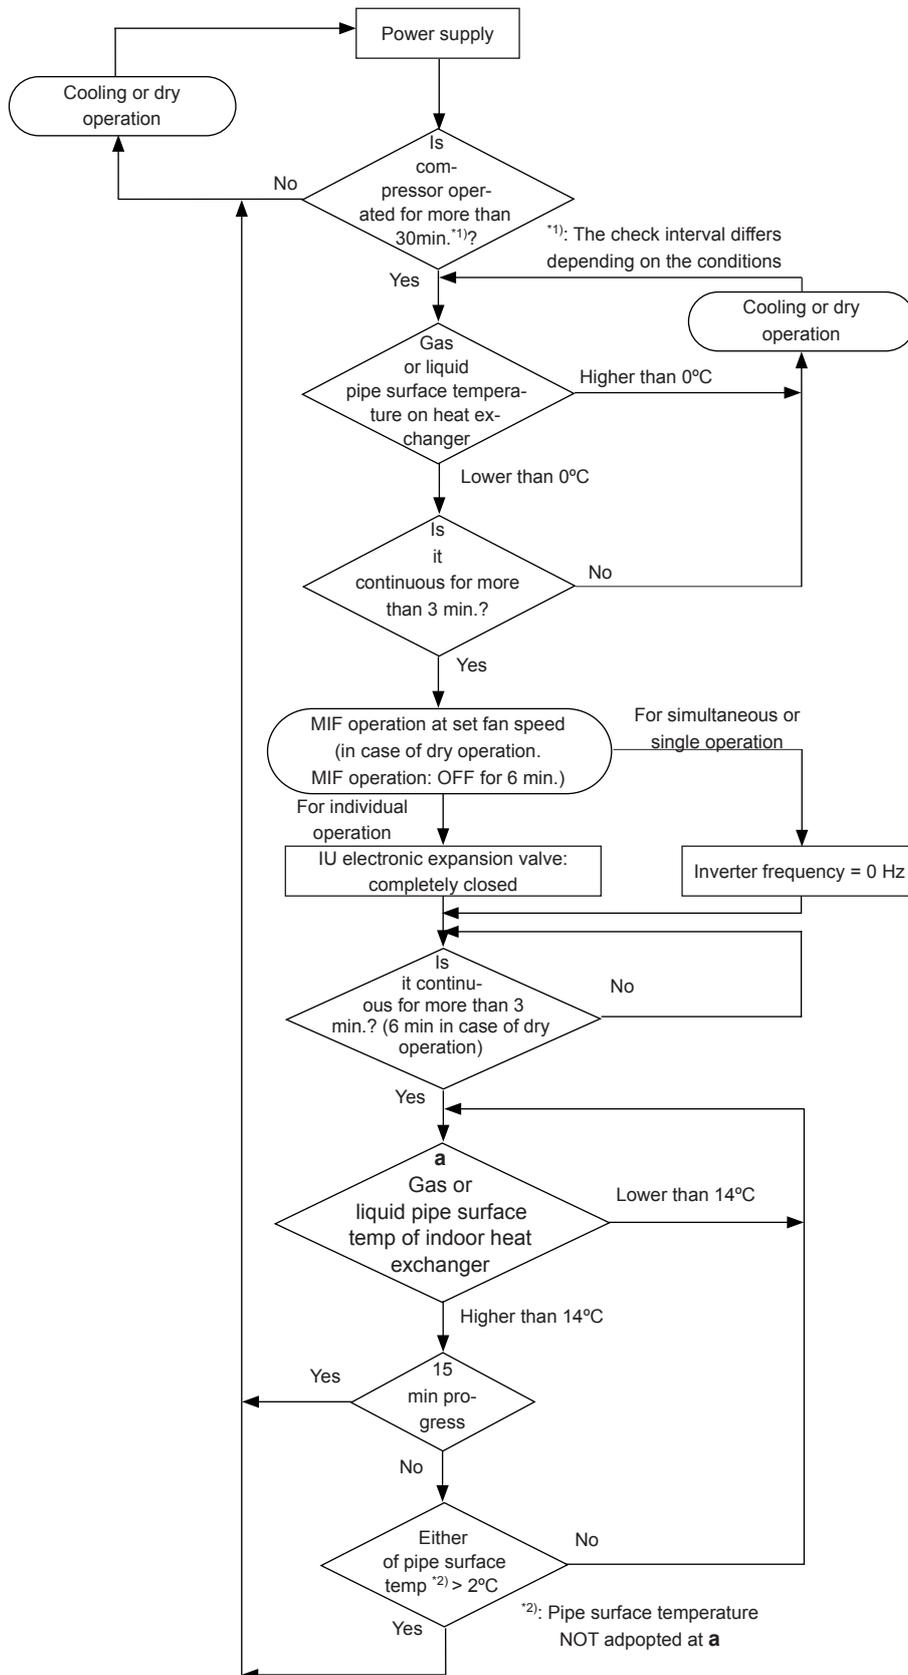

IU: Indoor unit


5.4.2 Prevention control for high pressure increase during cooling operation

This function is performed to prevent the abnormal condition (Alarm Code: 02) when the air flow volume is decreased by a seasonal wind against air outlet of the RASC unit. When the following conditions are met, the forced Thermo-OFF operation will be performed.

The cause of stoppage will be "13" during Thermo-OFF.

- 1 Y52C is turned "ON" during the cooling operation, or RY1 is turned "ON" (during the compressor operation).
- 2 High Pressure $\geq 3.8\text{MPa}$.

5.4.3 Prevention control for excessively high discharge gas temperature

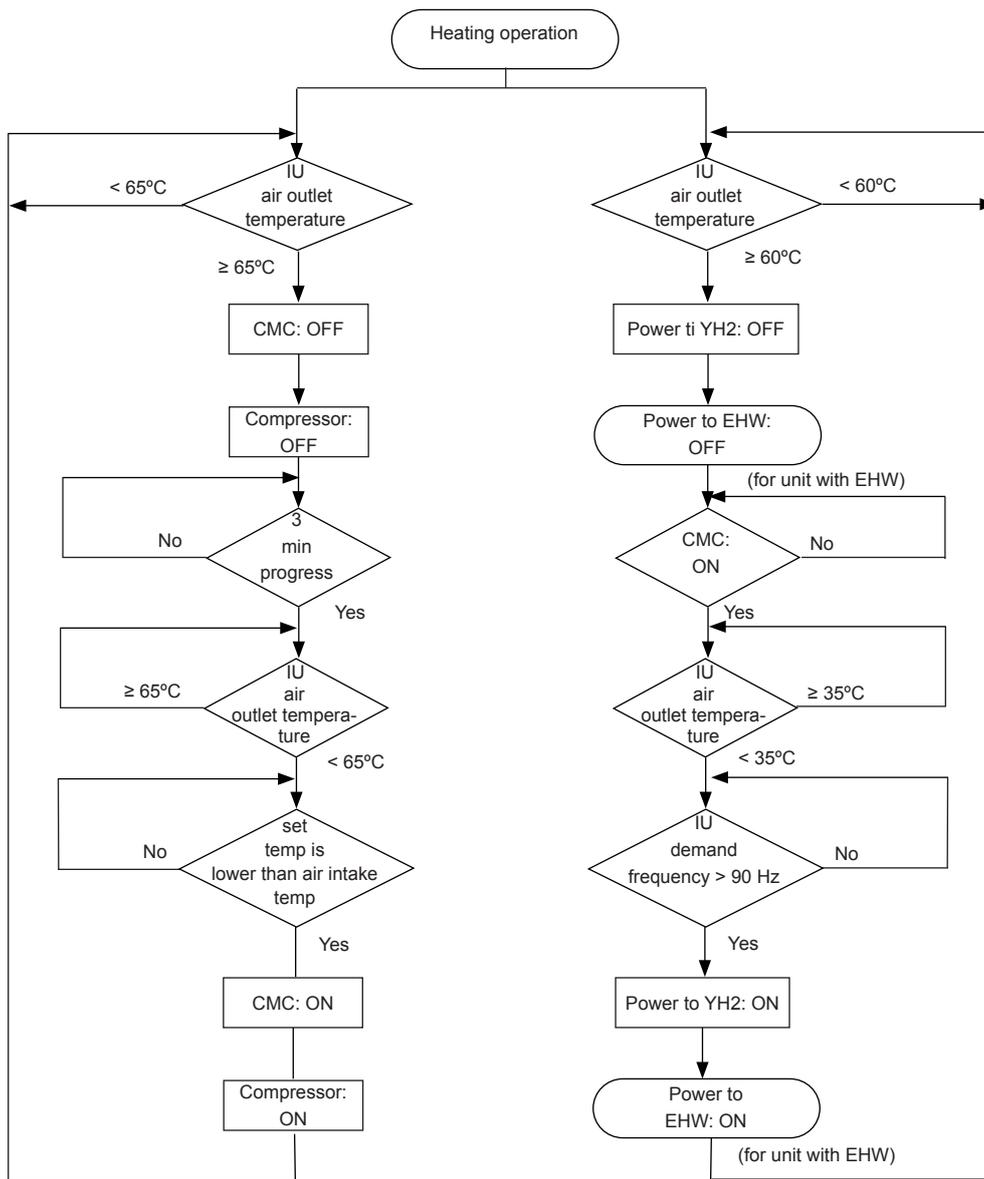


Thermo-ON/OFF control for indoor unit

Heater control for indoor unit

IU: Indoor unit




5.4.4 Activation for protection device control

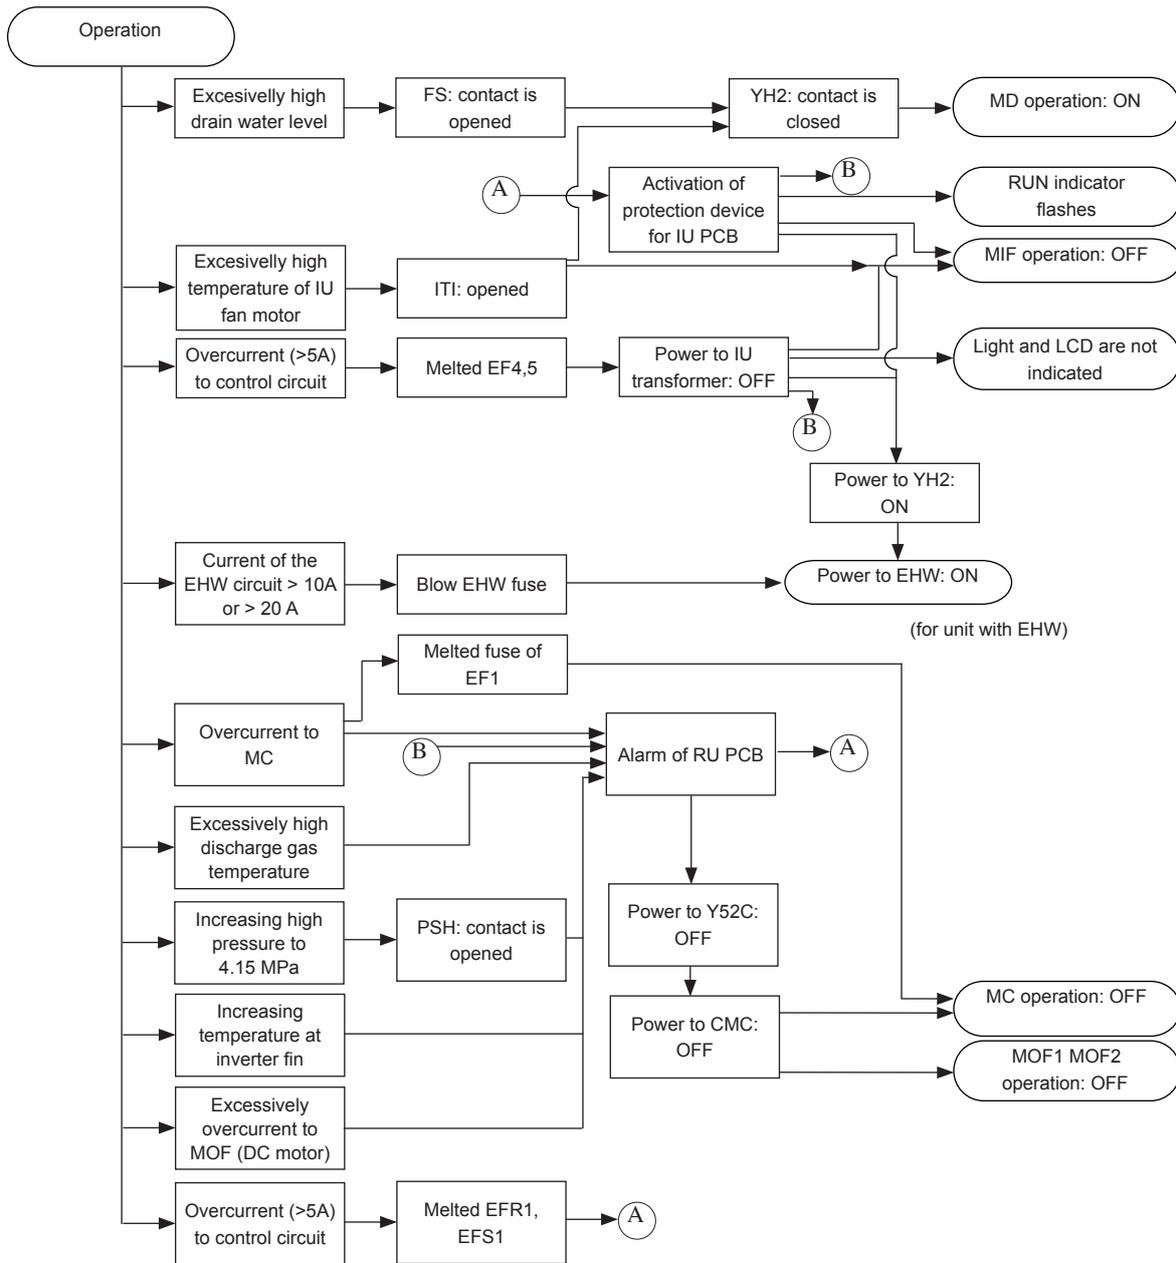

IU: Indoor unit

RU: RASC unit

5.4.5 Preheating control of compressor

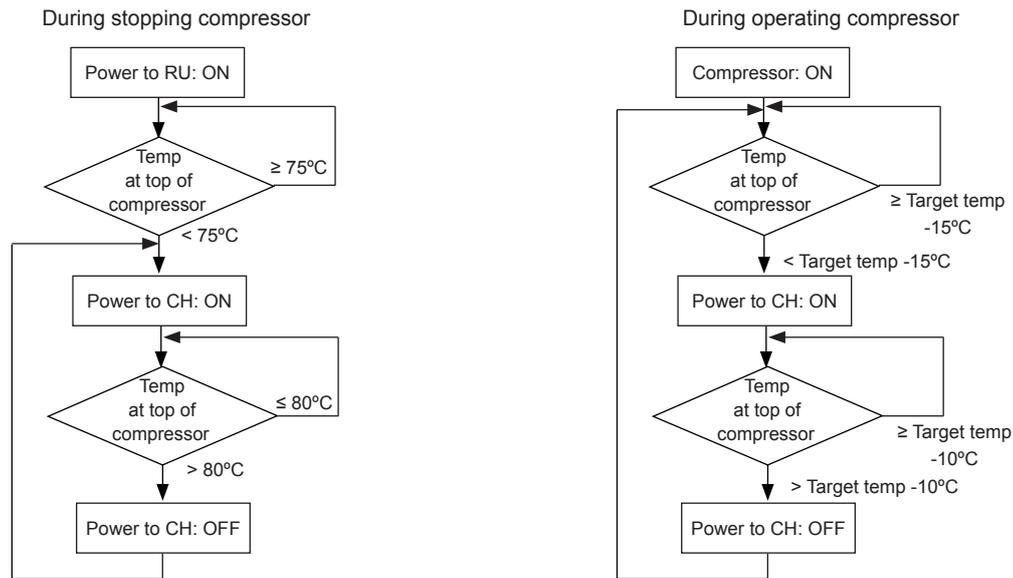

5.4.6 Prevention control for high pressure increase

This function is performed to prevent the abnormal condition (Alarm: 02) when the outdoor air flow is decreased by a seasonal wind against air outlet.

When the **CMC** is ON during cooling operation, **PSC** is ON and T_c is higher than $T_{c1}+4^{\circ}\text{C}$, forced thermo-off operation will be performed.

T_c : Outdoor piping temperature.

T_{c1} : Outdoor piping temperature when **PSC** is ON.

PSC ON: 3.60 MPa.

However, if it occurs more than 6 times during operation, forced thermo-off operation will not be performed. Cause of stoppage will be 13.



6 . Optional functions

Index

6.1. Optional external input and output signals	86
6.1.1. Input and output signals through 7-segment display on the RASC unit PCB	86
6.1.2. Input and output signals through remote control switch	92
6.2. Optional functions.....	93
6.2.1. Optional functions through 7-segment display on the RASC unit PCB	93
6.2.2. Optional functions through remote control switch.....	101

6.1 Optional external input and output signals

6.1.1 Input and output signals through 7-segment display on the RASC unit PCB

The system has several input and output signals, which can be selected using the following connectors of the RASC PCB:

- Input connectors CN1 and CN2, which have two and one ports respectively to configure three optional input signals.
- Output connector CN7, which has two ports to configure two optional output signals.

The selection of these input and output signals represents the selection of some optional functions programmed in the PCB of the RASC unit through the 7-segment display.



◆ Available ports

The system has the following input and output ports.

Content		Setting of the port in the PCB of the RASC unit	Remarks	Outlet
Inputs	11	1-2 of CN1		Contact
	12	2-3 of CN1		Contact
	13	1-2 of CN2		Contact
Outputs	01	1-2 of CN7		DC 12V
	02	1-3 of CN7		DC 12V

Connection

The system has the following connections.

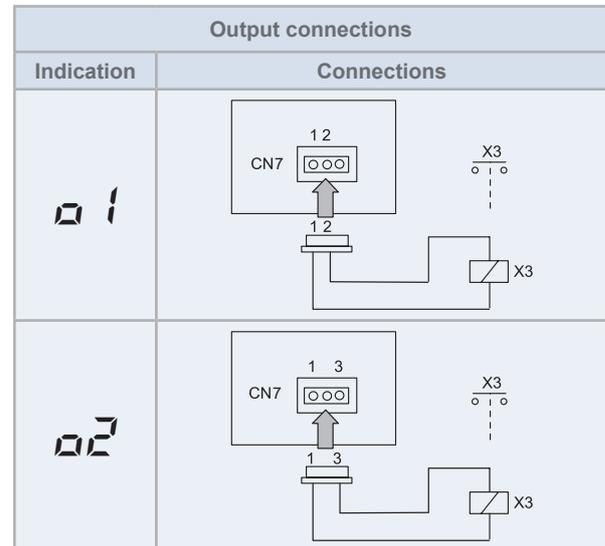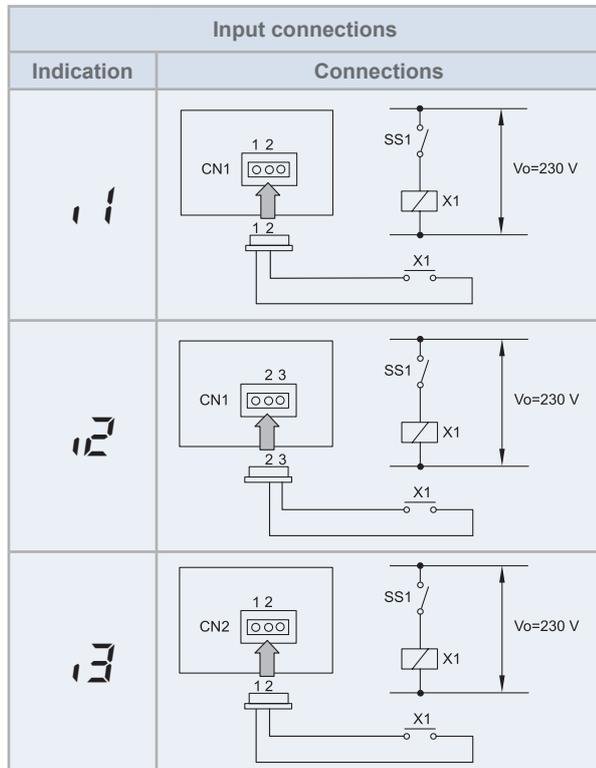

Specification of the components for a correct installation

Component		Manufacturer or specifications	Remarks
Auxiliary relay (X1)		OMRON mini power relay model: MY1F or equivalent	Voltage between relay terminals 12 Vdc - 75 mA
Auxiliary relay (X3)		OMRON mini power relay model: LY2F or equivalent	Voltage between relay terminals 12 Vdc
(SS1), (SS2), (x1), (x2) contact example		Manual type	Voltage between terminals of the 230V - 5 mA contactor
3P connector cable		Optional part PCC-1A (capable of connecting the JST XHP -3 connector)	Five wires with connectors as one set
Wire (control)	Voltage: 12V DC	0.5 mm ²	
Wire (power)	Voltage: 230V	2.0 mm ²	


NOTE

- *The connection of the input signal is only an example.*
- *Keep the CN1 and CN2 wires as short as possible.*
- *Do not run transmission wiring along 230 V / 400 V CA power supply cables. Leave a distance of more than 30 cm between them. (Intersection are occasionally allowed).*
- *If you install the wires along a power supply wire, insert the wires in a metal conduit tube and ground one end of the tube.*
- *The maximum wiring length is 70 m. If you use this function, it is recommended that you use safety devices such as an electrical leakage breaker or a smoke detector.*

◆ Available optional signals

RASC units have the following signals that are described in the following table.

These signals are set up through the PCB of the RASC unit.



NOTE

Do not set same function to multiple input/output ports. If set, the setting of the higher input/output number is cleared to 00.

Input signals (CN1 and CN2)

Indication	Input signal	Application
0	No setting application	No setting.
1	Fixing the heating mode	This signal allows to pre-fix the heating operation mode independently of what the indoor unit requests. If the indoor units request the opposite mode than the RASC unit, the compressor does not start.
2	Fixing the cooling mode	This signal allows to pre-fix the cooling operation mode independently of what the indoor unit requests. If the indoor units request the opposite mode than the RASC unit, the compressor does not start. This function is intended for those applications such as computer rooms, where the cooling mode is fixed throughout the year.
3	Demand thermo OFF	This signal allows to stop the compressor as well as to put the indoor unit in Thermo-OFF condition. When the compressor is stopped, this function allows the operation of the indoor unit fans to prevent from air stratification.
4	No setting application	No setting.
5	Forced stoppage	This signal allows to control the stoppage of the compressor and the fans of the indoor as well as RASC units. This function can be useful when used with the alarm signals of the fire prevention systems.
6	Current control demand (60%)	These signals allow to regulate the input current around the selected percentage (60%, 70%, 80% or 100%) of the maximum compressor current. This function provides energy-saving by limiting the installation power consumption.
7	Current control demand (70%)	
8	Current control demand (80%)	
9	Current control demand (100%)	
10	No setting application	No setting.

Output signals (CN7)

Indication	Output signal	Application
0	No setting application	No setting.
1	Operation signal	This signal allows to notify that the unit is operating. It enables to start up additional systems such as humidifiers, fans and other additional air-conditioning systems.
2	Alarm signal	This signal allows to notify that protection devices have been activated and to transfer it to additional systems.
3	Compressor ON signal	This signal allows to notify that the compressor is activated. This function can be applied for situations such as checking signals during remote-control operation and for the interlock of the RASC unit.
4	Defrost operation signal	This signal allows to notify that the unit is under defrosting operation.

◆ Setting of the optional signals

The optional signals of the RASC unit are available for being selected using the PSW switches and 7-segment on the RASC unit PCB.


i NOTE

Before setting the optional signals, the following conditions must be complied:

- RASC unit must be stopped.
- Check mode must not be selected.
- External optional signal must not be connected.

If the initial setting has to be modified, the following instructions must be followed:






- 1 Set pin 4 of DSW1 to ON.
- 2 Set pin 6 of DSW2 to ON. Because of these settings, the input/output signals selection mode becomes available and the following indication appears on the 7-segment display.

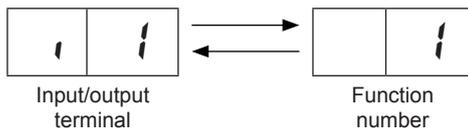

This example indicates that function number 1 "Fixing the heating mode" is set at input 1.

- 3 By pressing the push switches PSW2 and PSW3, the input/output terminal name can be changed. (See the flowchart shown in the side).
- 4 By pressing the push switch PSW1, the function number can be changed. (See the flowchart shown in the side).
- 5 After selecting the function number, return pin 6 of DSW2 to OFF position.
- 6 Set pin 4 of DSW1 to OFF.

The selected contents are memorised in the RASC unit printed circuit board and the function selection mode is stopped. The memorised data is maintained even power source lines are disconnected. The connecting details of each function are described, and the required parts are also indicated in the sections "Description of optional input signals" and "Description of optional output signals" on this chapter.

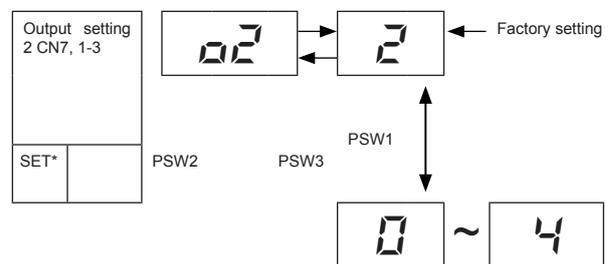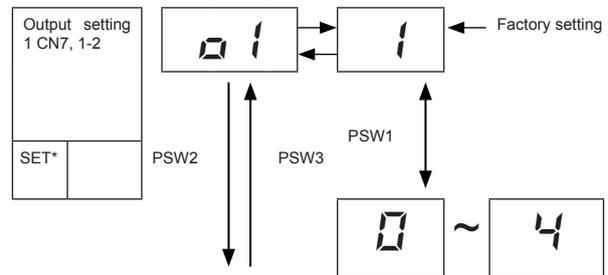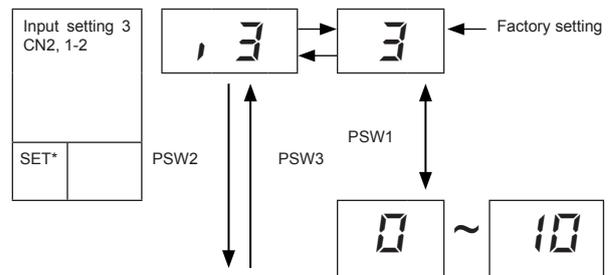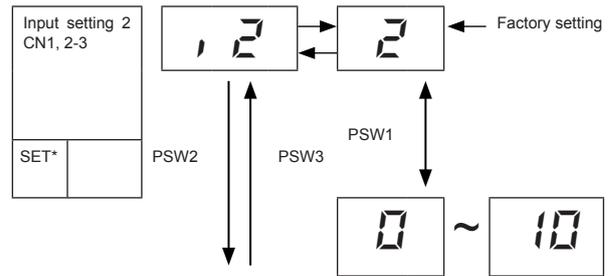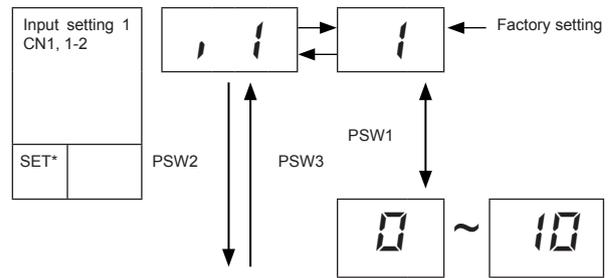

i NOTE

(*) SET*: Blank space is for recording the selected setting.

◆ Description of optional input signals


Fixing operation mode (heating / cooling) (1 / 2)

This input function is fixed in terminal CN1 of the PCB of the RASC unit, to use it as a cooling or heating mode. CN1 must be set up as follows.

- Short circuit between the terminals 1 and 2 of CN1: Set heating mode.
- Short circuit between the terminals 2 and 3 of CN1: Set cooling mode.

After having pre-fixed the established mode, the remote control can only be used to adjust the temperatures. Stoppage code “d1” “20” is displayed if an attempt is made to change the operation mode of any of the indoor units with the remote control.

Example of wiring diagram for fixing the operation mode.

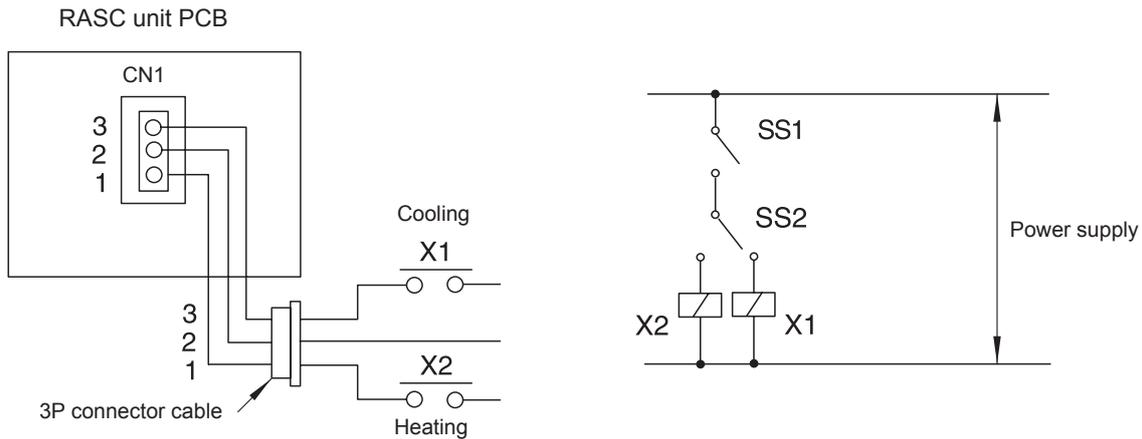

SS1: Fixing operation mode switch

SS2: Changeover switch

X1: Heating

X2: Cooling

Demand thermo OFF (3)

This signal allows to stop the compressor as well as to put the indoor unit in Thermo-OFF condition. When the compressor is stopped, this function allows the operation of the indoor unit fans to prevent air stratification. Stoppage code “d1=10” is displayed on the remote control. If the switch of this function is disconnected, it becomes available again.

Connect the cabling and use the materials as shown in section ["Available ports"](#).



NOTE

For single connection (only for cooling or heating input signal), this setting is not required.

Forced stoppage (5)

This signal allows to control the stoppage of the compressor and the fans of the indoor as well as RASC units. This function can be useful when used with the alarm signals of the fire prevention systems. Stoppage code “d1=10” is displayed on a remote-controlled when this option is turned on. If the switch of this function is disconnected it becomes available again.

Connect the cabling and use the materials as shown in section ["Available ports"](#).

Current control demand (5 / 7 / 8 / 9)

These signals allow to regulate the input current around the selected percentage (60%, 70%, 80% or 100%) of the maximum compressor current. This function provides energy-saving by limiting the installation power consumption.

If the running current of the RASC unit exceeds the maximum limit, the unit changes to the thermo-OFF condition. Stoppage cause code "d1=10" is displayed on the remote control. When the input terminal is opened during the demand current control, the control of the input terminal is reset.

Connect the cabling and use the materials as shown in section "[Available ports](#)".



NOTE

If the input terminals are opened by a timer, etc. on-site and the demand control (ON/OFF) is set with only time conditions, it is recommended to set the time according to the load, not the constant setting time all through the year. The minimum set interval for demand or forced stoppage should be 30 minutes in consideration with the compressor's start/stop frequency and energy-saving.

◆ Description of optional output signals

Operation signal (1)

This signal allows to notify that the unit is operating. It enables to start up additional systems such as humidifiers, fans and other additional air-conditioning systems.

Connect the cabling and use the materials as shown in section "[Available ports](#)".

Note that the contact of auxiliary relay X3 is closed when an operation signal is issued.

Alarm signal (2)

This signal allows to notify that protection devices have been activated and to transfer it to additional systems.

Connect the cabling and use the materials as shown in section "[Available ports](#)".

Note that the contact of auxiliary relay X3 is closed when an operation signal is issued.

Compressor ON signal (3)

This optional signal is used to pick up the signal when the compressor is ON. It can be used to check how the compressor is running at all times. It is very useful for locking the compressor when the fans are locked.

This signal allows to notify that the compressor is activated. This function can be applied for situations such as checking signals during remote-control operation and for locking the compressor when the fans are locked.

Connect the cabling and use the materials as shown in section "[Available ports](#)".

Note that the contact of auxiliary relay X3 is closed when an operation signal is issued.

Defrost operation signal (4)

This signal allows to notify that the unit is under defrosting operation.

Connect the cabling and use the materials as shown in section "[Available ports](#)".

Note that the contact of auxiliary relay X3 is closed when an operation signal is issued.

6.1.2 Input and output signals through remote control switch

In addition to the external signals that can be selected through the 7-segment display on the RASC unit PCB, the remote control switches provide extra input/output signals.

An example of the available external input and output signals through the HITACHI individual remote controls (PC-ARF/PC-ART) is shown below:

Input and output number display and connectors

Input number display Input/Output indication	Port	Factory setting	
		Setting item	Indication
Input 1	CN3 1-2	Remote ON/OFF 1 (Level)	03
Input 2	CN3 2-3	Prohibiting Remote Control after Manual Stoppage	06
Output 1	CN7 1-2	Operation	01
Output 2	CN7 1-3	Alarm	02
Output 3	CN8 1-2	Thermo-ON for Heating	06

Input and output settings and display codes

Indication	Input	Output
00	Not set	Not set
01	Room Thermostat (for Cooling)	Operation
02	Room Thermostat (for Heating)	Alarm
03	Remote ON/OFF 1 (Level)	Cooling
04	Remote ON/OFF 2 (Operation)	Thermo-ON for Cooling
05	Remote ON/OFF 2 (Stoppage)	Heating
06	Forbidding Remote Control after Manual Stoppage	Thermo-ON for Heating
07	Remote Cooling / Heating Change	Total Heat Exchanger
08	Elevating Grille Input (not available for PC-ART)	Elevating Grille Output



NOTE

- After at least 3 minutes from the power ON, change the optional setting.
- The elevating grille input can be set to "Input 2" only. It cannot be set to "Input 1".
- The elevating grille output can be set to "Output 1" or "Output 2" only. It cannot be set to "Output 3".
- Do not set the elevating grille for the total heat exchanger.
- Record the setting conditions for each input and output in the "Setting" column of the table.

6.2 Optional functions

HITACHI units provide a large number of optional functions to adapt the system to the requirements of the customer. Each function is selected from different sources:

- Optional functions through 7-segment display on the RASC unit PCB.
- Optional functions through remote controllers.

6.2.1 Optional functions through 7-segment display on the RASC unit PCB

◆ Setting of the optional functions

The optional functions of the RASC unit are available for being selected using the PSW switches and 7-segment on the RASC unit PCB.




NOTE

Before setting the optional functions, must be complied the following conditions:

- RASC unit must be stopped.
- Check mode must not be selected.
- External optional signal must not be connected.

- 1 Set pin 4 of DSW1 to ON.
- 2 Set pin 5 of DSW2 to ON. Because of these settings, the optional function selection mode becomes available and the following indication appears on the 7-segment display.



This example indicates that optional function “Control of the indoor unit fan during Thermo-OFF in heating mode” is available.

- 3 By pressing the push switches PSW2 and PSW3, the optional function can be changed. (See the flowchart shown in the next page).
- 4 By pressing the push switch PSW1, the availability of this optional function can be selected. (See the flowchart shown in the next page).
- 5 After selecting the function number, return pin 5 of DSW2.
- 6 Set pin 4 of DSW1 to OFF.

The selected contents are memorised in the RASC unit printed circuit board and the function selection mode is stopped. The memorised data is maintained even power source lines are disconnected. The details of each function are described in the section “*Setting of the optional functions*” on this chapter.



NOTE

(*) SET*: Blank space is for recording the selected setting.


	① ↓ SEG2	③ ↑ SEG1			② ↓ SEG2	④ ↑ SEG1		
Control of the indoor unit fan during Thermo-OFF in heating mode	FA	0	Not Available	Opening of the indoor expansion valve during heating operation stoppage	51	0	Not Available	
SET*				SET*				
	PSW2 ↑ ↓ PSW3	PSW1 ↑ ↓ PSW3	Available		PSW2 ↑ ↓ PSW3	PSW1 ↑ ↓ PSW3	Available	
		1				1~2		
Night mode (Low noise)	n1	0	Not Available	Opening of the indoor expansion valve during heating thermo-OFF	50	0	Not Available	
SET*				SET*				
	PSW2 ↑ ↓ PSW3	PSW1 ↑ ↓ PSW3	Available		PSW2 ↑ ↓ PSW3	PSW1 ↑ ↓ PSW3	Available	
		1				1~2		
Cancellation of outdoor ambient temperature limit	05	0	Not Available	Initial opening of the indoor expansion valve at starting in heating operation	51	0	Not Available	
SET*				SET*				
	PSW2 ↑ ↓ PSW3	PSW1 ↑ ↓ PSW3	Available		PSW2 ↑ ↓ PSW3	PSW1 ↑ ↓ PSW3	Available	
		1~3				1~2		
Change of defrost condition	d0	0	Not Available	Low noise setting	db	0	Not Available	
SET*				SET*				
	PSW2 ↑ ↓ PSW3	PSW1 ↑ ↓ PSW3	Available		PSW2 ↑ ↓ PSW3	PSW1 ↑ ↓ PSW3	Available	
		1				1		
"Slow" fan speed during defrost operation	bd	0	Not Available	Fixing of current control demand function	de	0	Not Available	
SET*				SET*				
	PSW2 ↑ ↓ PSW3	PSW1 ↑ ↓ PSW3	Available		PSW2 ↑ ↓ PSW3	PSW1 ↑ ↓ PSW3	Available	
		1				1		
Not available	HF	0	Not Available	Wave function setting	ue	0	Not Available	
SET*				SET*				
	PSW2 ↑ ↓ PSW3	PSW1 ↑ ↓ PSW3	Available		PSW2 ↑ ↓ PSW3	PSW1 ↑ ↓ PSW3	Available	
		1				1		
Capacity adjustment for long piping	nd	0	Not Available	Cold draft protection	Fb	0	Not Available	
SET*				SET*				
	PSW2 ↑ ↓ PSW3	PSW1 ↑ ↓ PSW3	Available		PSW2 ↑ ↓ PSW3	PSW1 ↑ ↓ PSW3	Available	
		1				1~2		
Target value of compressor frequency control in cooling operation	Hc	0	Not Available	Cancellation of hot gas bypass control	E1	0	Not Available	
SET*				SET*				
	PSW2 ↑ ↓ PSW3	PSW1 ↑ ↓ PSW3	Available		PSW2 ↑ ↓ PSW3	PSW1 ↑ ↓ PSW3	Available	
		1				1		
Target value of compressor frequency control in heating operation	Hh	0	Not Available	Forced stoppage after defrost operation	ds	0	Not Available	
SET*				SET*				
	PSW2 ↑ ↓ PSW3	PSW1 ↑ ↓ PSW3	Available		PSW2 ↑ ↓ PSW3	PSW1 ↑ ↓ PSW3	Available	
		1				1		
Not prepared	5c	0	Not Available	Defrost control in current control demand mode	F1	0~1	Not Available	
SET*				SET*				
	PSW2 ↑ ↓ PSW3	PSW1 ↑ ↓ PSW3	Available		PSW2 ↑ ↓ PSW3	PSW1 ↑ ↓ PSW3	Available	
		1				1		
	② ↓	④ ↑		Setting of the fan performance curves	F2	0~2		
				Compressor heater control mode (for 4 to 6 HP)	F3	0~1		
				Not available	F4~F6	0		
					① ↓	③ ↑		

◆ **Description of the optional functions**

Control of the indoor unit fan during Thermo-OFF in heating mode (F_{FI})

The fan of the indoor units stops when the unit is in defrost operation. This function forces a start-and-stop cycle of the indoor unit fan to prevent air stratification.

The start-and stop cycle operates as follows:

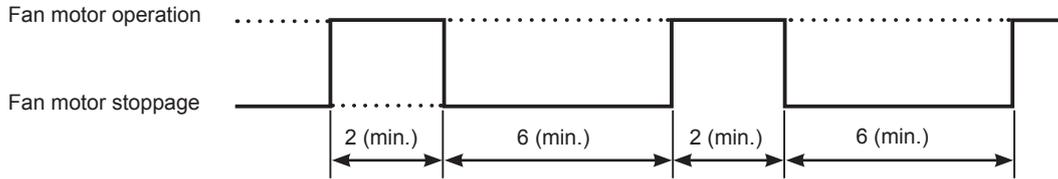


i NOTE

When the indoor fans are stopped due to unit control, they remain stopped even if this function is enabled.

Night mode (Low noise) (r i)

This function reduces the outdoor fan speed and the maximum compressor frequency value in cooling operation according to the outdoor air temperature in order to reduce sound in low load conditions.

- Outdoor fan operation during this function:

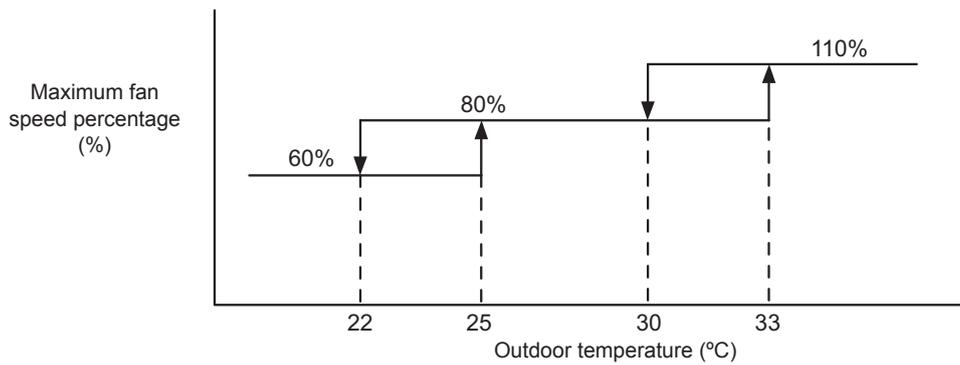

i NOTE

This function is only available in cooling operation for outdoor temperatures below 30°C.

- Compressor operation during this function: The maximum limit of compressor frequency is lowered to approximately 50-60% of the maximum standard value.

Cancellation of outdoor ambient temperature limit (L5)

This function allows the operation of the units under unfavourable outdoor ambient temperature conditions compared to normal conditions (higher outdoor air temperatures in heating operation and lower outdoor air temperatures in cooling operation).

This function can be applied for heating operation, cooling operation or for both.

Setting condition	Operation mode for cancellation
□	Not available (default setting)
1	Heating
2	Cooling
3	Heating / Cooling


⚠ CAUTION

Do not activate this function frequently, since the unit could be damaged.

Change of defrost condition (L6)

This function allows to shift the temperature conditions in order to cause an earlier defrosting.

It is useful in installations placed in very cold regions, where frost generates continuously; enabling an earlier defrosting operation results in a lower amount of accumulated frost, therefore keeping higher heating capacity values.

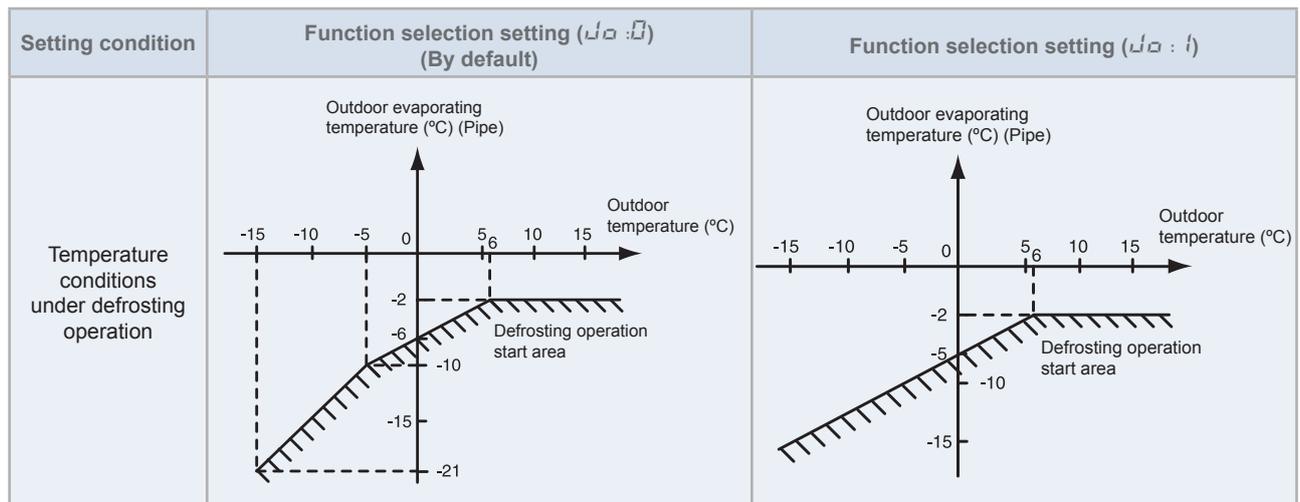

“Slow” fan speed during defrost operation (L7)

The fan of the indoor units stops at low discharge pressures during and after defrost operation. This function allows to set the fan speed of the indoor unit fan to “Slow”.

It helps to prevent air stratification and to avoid cold draft after defrosting.

Setting condition	Indoor fan operation
□	Indoor fan stop during defrost operation
1	Indoor fan “Slow” during defrost operation

i NOTE

For indoor units without “Slow” fan speed setting, the fan speed is adjusted to “Low”.

Capacity adjustment for long piping (rL)

This function modifies the parameters for compressor frequency calculation to achieve a faster compressor response. It is convenient for installations with long refrigerant piping length.

Target value of compressor frequency control in cooling operation (Control function (Hc))

This function allows to modify the compressor frequency range in cooling mode.



NOTE

For more information about this function, please contact with your HITACHI dealer.

Target value of compressor frequency control in heating operation (Control function (Hh))

This function allows to modify the compressor frequency range in heating mode.



NOTE

- This function has no effect on RASC-(5/6/8)HNPE.
- For more information about this function, please contact with your HITACHI dealer.

Opening of the indoor expansion valve during heating operation stoppage (Control function (S i))

This function allows to modify the opening of the indoor unit expansion valves during heating operation stoppage to opening values higher than the standard opening value in heating operation stoppage.



NOTE

For more information about this function, please contact with your HITACHI dealer.

Opening of the indoor expansion valve during heating thermo-OFF (Control function (S o))

This function allows to modify the opening of the indoor unit expansion valves during heating thermo-OFF operation to opening values higher than the standard opening value in heating thermo-OFF operation.



NOTE

For more information about this function, please contact with your HITACHI dealer.

Initial opening of the indoor expansion valve at starting in heating operation (Control function (c i))

This function allows to modify the opening of the indoor unit expansion valves when the unit is starting in heating operation.

It is practical as a support of the optional function "Slow fan speed during defrost operation (bW)".



NOTE

For more information about this function, please contact with your HITACHI dealer.

Low noise setting (Control function (dB))

This function allows to set the maximum compressor frequency and the maximum outdoor fan speed to a value slightly lower than the standard maximum value. Unlike optional function "Night mode (r 1)", this setting can be enabled regardless of outdoor air temperature.

It is conceived for installations where sound level needs to be reduced.

- Outdoor fan operation during this function: The fan speed is lowered to approximately 90% of the maximum value.
- Compressor operation during this function: The compressor frequency is reduced to 80% of the maximum value.



NOTE

- Cooling and heating capacities decrease while this function is activated.
- When optional functions "Compressor frequency control target value for cooling/heating operation (Hc / Hh)" are enabled, this function has no effect.

Fixing of current control demand function (dE)

This function allows to regulate the input current around the percentage of the maximum compressor current which has been selected through external input signals on the 7-segment display (60%, 70%, 80% or 100%), without the need to short-circuit the input terminals (CN1 or CN2).

The following table shows the current control demand setting according to the input signal which has been selected:

Input signal function number	Running current control demand
00 ~ 05, 10	100%
06	60%
07	70%
08	80%
09	100%

This function can be activated when current control demand function is selected at one of the input terminal indications 1, 2 and 3. In case that multiple current control demand functions are set at the input terminal indications 1, 2 and 3, the lower settings have preference over the higher settings:

60% > 70% > 80% > 100% (Control function number)




NOTE

If no external input signals are set, the input current control is set at 100%.


- Demand control:

Energy saving has been largely improved by adopting the self-demand function, which drastically decreases power consumption.

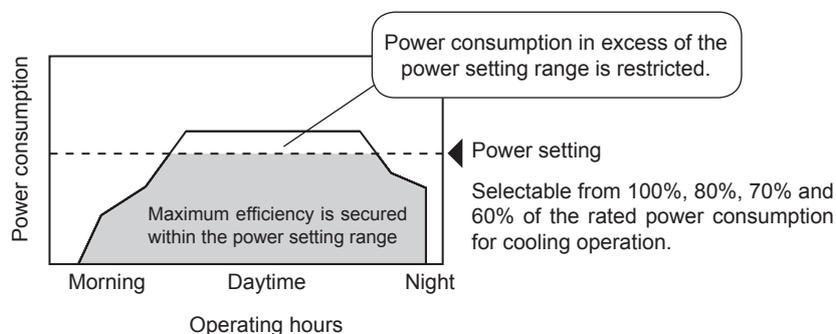

Wave function setting (*LfE*)

This function activates a continuous wave cycle for the control of input current (20 minutes at 100% of maximum compressor current, and 10 minutes at the percentage which has been selected through external input signals on the 7-segment display (60%, 70%, 80% or 100%)) (CN1 or CN2).

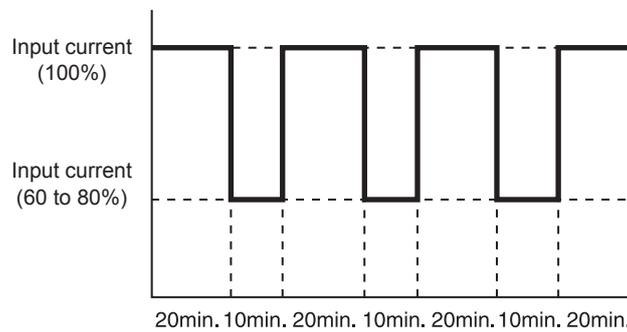

This function can be activated when current control demand function is selected at one of the input terminal indications *i1*, *i2* and *i3*.



NOTE

- If no external input signals are set, the input current control is set at 100%.
- The minimum limit of running current control is according to the set value of the demand function.

Cold draft protection (*Fb*)

This function allows to reduce the compressor frequency when the discharge air temperature in the indoor unit falls below 12°C in cooling operation. This is done in order to avoid the direct discharge of cold air.

Depending on the setting of "Cold draft protection" function, the SVA (Solenoid valve for high pressure bypass) is turned ON.

Setting condition	Temperature (°C)	Condition
<i>0</i>	-	Not available (default setting).
<i>1</i>	< 12	Cold draft is prevented thanks to the compressor frequency control and turning ON SVA (solenoid valve for high pressure bypass circuit).
<i>2</i>	< 12	Cold draft is prevented thanks to the compressor frequency control.

Cancellation of hot gas bypass control (*E1*)

When this function is selected, the activation of hot gas bypass circuit between compressor discharge and heat exchanger inlet is not performed. The hot gas bypass circuit is intended to reduce the amount of frost at the heat exchanger.

Enabling this function, the number of defrost cycles is reduced while slightly reducing the heating capacity.

Forced stoppage after defrost operation (*d5*)

This function allows to stop the indoor unit fans after defrost operation is finished. The indoor unit fan operation is started again once 3-minute ON guard for indoor units has finished. Then, the heating operation is restarted.

It is helpful to avoid the direct discharge of cold air after defrost operation.

Defrost control in current control demand mode (F 1)

This function allows to reduce the accumulated heating operation time and to force an earlier defrosting operation.

It is practical as a support of optional function "Fixing of current control demand function (dE)".

Setting of the fan performance curves (F 2)


This function allows to adjust the fan operation settings of RASC-(6/8/10)NPE units in order to achieve an optimal performance of the fan unit. The correct static pressure setting (Low / Medium / High) has to be selected according to the pressure values below:

- RASC-(4/5)HP: No setting is required.
- RASC-(6/8)HP: Select the "Medium pressure setting (F 2 : 1)" for external static pressures higher than 50 Pa.
- RASC-10HP: Select the most suitable static pressure setting, depending on the installation conditions:
 - "Medium pressure setting (F 2 : 1)": For external static pressures between 50 and 80 Pa.
 - "High pressure setting (F 2 : 2)": For external static pressures higher than 80 Pa.

Default value: "Low pressure setting (F 2 : 0)"

In order to do so, measure the fan motor current and set the static pressure setting according to the following table: For the measurement of the fan motor current, please refer to the following drawing:

Model	Fan motor current (A)	
	Medium pressure setting (F 2 : 0 → 1)	High pressure setting (F 2 : 0 → 2)
RASC-6HP	< 1.40 A	-
RASC-8HP	< 3.10 A	-
RASC-10HP	2.65 ~ 3.10 A	< 2.65

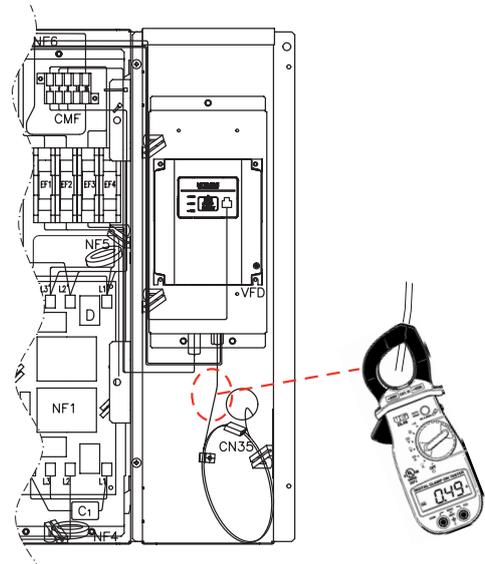

Compressor heater control mode (F 3) (Only for RASC-(4-6)HNPE)

When the system is in stand-by mode, the crankcase heater is ON to ensure an optimum temperature of the compressor's oil when the unit is required to start operation. This causes an additional heater input while the system is not expected to start.

This function switches the crankcase heater OFF in stand-by mode; therefore saving energy while the unit is not running.

⚠ CAUTION

When starting up the system again, it remains in thermo-OFF mode until compressor oil is at an optimal temperature to start operation. It is not recommended to use this control mode when immediate system starting is expected. The preparation time for the starting does never exceed 4 hours.

6.2.2 Optional functions through remote control switch

In addition to the possible optional functions through the 7-segment display of the RASC unit's PCB and through DIP switch setting, there are available a large quantity of optional functions for each remote control switch connected to the system.

An example of the available optional functions through the HITACHI individual remote controls (PC-ARF/PC-ART) is shown below:



NOTE

For the detailed information about optional functions through remote controls, please refer to the Technical catalogue of Packaged controllers.

Element	Optional function	Individual setting	Settings	Setting conditions	Description
b1	Removal of heating temperature compensation	O	00	Standard setting. It increase the temperature +4°C	This function is used when the temperature setting displayed on the remote control switch and the inlet air temperature of the indoor unit must be the same.
			01	Removal	
			02 (*1)	It increase the temperature +2°C	
b2	Circulator function at heating Thermo-OFF	O	00	Not activated function	This function means that the fan unit remains running at the same speed during Thermo-OFF condition to prevent the air in the room from stratifying.
			01	Activated function	
b3	Forced compressor operation for at least 3 minutes	O	00	Not activated function	This function is used to protect the compressor, preventing it from being started or stopped for periods of less than three minutes.
			01	Activated function	
b4	Pre-determined filter cleaning period change	O	00	Standard (1200 h factory setting) (*2)	This function is used to modify the period until the next display of filter cleaning sign.
			01	100 hours	
			02	1200 hours	
			03	2500 hours	
			04	No indication	
b5	Fixing of operation mode	X	00	Not activated function	Once the unit operating mode has been selected, this function prevents it from being modified from the remote control.
			01	Activated function	
b6	Fixing of setting temperature	X	00	Not activated function	Once the unit temperature has been selected, this function prevents it from being modified from the remote control.
			01	Activated function	
b7	Fixing of cooling operation	X	00	Not activated function	This function is available to use cooling mode only and to prevent heating mode from being enabled.
			01	Activated function	
b8	Automatic COOL/ HEAT operation	X	00	Not activated function	This function allows the automatic change from the cooling to the heating mode for the units with the same refrigerant cycle.
			01	Activated function	
b9	Fixing of indoor unit fan speed	X	00	Not activated function	Once the indoor unit fan speed has been selected, this function prevents it from being modified from the remote control.
			01	Activated function	
bA	Not available	X	"_ _" permanent	Not available	–

Element	Optional function	Individual setting	Settings	Setting conditions	Description
bb	Cooling temperature compensation	X	00	Standard setting. No compensation	This function is used to obtain longer cooling periods. When this function is enabled, Thermo-ON/OFF is controlled under lower temperature conditions than the setting temperature by the remote control switch.
			01	It decrease the temperature -1°C	
			02	It decrease the temperature -2°C	
bC	Not available	-	00	Not available	-
			01	(Used as 00 conditions)	
bd	Not available	-	00	Not available	-
			01	(Used as 00 conditions)	
bE	Not available	-	00	Not available	-
			01	(Used as 00 conditions)	
C1	Not available	-	00	Not available	-
			01	(Used as 00 conditions)	
C2	Not available	-	"_ _" permanent	Not available	-
C3	Not available in the European market	O	00	Not available	-
			01	(Used as 00 conditions)	
C4	Drain pump in heating mode	O	00	Not activated function	This function is used to activate the drain pump in heating mode.
			01	Activated function	
C5	Static pressure selection (RPI)	O	00	Standard static pressure (factory set)	This function is used to change the static pressure of the RPI units from the remote control.
			01	High static pressure	
			02	Low static pressure	
	Increasing fan speed		00	Not available	This function is used to change the indoor units fan speed installed in high ceilings.
			01	Hi Speed 1 (*3)	
			02	Hi Speed 2 (*3)	
C6	High speed at heating Thermo-OFF	O	00	Not activated function	This function is used to increase the fan speed when the thermostat reaches the set temperature in heating using function C5.
			01	Activated function	
C7	Cancellation of the forced compressor operation for at least 3 minutes	O	00	Not activated function	This function is used to cancel the function b3 (Forced compressor operation for at least 3 minutes).
			01	Activated function	
C8	Thermistor of remote control switch	O	00	Not available	This function determines the thermistor to control the air temperature. i NOTE If THM-R2AE accessory is installed, these setting have different meaning.
			01	Air temperature control using the remote control thermistor	
			02	Air temperature control using the average value of the air inlet thermistor and the remote control thermistor	
C9	Not available	-	"_ _" permanent	Not available	-
CA	Not available	-	"_ _" permanent	Not available	-

Element	Optional function	Individual setting	Settings	Setting conditions	Description
Cb	Selection of forced stoppage logic	X	00	A contact: Closed contact for forced stoppage	This function determines the logic operation for the forced stoppage contacts.
			01	B contact: Open contact for forced stoppage	
CC	Not available	X	00	Not available	-
			01	(Used as 00 conditions)	
Cd	Not available	O	00	Not available	-
			01	(Used as 00 conditions)	
CE	Not available	O	00	Not available	-
			01	(Used as 00 conditions)	
CF	Change of louver swing angle	O	00	Standard (7 steps)	<p>This function adjusts the angle of the air outlet louver.</p>
			01	Draft prevention (5 steps)	
			02	High ceilings (5 steps)	
d1	Power supply ON/OFF 1	O	00	Not activated function	This function stores the unit settings in the event of a power cut. The unit is restarted when the power is re-established.
			01	Activated function	
d2	Not available	X	“-” permanent	Not available	-
d3	Power supply ON/OFF 2	O	00	Not activated function	This function is used to restart the unit automatically after a power failure lasting more than 2 seconds. (3-minute compressor OFF guard applies).
			01	Activated function	
d4	Prevention of discharge air temperature drop in cooling operation	O	00	Not activated function	This function changes the cooling operating conditions to avoid cold drafts.
			01	Activated function	
d5	Prevention of discharge air temperature drop in heating operation	O	00	Not activated function	This function prevents a drop in the air temperature by decreasing the fan speed, regardless fan speed setting on the remote control.
			01	Activated function	
d6	Room temperature control for energy saving	O	00	Not activated function	This function saves energy when the outdoor air temperature thermistor detects from the outdoor temperature that the air-conditioning load is low
			01	Activated function	
d7	Fall distance of elevating panel (Indoor units with the elevating grille function only) (Not available in the European Market)	O	00~07	Not available (Used as 00 conditions)	-

Element	Optional function	Individual setting	Settings	Setting conditions	Description
E1 (*4)	KPI: ventilation mode	O	00	Automatic ventilation	This function is used to set the unit ventilation mode with energy / heat recovery.
			01	Ventilation with total heat exchanger	
			02	Ventilation with bypass (no total heat exchange)	
	Econofresh: All fresh mode		00	Not available	This function allows to open the damper totally to activate the all fresh mode.
	01/02		Outdoor cooling mode (all-fresh)		
E2 (*4)	KPI: Increasing air supply volume	O	00	Not activated function	This function is used to increase the air supply pressure in the room.
	01		Activated function		
	Econofresh: Enthalpy sensor		00	Not activated function	This function selects the enthalpy sensor input.
			01	Activated function	
E3 (*4)	Not available	O	00	Not available	-
			01	(Used as 00 conditions)	
E4 (*4)	KPI: Pre-cooling / pre-heating period	O	00	Standard	This function delays the unit start-up with energy / heat recovery.
			01	30 minutes	
			02	60 minutes	
	Econofresh: gas sensor		00	Standard	This function selects the gas sensor input.
			01/02	CO ₂ sensor	
E5	Not available	O	00	Not available	-
			01	(Used as 00 conditions)	
E6	Indoor fan operation time after cooling operation stoppage	O	00	Not activated function	This function prevents the condensation accumulation in the unit by keeping the fan running after it is switched off, as well as to prevent mildew or abnormal odours.
			01	60 minutes	
			02	120 minutes	
E7	Not available	O	00	Not available	-
			01	(Used as 00 conditions)	
E8	Fan operation control at heating Thermo-OFF	O	00	Not activated function	This function reduces the indoor unit fan speed during heating thermo-OFF to prevent cold drafts.
			01	Activated function	
E9	Not available	O	00	Not available	-
			01	(Used as 00 conditions)	
EA	Not available	O	00	Not available	-
			01	(Used as 00 conditions)	
Eb	Fan operation control at cooling Thermo-OFF	O	00	Not activated function	This function decreases the indoor unit fan speed during cooling thermo-OFF to reduce the spreading of odours and humidity.
			01	Low	
			02	Slow	
EC	Forced Thermo-ON stoppage at cooling operation	O	00	Not activated function	This function is used to stop the operation by forced thermo-ON operation when cooling is complete.
			01	Available	
Ed	Not available	O	00	Not available	-
			01	(Used as 00 conditions)	
EE	Automatic fan speed control	O	00	Not activated function	This function limits the unit operation by automatically controlling the fan speed when the room temperature is close to the set temperature.
			01	Activated function	

Element	Optional function	Individual setting	Settings	Setting conditions	Description
F0	Not available	-	-	Not used	-
F1	Automatic OFF timer setting	X	00	Not activated function	<p>This function is used to set the automatic timer to switch off when the unit has been started by remote control.</p> <p>Do not set the functions "0C"- "0F" when two remote control switches are used in the same remote control group.</p> <p>(Settings 0C, 0D, 0E and 0F are not available for PC-ART).</p>
			01	1 hour	
			02	2 hours	
			03-24	(03-24) hours	
			0A	30 minutes	
			0B	90 minutes	
			0C	40 minutes	
			0D	45 minutes	
			0E	50 minutes	
0F	55 minutes				
F2 (*5)	Remote control Master-Slave setting	X	00	Master	<p>This function is used when two remote controls are installed in a system. One of them has to be set as "Master" and the other one as "Slave".</p>
			01	Slave	
F3 (*6)	Automatic reset of setting temperature	X	00	Not activated function	<p>When this function is activated, once a defined time (F4) has passed after the last change in the setting temperature by using the remote control switch, the setting temperature returns to the selected cooling (F5) or heating (F6) temperature values.</p> <p>This function provides energy-saving.</p>
			01	Activated function	
F4	Automatic reset time	X	00	30 minutes (factory setting)	<p>This function is used to set the automatic reset time with the temperature setting.</p>
			01	15 minutes	
			02	60 minutes	
			03	90 minutes	
F5	Automatic reset temperature for cooling	X	19-24	(19-24) °C	<p>This function is used to set the automatic temperature reset in FAN/COOL/DRY modes.</p>
			25	25 °C (factory setting)	
			26-30	(26-30) °C	
F6	Automatic reset temperature for heating	X	17-20	(17-20) °C	<p>This function is used to set the automatic temperature reset in HEAT mode.</p>
			21	21 °C (factory setting)	
			22-30	(22-30) °C	
F7 (*7)	Operation stoppage prevention by remote control switch operational error	X	00	Not activated function	<p>This function is used to prevent the careless operational stoppage caused by remote control switch operational error.</p>
			01	Activated function	
F8	Lock function for operation mode selection	X	00	Not activated function	<p>This function is used to prevent changes to the operating mode.</p>
			01	Activated function (factory setting)	
F9	Lock function for temperature setting	X	00	Not activated function	<p>This function is used to prevent changes to the temperature setting.</p>
			01	Activated function (factory setting)	
FA	Lock function for fan speed selection	X	00	Not activated function	<p>This function is used to prevent changes to the fan speed.</p>
			01	Activated function (factory setting)	

Element	Optional function	Individual setting	Settings	Setting conditions	Description
Fb	Lock function for swing louvre operation	X	00	Not activated function	This function is used to prevent changes to automatic louvre operations.
			01	Activated function (factory setting)	
Fc	Lower limit of setting temperature for cooling operation	X	00	Standard	This function is used to limit the lowest setting temperature for FAN/COOL/DRY modes.
			01	Lower limit +1 °C	
			02	Lower limit +2 °C	
			03-08	Lower limit +(03-08) °C	
			09	Lower limit +9 °C	
			10	Lower limit +10 °C	
Fd	Upper limit of setting temperature for heating operation	X	00	Standard	This function is used to limit the highest setting temperature for HEAT mode. (Settings 11 and 12 are not available for PC-ART).
			01	Lower limit -1 °C	
			02	Lower limit -2 °C	
			03-10	Lower limit -(3~10) °C	
			11	Lower limit -11 °C	
			12	Lower limit -12 °C	
FE	Not available	-	00	Not available	-
			01	(Used as 00 conditions)	
			02		
FF	PC-ART: Lock function for timer	X	00	Not activated function	This function is used to lock timer activation.
			01	Activated function (factory setting)	
	PC-ARF: Not available	-	00	Not available	-
			01	(Used as 00 conditions)	
H1	PC-ART: Maintenance alarms	O	00	Display	This function is used to display or hide maintenance alarms.
			01	Hide	
	PC-ARF: Not available	-	00	Not available	-
			01	(Used as 00 conditions)	
H2	PC-ART: Automatic control indication	O	00	Display	This function is used to display or hide the automatic control indication.
			01	Hide	
	PC-ARF: Indication of hot start	X	00	Display	This function is used to display or hide the Hot start "HOT-ST" control indication.
			01	Hide	
H3	PC-ART: Operating mode change restriction	O	00	Operating mode change disabled (factory setting)	This function is used to configure restrictions to the operation mode.
			01	Operating mode set by the central control + FAN mode	
			02	Unlimited operating mode	
	PC-ARF: Not available	-	00	Not available	-
			01	(Used as 00 conditions)	

Element	Optional function	Individual setting	Settings	Setting conditions	Description
H4	PC-ART: Operating modes for the ventilation unit with energy / heat recovery	O	00	Air conditioning only	This function allows to select the operation mode for KPI units. (Only available for KPI units)
			01	Ventilation only	
			02	Air conditioning + ventilation	
	PC-ARF: Not available	–	00	Not available	–
H5	PC-ART: Central control available after forced stoppage	O	00	Not available	This function allows the central control after the forced stoppage of the unit.
			01	Available	
	PC-ARF: Not available	–	–	Not available (Used as 00 conditions)	–
J1 (*8)	Temperature indication	X	00	Not available	This function is used to display the sensor temperature on the remote control switch. This temperature depends on the setting value of optional function (C8) and on the use of remote sensor (THM4) (Displayed on PC-ARF only)
			01	Available	
J2	Not available	–	–	Not used	(Displayed on PC-ARF only)
J3	Run indicator colour	X	00	Green	This function allows to select the colour of run indicator between green and red. (Displayed on PC-ARF only)
			01	Red	
J4	Not available	–	00	Not available	(Displayed on PC-ARF only)
			01	(Used as 00 conditions)	
			02	(Used as 00 conditions)	
J5	Not available	X	00	Not available	(Displayed on PC-ARF only)
			01	(Used as 00 conditions)	
J6	Error sound	X	00	Once	(Displayed on PC-ARF only)
			01	Sequence	
J7	Not available	–	00	Not available	(Displayed on PC-ARF only)
			01	(Used as 00 conditions)	
J8 (*9)	Eco-operation	X	00	Not activated function	When this function is activated, the setting temperature returns to the selected cooling (F5) or heating (F6) temperature values by restarting the operation using the RUN/STOP button on the remote control switch. This function provides energy-saving. (Displayed on PC-ARF only)
			01	Activated function	
J9	Not available	–	00	Not available	(Displayed on PC-ARF only)
			01	(Used as 00 conditions)	
JA	Not available	–	00	Not available	(Displayed on PC-ARF only)
			01	(Used as 00 conditions)	
Jb	Not available	–	00	Not available	(Displayed on PC-ARF only)
			01	(Used as 00 conditions)	
K1	Not available	X	–	Not used	(Displayed on PC-ARF only)
K2	Not available	X	–	Not used	(Displayed on PC-ARF only)
K3	Not available	X	–	Not used	(Displayed on PC-ARF only)
K4	Not available	–	00~03	Not used	(Displayed on PC-ARF only)

Element	Optional function	Individual setting	Settings	Setting conditions	Description
K5 (*10)	Human sensor detection level	-	00	Standard	This function allows to modify the conditions for the detection of human activity. (Displayed on PC-ARF only)
			01	High sensitive	
			02	Low sensitive	

O: Allows for individual setting.

X: The setting is made for all RASC units.

-: Not used.

(*1): Setting "02" is not available on all indoor units.

(*2): In case of RPK indoor units, the factory setting 00 is 200 hours.

(*3): On RPI units: 00 Increases speed 1 (standard), 01 Increases speed 2 (high static pressure), 02 Standard speed (low static pressure).

(*4): E1 to E4: Setting for the total heat exchanger KPI and Econofresh.

(*5): If function F2 is set up 01 (Sub) is displayed "--".

(*6): In case that the set temperature is changed and kept within the set time at "F4", the temperature is automatically changed to "F5" and "F6". In case that the set temperature is out of range at "F5" and "F6", it is applied within upper and lower limit for the set temperature.

(*7): Operation is stopped by pressing the run/stop switch for 3 seconds.

(*8): The sensor value at "C8" will be indicated. When the thermistor for remote control switch is used, the average value of the thermistor for remote control switch and the thermistor for indoor inlet will be indicated.

(*9): When the unit is restarted by the remote control switch, the temperature automatically changes to the setting temperature of "F5" or "F6".

(*10): This function is for air panel with motion sensor. If the air panel don't have available the motion sensor, setting condition is displayed as "--".



NOTE

- Make the changes to the optional settings at least three minutes after start-up.
- On modifying the "CF" (air outlet louvre angle change) setting, restore the power supply or allow the automatic louvre to make a full cycle in automatic mode to apply the optional setting.
- The optional function settings are different depending on the indoor or RASC units. Check that the unit has or not the optional setting.
- The above optional functions with "X" mark at the individual setting can change the condition only when "All Rooms" is set.

7 . Commissioning

Index

7.1. Checking procedure before the test run	110
7.2. Test run procedure using the remote control switch (PC-ARF)	112
7.3. Test run procedure using the remote control switch (PC-ART)	115
7.4. Test run procedure using the wireless remote control switch (PC-LH3A)	117
7.5. Test run procedure from the RASC unit	119
7.6. Check list.....	120
7.6.1. Check list on test run	120
7.6.2. Check list on compressor	121

7.1 Checking procedure before the test run

When the installation is finished, perform the test run according to the following procedures. After performing the test run, hand over the system to the customer.

Perform the test run of the indoor units one by one in order.

Make sure that the electrical wiring and the refrigerant piping are correctly connected.

Start the indoor units one by one in order to make sure that the indoor units are correctly numbered.



DANGER

- **Do not operate the system until all the check points have been cleared.**
- **Measure the resistance between the ground and the terminal of the electrical components. Make sure that the electrical resistance is more than 1 MΩ. Otherwise, do not operate the system until you find the electrical leakage and you repair the electrical leakage. Do not apply voltage on the terminals for transmission 1 and 2. (*)**
- **Pay attention to the following items while the system is running.**
 - **Do not touch any of the parts at the discharge gas side with your hands because the compressor chamber and the pipes at the discharge gas side are hot at a temperature that is higher than 90°C.**
 - **DO NOT PUSH THE BUTTON OF THE MAGNETIC SWITCH(ES). If you do, you will cause a serious accident.**
- **Do not touch any electrical components for more than three minutes after turning OFF the main switch.**



Checking procedure

- 1 Make sure that the stop valve of the gas line and the stop valve of the liquid line are fully open.
- 2 Make sure that there is no refrigerant leakage. The flare nuts sometimes loosen because of the vibration during the transportation.
- 3 Make sure that the refrigerant piping and the electrical wiring belong to the same system. Make sure that the setting of the unit number of DSW1, DSW6 and RSW1 of indoor units correspond to the system.
- 4 Make sure that the setting of the DIP switches on the printed circuit board of the indoor units and the RASC units are correct. Especially, pay attention to the setting of the lift between the indoor units and the RASC units. Refer to [“4. Electrical and control settings”](#) for details.
- 5 Make sure that the switch on the main power source has been ON for more than twelve hours in order to warm the compressor oil by means of the oil heater.
- 6 Check whether or not the electrical wiring of the indoor units and the RASC units are connected as shown in chapter [“4. Electrical and control settings”](#).
- 7 Make sure that each wire terminal (L1, L2, L3 and N, or L1 and N for single phase) is correctly connected at the power source.



NOTE

- *Make sure that the field-supplied electrical components (main switch fuse, fuse-free breaker, earth leakage breaker, wires, conduit connectors and wire terminals) have been properly selected according to the electrical data in the technical catalogue of the unit. Also, make sure that the field-supplied electrical components comply with the national codes and the local codes.*
- *Use the shielded cables for the field wiring in order to avoid the electrical noise. (The length of the shielded cable should be less than 1,000 m. The size of shielded cable should comply with the local codes.)*
- *Make sure that the terminals for the power supply wiring (“L1” to “L1” and “N” to “N” of each terminal board for AC380-415V. “R” to “R” and “T” to “T” of each terminal board for AC220V) and the terminals for the intermediate wires between the indoor unit and the RASC unit (Operating Line: terminals of each terminal board for DC12V) coincide correctly. Otherwise, some components could be damaged.*
- *Check to ensure that the crankcase heater is turned ON for more than 4 hours. The operation is not available within 4 hours after turning ON the power supply.*
- *Check to ensure that the main source has been ON for more than 12 hours to warm the compressor oil by the oil heater.*

- *Check to ensure the operating temperature:*
 - *Cooling operation:*
 - ♦ *Indoor DB 21.5°C and above,*
 - ♦ *Indoor WB 16°C and above,*
 - ♦ *Outdoor DB 0°C and above*
 - *Heating operation:*
 - ♦ *Indoor DB 27°C and below.*

(*) About insulation resistance

The insulation might be reduced during a test run or after being left with the main power OFF for a long time, due to refrigerant accumulation in the compressor. Check the following when the insulation resistance lowers to 1 MΩ or below, or in case that the ground-fault circuit interrupter activates:

- 1 Remove compressor cables and measure the insulation resistance of the compressor alone. If the resistance is over 1 MΩ, other insulation failure of electric live part may exist.
- 2 If the resistance is under 1 MΩ, remove compressor cables from the inverter PCB and turn the power ON and energize the oil heater. Measure the resistance after more than three hours of electric current application. If the insulation resistance recovers, the compressor does not have problems. In case that the resistance does not recover, compressor failure may exist. (More time may be required to apply the current depending on the conditions of air, pipe length or the refrigerant).




NOTE

To reconnect the removed compressor cables, re-caulk the terminal using a tool like longnose pliers in order that the Faston terminal does not remain loose.

In case of Earth Leakage Breaker (ELB) activation, please confirm the rated capacity of ELB as well. Earth leakage breaker (ELB) shall be inverter compatible, and select a high-sensitive and high-speed model for sensed current rating under 30 mA (activation time within 0.1 sec).


7.2 Test run procedure using the remote control switch (PC-ARF)

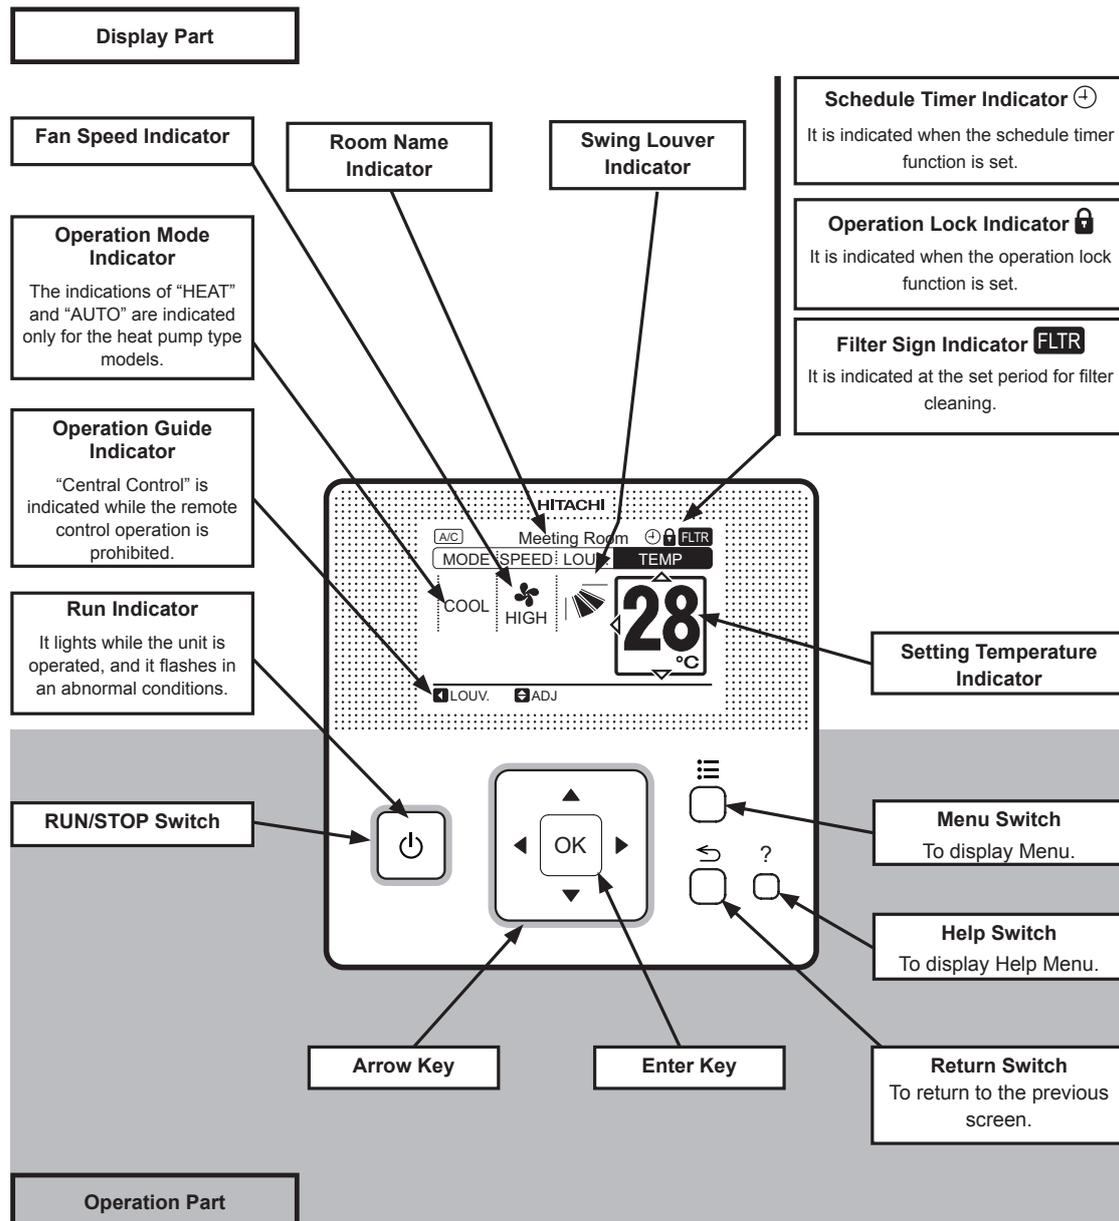


- 1 Turn ON the power supply for all the indoor units.
- 2 For the models with the auto-address function, wait for 3 minutes approximately. The addressing is automatically performed. (There is a case that 5 minutes is required according to the setting condition.) After that, select using language from "Menu". Refer to the operation manual for details.
- 3 Press and hold "☰" (menu) and "←" (return) simultaneously for at least 3 seconds.

- a. The test run menu will be displayed.


Test run screen

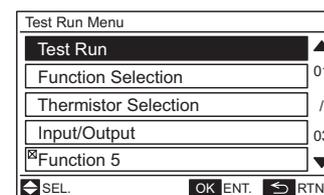


- b. Select "Test Run" and press "OK". The test run settings will be displayed.

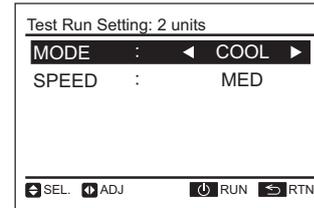
NOTE

When "00" is indicated, the auto-address function may be performing. Cancel "Test Run" mode and set it again.

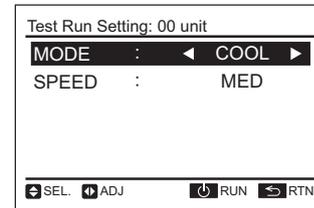


- 4 The total number of the indoor units connected is indicated on the LCD (liquid crystal display). The case of the twin combination (one (1) set with two (2) indoor units) is indicated "2 units", and the triple combination (one (1) set with three (3) indoor units) is indicated "3 units".

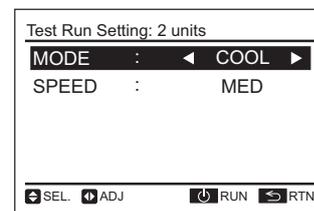


- c. If the indicated number is not equal to the actual connected number of indoor unit, the auto-address function is not performed correctly due to incorrect wiring, the electric noise or etc. Turn OFF the power supply and correct the wiring after checking the following points; (Do not repeat turning ON and OFF within 10 seconds.)
- Power supply for indoor unit is not turned ON or incorrect wiring.
 - Incorrect connection of connecting cable between indoor units or incorrect connection of controller cable.
 - Incorrect setting of rotary switch and dip switch (the setting is overlapped) on the indoor units PCB.
- d. Press "⏻" (run/stop) to start the test run.
- e. Press "△ ▽ ◀ ▶" and set each item.

- 5 Press "⏻" (run/stop). Start the test run when indicating the air flow volume "HIGH" (default setting) and light the operation lamp. At this time, 2-hour OFF timer will be set automatically..

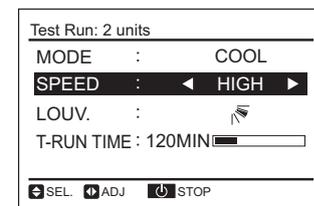


- 6 Press "△" or "▽", select "LOUV." and select "🌀" (auto swing) by pressing "◀" or "▶". The auto swing operation will be started. Check the operating sound at the louvers. If abnormal sound is not generated, press "◀" or "▶" again to stop the auto swing operation.


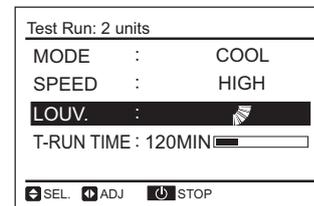


- 7 The temperature detections by the thermistors are invalid though the protection devices are valid during the test run.



- 8 To finish the test run, press “” (run/stop) again or pass over the set test run time. When changing the test run time, press “” or “” to select “T-RUN TIME”. Then, set the test run time (30 to 600 minutes) by pressing “” or “”

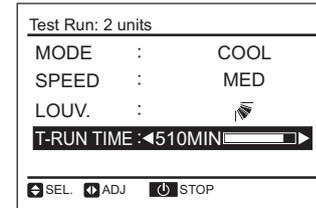

- The RUN indicator on the remote control switch flashes when some abnormalities such as protection devices activated occur during the test run as well as the RUN indicator (orange) on the indoor unit flashes (0.5 second ON/ 0.5 second OFF). Additionally, the alarm code, the unit model code and connected number of indoor units will be displayed on the LCD as shown in the figure below. If the RUN indicator on PC-ARF flashes (2 seconds ON/ 2 seconds OFF), it may be a failure in the transmission between the indoor unit and the remote control switch (loosening of connector, disconnecting wiring or breaking wire, etc.). In this case, check the item 8.3 “Alarm Code” and perform for troubleshooting. Consult to authorized service engineers if abnormality can not be recovered.

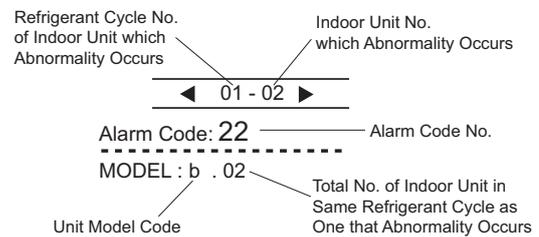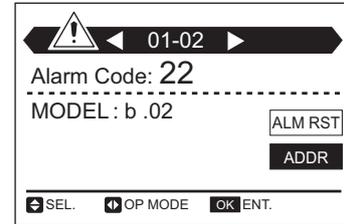

7.3 Test run procedure using the remote control switch (PC-ART)
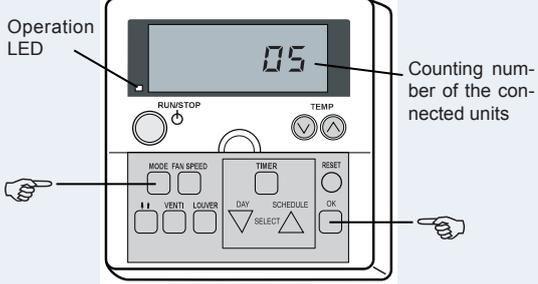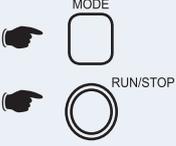
<p>1 Turn ON the power source of the indoor units and the RASC units</p> <p>Set the TEST RUN mode by means of the remote control switch.</p> <p>Press the MODE switch and the OK switch simultaneously for more than three seconds.</p> <p>2</p> <p>a) If the TEST RUN indication and the counting number of the connected units to the remote control switch (for example “05”) are displayed on the remote control switch, the connection of remote control cable is correct. Go to 4.</p> <p>b) If no indication or “00” appears or if the number of the units that is displayed is smaller than the actual number of the units, there is some abnormal operation.</p> <p>Go to 3.</p>										
<table border="1"> <thead> <tr> <th>RCS indication</th> <th>Fault</th> <th>Inspection points after the power source is OFF</th> </tr> </thead> <tbody> <tr> <td data-bbox="204 696 375 884">No indication</td> <td data-bbox="375 696 874 884"> <ul style="list-style-type: none"> The power source is not turned ON. The connection of the remote control cable is incorrect. The connect wires of the power supply line are incorrect or loosened. </td> <td data-bbox="874 696 1447 884"> <ol style="list-style-type: none"> The connection between the remote control and the unit is correct. Connecting points of the remote control cable. The contact of the connectors of the remote control cable. The screw fastening of each terminal board. </td> </tr> <tr> <td data-bbox="204 884 375 1131">3 The counting number of the connected units is incorrect</td> <td data-bbox="375 884 874 1131"> <ul style="list-style-type: none"> The power source of RASC unit is not turned ON. The setting of the unit number is incorrect. The connection of the control cables between each indoor unit is incorrect. (When multiple units are controlled by one remote control switch). </td> <td data-bbox="874 884 1447 1131"> <ol style="list-style-type: none"> Setting of the DIP switches on the printed circuit board. Wire connection order of the bridge cable. Connecting points of the bridge cable. The contact of the connectors of the bridge cable. </td> </tr> </tbody> </table> <p>Back to 1 after the checking</p>	RCS indication	Fault	Inspection points after the power source is OFF	No indication	<ul style="list-style-type: none"> The power source is not turned ON. The connection of the remote control cable is incorrect. The connect wires of the power supply line are incorrect or loosened. 	<ol style="list-style-type: none"> The connection between the remote control and the unit is correct. Connecting points of the remote control cable. The contact of the connectors of the remote control cable. The screw fastening of each terminal board. 	3 The counting number of the connected units is incorrect	<ul style="list-style-type: none"> The power source of RASC unit is not turned ON. The setting of the unit number is incorrect. The connection of the control cables between each indoor unit is incorrect. (When multiple units are controlled by one remote control switch). 	<ol style="list-style-type: none"> Setting of the DIP switches on the printed circuit board. Wire connection order of the bridge cable. Connecting points of the bridge cable. The contact of the connectors of the bridge cable. 	
RCS indication	Fault	Inspection points after the power source is OFF								
No indication	<ul style="list-style-type: none"> The power source is not turned ON. The connection of the remote control cable is incorrect. The connect wires of the power supply line are incorrect or loosened. 	<ol style="list-style-type: none"> The connection between the remote control and the unit is correct. Connecting points of the remote control cable. The contact of the connectors of the remote control cable. The screw fastening of each terminal board. 								
3 The counting number of the connected units is incorrect	<ul style="list-style-type: none"> The power source of RASC unit is not turned ON. The setting of the unit number is incorrect. The connection of the control cables between each indoor unit is incorrect. (When multiple units are controlled by one remote control switch). 	<ol style="list-style-type: none"> Setting of the DIP switches on the printed circuit board. Wire connection order of the bridge cable. Connecting points of the bridge cable. The contact of the connectors of the bridge cable. 								
<p>4 Select the TEST RUN mode by pressing the MODE switch (COOL OR HEAT).</p> <p>Press the RUN/STOP switch.</p> <p>a) The TEST RUN operation will start. (The TEST RUN operation will be finish after two hours. You can also finish the TEST RUN operation by pressing the RUN/STOP switch again).</p> <p>5</p> <p>i NOTE</p> <ul style="list-style-type: none"> TEST RUN operation ignores the temperature limitation and ambient temperature during heating operation to have a continuous operation, but the protections are alive. Therefore, the protection may activate when the heating TEST RUN operation is performed in high ambient temperature. TEST RUN operation time can be modified / increased depressing the time switch in the Remote control. <p>b) If the unit does not start or if the operation LED on the remote control switch is flickering, there is some abnormal operation. Go to 6.</p>										

	RCS indication	Unit condition	Fault	Inspection points after the power source is OFF
6	The operation LED flickers. (1 time / 1 sec.) and the unit number and the alarm code "03" flicker.	The unit does not start	The power source of RASC unit is not turned ON. The connect wires of the operating line are incorrect or loosened.	<p>1 The connection order of each terminal board. The fuse on the PCB may have blown out due to an incorrect wiring.</p> <p> NOTE Recovering method of FUSE for operating circuit. There is a fuse (FUSE4 on Indoor Unit PCB1, EF1 on RASC unit PCB1) to protect operating circuit on the PCB, when the power lines are connected to operating lines. If fuse is melted, operating circuit can be recovered once by setting the dip switch on the PCB as shown in 7.</p> <p>2 The screw fastening of each terminal board.</p> <p>3 The connection order of the power supply wire between the indoor units and the RASC units.</p>
	The operation LED flickers. (1 time / 2 sec.)	The unit does not start	The connection of the remote control cable is incorrect.	This is the same as the item 3 1, 2, and 3
	The flickering indicator is different from the one above	The unit does not start. The unit starts once and then the unit stops.	The connection of the thermostat or other connectors is incorrect. There is tripping of the protector.	Check the alarm code table in the service manual. (Service personnel should do the checking).
	The operation lamp Flickers. (1 Time/1s) Unit No. <i>00LU</i> , Alarm Code <i>dd</i> and Unit Code <i>EQ0LU</i> flicker	The unit does not start.	The connection of the remote control cable between Indoor Units is incorrect.	Check by the abnormality mode table in the Technical Catalogue (Do it by service people).
Back to 1 after the checking				
7	<p>Instructions for the recovery when the fuse of the transmission circuit is blown out:</p> <p>1 Correct the wiring to the terminal board.</p> <p>2 Set pin 2 of DSW7 on the indoor units PCB to ON (DSW7 not available in RPC-FSN3 indoor unit models)</p>			


7.4 Test run procedure using the wireless remote control switch (PC-LH3A)



NOTE

If the wired remote control switch is used or if multiple units (SET-FREE, DC INVERTER and utopia series) are operating simultaneously, you cannot perform the test run by means of the remote control switch. If that is the case, perform the test run by means of the wired remote control switch.

- 1 Perform the test run after completing the installation.
 - a. Set the batteries for the remote control switch.
 - b. Turn ON the power source of the indoor units and the RASC units.
 - c. The yellow '☺' LED on the receiver of the indoor unit flickers (0.25 seconds ON ↔ 0.25 seconds OFF). Then, the yellow LED turns OFF. While the LED is flickering, the unit will not operate because the unit is initializing.
- 2 Set the TEST RUN mode by pressing the SET switch and the OFF TIME switch simultaneously for more than three seconds. The LCD should look like the LCD on the right figure. The TEST RUN mode is not operating
- 3 Set the operation mode by pressing the MODE switch. The TEST RUN mode is operating.

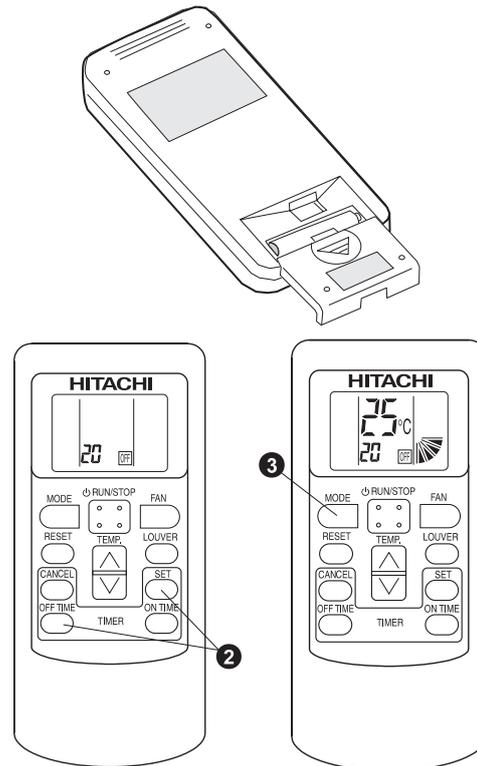

- 4 Operate the test run by pointing the transmitter towards the receiver of the indoor unit. Then, press the RUN/STOP switch. When the indoor unit receives the commands, the yellow '☺' LED of the receiver will turn on briefly. Make sure that the commands are received well and the selected mode (3) is set correctly. In the TEST RUN mode, the red RUN LED of the receiver is turned ON and the green TIMER LED flickers (0.5 seconds ON ↔ 0.5 seconds OFF) (*2). Then, the timer switches off for two hours.



NOTE

- If the yellow '☺' LED does not turn ON, the commands from the remote control switch may not have reached the receiver. Send the commands again.
 - (*2) In the case of the RPK model, the TIMER LED is turned OFF.
- 5 Adjust the angle of the air grille as follows. The air louver has a mechanism for the auto-swing function. Do not move the louver by hand forcefully.
 - a. Select the FAN mode by pressing the MODE switch.
 - b. Set the louver angle by pressing the LOUVER switch.
 - 6 Stop the test run (normal)
 - a. The test run stops automatically after two hours.
 - b. You stop the test run by pressing the RUN/STOP switch again. After the test run has finished, check that the red RUN LED and the green TIMER LED turn OFF.
 - 7 Stop the test run (abnormal) for the PC-ALHD/PC-ALHZ. If you cannot use the PC-LH3A because of battery shortage or any other reason, perform the emergency operation as follows.
 - a. COOL switch: Press the COOL switch in order to start the cooling process. Press the COOL switch again in order to stop the cooling process.
 - b. HEAT switch: Press the HEAT switch in order to start the heating process. Press the HEAT switch again in order to stop the heating process.




NOTE

During the emergency operation, the yellow LED blinks (0.5 seconds ON / 0.5 seconds OFF).

c. Alarm code display

- If some malfunction occurs because of the activation of a safety device or any other reason, the red RUN LED blinks (0.5 seconds ON / 0.5 seconds OFF).
- Refer to section “10.2.2 Alarm codes” on chapter “10. Troubleshooting”.
- The alarm code displays the number of blinks of the green DEF LED and the yellow FILTER LED as shown below:
- Green DEF LED: Digit 2 of the alarm code blinks.
- Yellow FILTER LED: Digit 1 of the alarm code blinks. (Alphabet code: A=10 blinks, B=11 blinks, C=12 blinks, etc.).

Example:

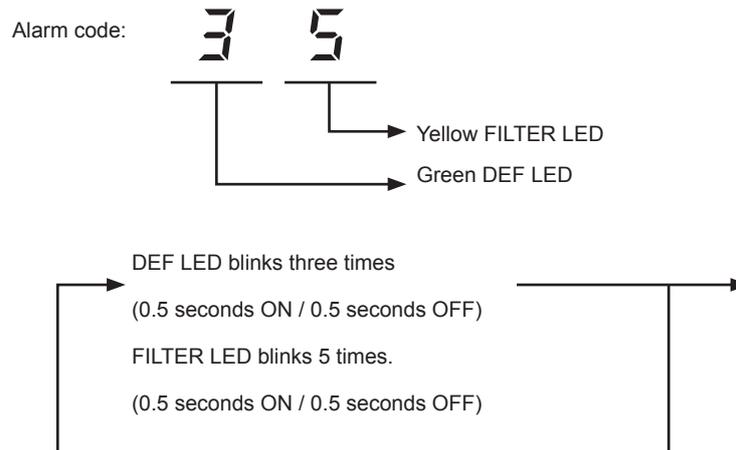

The red RUN LED (1 second ON / 1 second OFF) means that there is an abnormal transmission between the indoor units and the RASC unit.

7.5 Test run procedure from the RASC unit

The test run procedure from the RASC unit side is shown below. You can set this DIP switch while the power source is ON.

◆ Setting of dip switch (before shipment)

DSW1		
	1	Test run
	2	Cooling (OFF) / Heating (ON)
	3	Intermediate season
	4	Manual compressor stop

⚠ DANGER

- Do not touch any other electrical parts when operating switches on the PCB.
- Do not attach or detach service cover when the power source for the RASC unit is ON and the RASC unit is operated.

i NOTE

Turn all DIP switches of DSW1 OFF when the test run operation is completed.

	Dip switch setting	Operation	Remarks
Test run	1 Setting operation mode (a) Cooling: Set DSW1-1 ON  (b) Heating SET DSW1-1 and 2 ON  (c) Cooling intermediate season: Set DSW1-1 and 3 ON  (d) Heating intermediate season: Set DSW1-1, 2 and 3 ON 	<ul style="list-style-type: none"> • The indoor unit automatically starts to operate when the test run of the RASC unit is set. • You can perform the ON/OFF operation from the remote control switch or the DSW1-1 of the RASC unit. • Continuous operation during 2 hours is performed without the Thermo-OFF condition. <p>i NOTE</p> <ul style="list-style-type: none"> • TEST RUN operation time can be increased depressing the time switch in the Remote Control. • If is setting DSW1-3 ON, cooling/heating intermediate season mode is activated. 	<ul style="list-style-type: none"> • Make sure that the indoor units start to operate in accord with the test run of the RASC unit. • If you start the test run from the RASC unit and you stop the test run from the remote control switch, the test run function of the remote control switch is cancelled. However, the test run function of the RASC unit is not cancelled. • If the more than one indoor unit is connected with one remote control switch, all the units start the test run at the same time. Therefore, turn OFF the power source so that the indoor units do not perform the test run. If this is the case, the TEST RUN indication of the remote control switch may flicker. This is not abnormal. • The setting of DSW1 is not required for the test run from the remote control switch.
Manual OFF of compressor	2 Forced stoppage of compressor: Set DSW1-4 ON 	<ul style="list-style-type: none"> • When DSW1-4 is ON during the compressor operation, the compressor stops operating immediately and the indoor unit is under the Thermo-OFF condition. • When DSW1-4 is OFF, the compressor starts to operate after the cancellation of the 3-minute guard. 	<ul style="list-style-type: none"> • Do not turn ON and OFF the compressor frequently.

7.6 Check list

7.6.1 Check list on test run

MODEL:	
SERIAL NUMBER:	
COMPRESSOR MFG NUMBER:	
NAME AND ADDRESS OF CUSTOMER:	
DATE:	

- 1 Is the rotation direction of the indoor coil fan correct? _____
- 2 Is the rotation direction of the outdoor coil fan correct? _____
- 3 Is there any abnormal compressor sound? _____
- 4 Has the unit been operating for at least twenty (20) minutes? _____
- 5 Check the room temperature:

Inlet	Number 1	DB _____ °C	Number 2	DB _____ °C	Number 3	DB _____ °C	Number 4	DB _____ °C
		WB _____ °C				WB _____ °C		
Outlet		DB _____ °C						
		WB _____ °C						
Inlet	Number 5	DB _____ °C	Number 6	DB _____ °C	Number 7	DB _____ °C	Number 8	DB _____ °C
		WB _____ °C				WB _____ °C		
Outlet		DB _____ °C						
		WB _____ °C						

- 6 Check the outdoor ambient temperature:

Inlet	DB _____ °C
	WB _____ °C
Outlet	DB _____ °C
	WB _____ °C

- 7 Check the refrigerant temperature: Operating mode (cool or heat):

Discharge gas temperature	Td = _____ °C
Liquid pipe temperature	Te = _____ °C

- 8 Check the pressure:

Discharge pressure	Pd = _____ kg/cm ² G
Suction pressure	Ps = _____ kg/cm ² G

- 9 Check the voltage:

Rated voltage	_____ V	—	—
Operating voltage	L1-L2 _____ V	L1-L3 _____ V	L2-L3 _____ V
Starting voltage	_____ V	—	—
Phase imbalance	1-(V/Vm) =	—	—

- 10 Check the compressor input running current:

Input	_____ kW
Running current	_____ A

- 11 Is the refrigerant charge adequate? _____
- 12 Do the operation control devices operate correctly? _____
- 13 Do the safety devices operate correctly? _____
- 14 Has the unit been checked for refrigerant leakage? _____
- 15 Is the unit clean inside and outside? _____
- 16 Are all the cabinet panels fixed? _____
- 17 Are all the cabinet panels free from rattles? _____
- 18 Is the filter clean? _____
- 19 Is the heat exchanger clean? _____
- 20 Are the stop valves open? _____
- 21 Does the drain water flow smoothly from the drain pipe? _____

7.6.2 Check list on compressor

CLIENT:	MODEL:	DATE:
Serial number:	Production date:	Checker:

N°	Check item	Check method	Result	Remarks
1	Is THM9 correctly connected? THM9: Discharge gas thermistor	(1) Is wire of thermistor correctly connected by viewing? (2) Check to ensure the 7-segment indication of Td when compressor is operating. Td: Temperature of THM9		
2	Is thermistor THM9 disconnected?	(1) Check to ensure that thermistor on the top of compressor is correctly mounted by viewing? (2) Check to ensure that actually measured temp. is the same as the indication during check mode.		
3	Is current sensor faulty?	(1) Check to ensure that indication A1 and A2 are 0 during compressor stopping.		
4	Is current sensing part on PCB2 faulty?	(2) Check to ensure that indication A1 and A2 are not 0 during compressor running.		
5	Is the direction of current sensor (CTU, CTV) reverse?	Check the direction => by viewing.		
6	Are power source wires, U and V inserted correctly into current sensor?	Check to ensure that wires are correctly inserted.		
7	Is expansion valve (MV1) correctly connected?	Check to ensure that MV1 to CN5A is correctly connected.		
8	Is expansion valve (MV1) coil correctly connected?	Check to ensure that each coil is correctly mounted on the valve.		
9	Are the refrigeration cycle and electrical wiring system incorrectly connected?	Check to ensure that refrigerant is flowing into indoor units by operating one refrigerating cycle only from the RASC unit.		
10	Is opening of expansion valve completely closed (locked)?	Check the following by the check mode of RASC units. (1) Liquid pipe temperature (TL) < air intake temperature (Ti) during cooling operation (2) Liquid pipe temperature (TL) > air intake temperature (Ti) during heating operation		
11	Is opening of expansion valve fully opened (locked)?	Check to ensure that liquid pipe temp. is lower than air intake temperature of stopping indoor unit when other indoor units are operating under cooling operation		
12	Are the contacts for compressor magnetic switch CMC1 faulty?	Check the surface of each contact (L1, L2 and L3) by viewing.		
13	Is there any voltage abnormality among L1-L2, L2-L3 and L3- L1?	Check to ensure that voltage imbalance is smaller than 3%. Please note that power source voltage must be within 380V or 220V+10%.		
14	Is the comp. oil acidified during compressor motor burning?	Check to ensure that the oil color is not black.		

◆ Additional information for “Check list on compressor”

Check item	Additional information (mechanism of compressor failure)
1 & 2	The liquid refrigerant return volume to the compressor is controlled by the discharge gas temperature Td when compressor is operating. If Td thermistor is disconnected, the liquid refrigerant return volume will become small by detecting the temperature even if the actual discharge gas temperature is high. Therefore, this abnormal overheating by detecting the temperature operation will result in insulation failure of the motor winding.
3 & 4	Overcurrent control (operating frequency control) is performed by detecting current by the PCB2. In this case, winding insulation failure will occur, since control is not available in spite of actually high current.
5 & 6	The current sensor checks phase and adjusts output electrical wave in addition to the above mentioned items. If fault occurs, the output electrical wave becomes unstable giving stress to the motor winding, resulting in winding insulation failure.
7 & 8	During a cooling operation, SH is controlled by MV of each indoor units. During a heating operation, Td is controlled by MV1. If expansion valves are incorrectly connected, correct control is not available, resulting in compressor seizure depending on liquid refrigerant returning conditions or motor winding insulation failure depending on overheating conditions.
9	If the refrigeration cycle and electrical system are incorrectly connected, abnormally low suction pressure operation is maintained or abnormally high discharge pressure operation is maintained, resulting in giving stress to the compressor, since their correct control is not available.
10	If the expansion valve and electrical system are incorrectly connected, abnormally low suction pressure operation is maintained or abnormally high discharge pressure operation is maintained, resulting in giving stress to the compressor, since their correct control is not available.
11	The compressor may be locked due to the liquid return operation during the cooling operation .
12	In the case that the contacting resistance becomes big, voltage imbalance among each phase will cause abnormal overcurrent.
13	In this case, overcurrent will occur, efficiency will decrease or the motor winding will be excessively heated.
14	In the case, it will result in motor burning or compressor failure.

8 . Electrical checks of the main parts


Index

8.1.	Inverter	124
8.1.1.	Specifications of inverter	124
8.1.2.	Inverter time chart.....	126
8.1.3.	Protective function	127
8.1.4.	Overload control	128
8.2.	Thermistor	129
8.2.1.	Summary of thermistors for RASC unit	129
8.2.2.	Diagrams of thermistors for RASC unit	130
8.3.	Electronic expansion valve.....	132
8.4.	High pressure protection devices	133
8.4.1.	Location of the high pressure protection devices	133
8.4.2.	High pressure switch (PSH)	133
8.4.3.	Pressure switch for control (PSC)	133
8.5.	Noise filters (NF)	134
8.6.	Capacitor (CB1, CB2) (Only for RASC-(8/10)HNPE).....	135
8.7.	Reactor (DCL)	136
8.7.1.	Reactor for RASC-(4-6)HNPE	136
8.7.2.	Reactor for RASC-(8/10)HNPE	136
8.8.	Scroll compressor.....	137
8.8.1.	Reliable mechanism for low vibrating and low sound.....	137
8.8.2.	Principle of compression	137


8.1 Inverter

8.1.1 Specifications of inverter

Applicable model	RASC-(4-6)HNPE	RASC-(8/10)HNPE
Applicable power source	3N~ 400V 50 Hz	
Output current	24 A	25 A
Control method	Vector control	
Range output frequency	20~115 Hz	
Accuracy of frequency	0,01 Hz at applicable frequency range	
Output / characteristics	Conditions: 1 Power source voltage AC380/415V 2 Non-loading (free output) 3 Ammeter type volt-meter (X1.1) 	
Soft start-stop	0.125~3.00 Hz/s (5 steps)	
Protection function		
Excessive high or low voltage for inverter	Excessive low voltage at a voltage is lower than 350V DC Excessive high voltage at a voltage is higher than 750V DC	
Abnormality of current sensor (0A detection)	Stoppage at a current of compressor smaller than 1.5A. When the frequency is 15 to 18 Hz after starting. Cause of abnormality: <ul style="list-style-type: none"> - Failure of current sensor - Failure of IPM/DIP-IPM/ ISPM - Failure of compressor / fan motor - Disconnected wiring 	

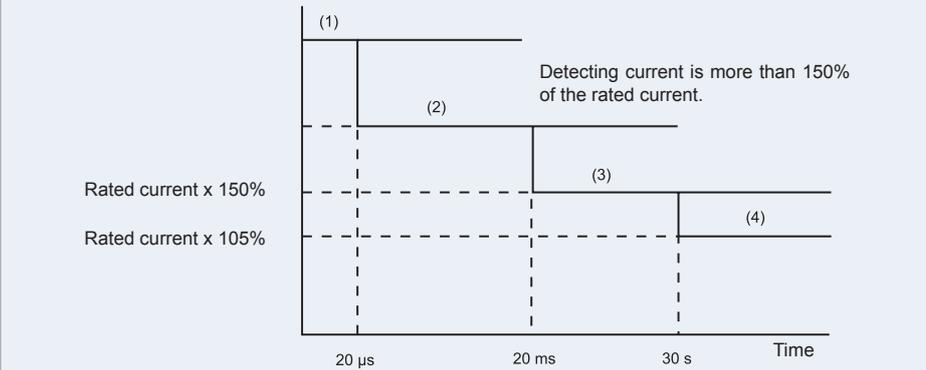Protection function		
Applicable model	RASC-(4-6)HNPE	RASC-(8/10)HNPE
Overcurrent protection for inverter		
	<ol style="list-style-type: none"> 1 Short-circuit trip of arm (*) 2 Instantaneous overcurrent trip (*) 3 Instantaneous overcurrent trip: it is detected when current valve is over rated current x 150%. 4 Electronic thermal trip: it is detected when current valve rated current x 105% for over 30 seconds or for over 3 minutes in total within 10 minutes. <p>i NOTE (*): <i>Internal protection IPM.</i></p> <p>Condition is maintained longer than 30 seconds or accumulated longer than 3 minutes during 10 minutes sampling time.</p>	
Protection of IPM	<p>IPM has four protection functions for self-protection:</p> <ol style="list-style-type: none"> 1 Short circuit in any of the “U”, “V” or “W” terminals. 2 Running current reaches the maximum rated current. 3 Abnormal temperature is measured by internal thermistor (for 8/10HP). 4 Control voltage decreases abnormally. 	
Overload control	<p>Overload control as a current greater than (rated current X105%).</p> <p>Overload control release at a current smaller than (rated current X 88%).</p>	
Fin temperature increase	<p>The unit is stopped when the fin temperature is higher than 90°C (for 4-6HP) or 100°C (for 8/10HP).</p>	
Earth detection	<p>The unit is stopped when the compressor is earthing.</p>	

8.1.2 Inverter time chart

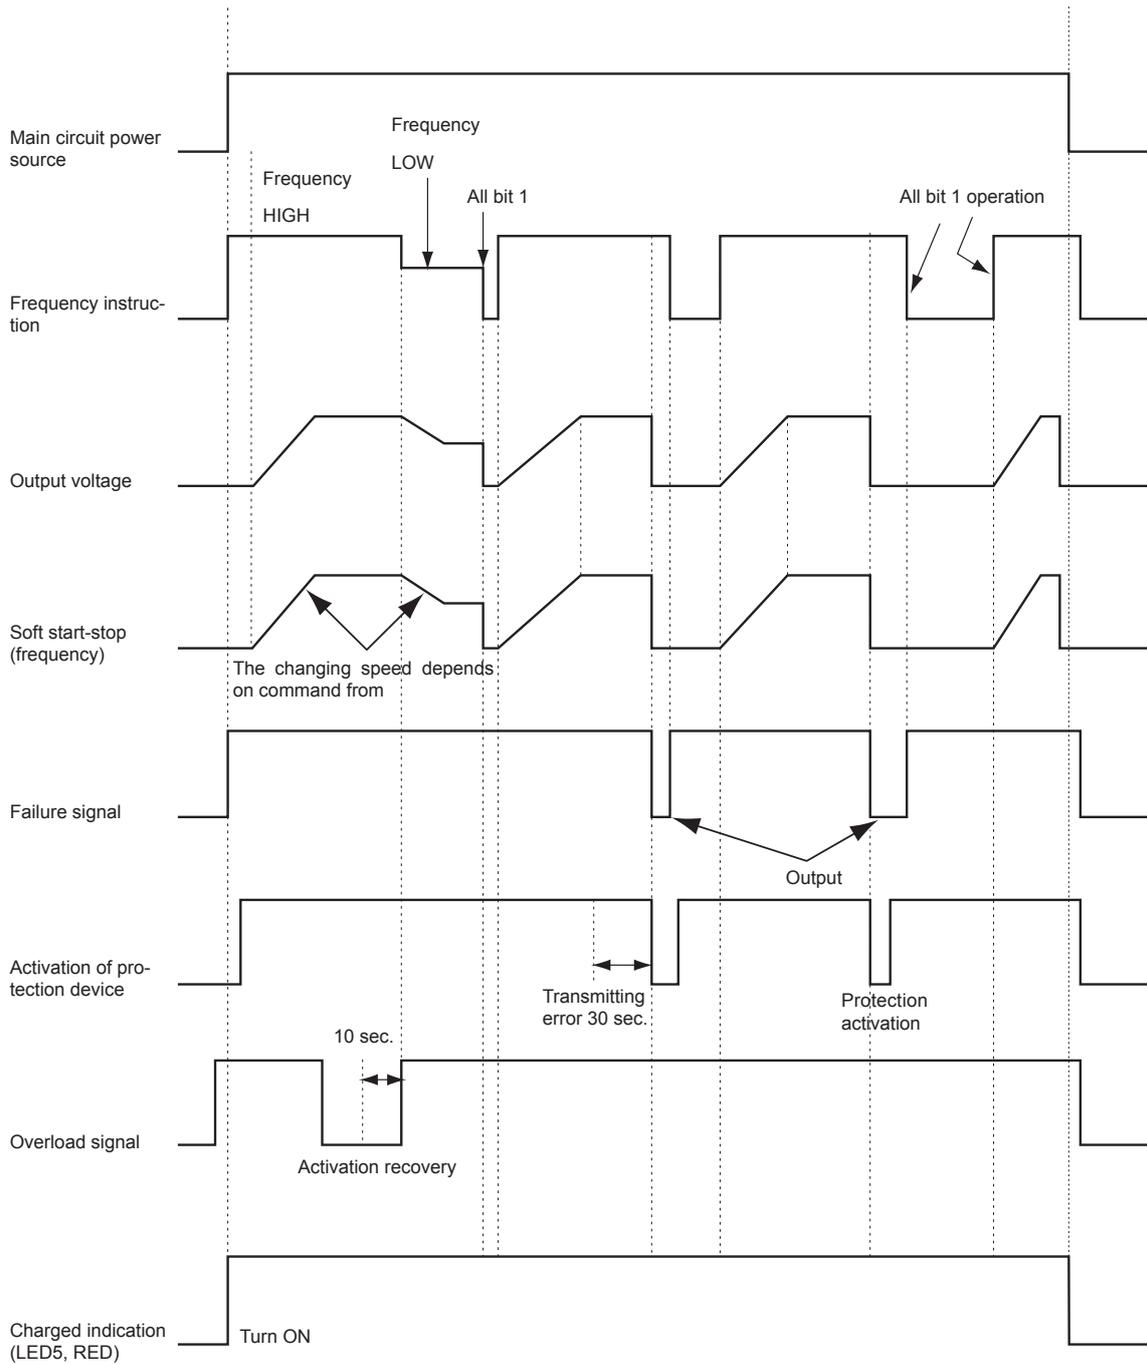

8.1.3 Protective function

1 Excessive high or low voltage for inverter

a. Level of detection

- ◆ When the voltage of direct current is greater than (A) V, abnormalities are detected.
- ◆ When the voltage of direct current is smaller than (B) V, abnormalities are detected.

Power supply	3N~ 400V 50Hz
(A)	750
(B)	350

b. Function. When abnormalities are detected, the inverter compressor is stopped and transmits the signal code of stoppage cause to PCB1.

c. Cancellation of protection function. Transmission for signal code of stoppage cause is cancelled when a stopping order is given or main power source is cut off.

2 Abnormality of current sensor

a. Level of detection. When current of the inverter compressor decreases lower than 1.5 A during the inverter compressor frequency between 15Hz and 18Hz, an abnormality is detected.

b. Function. When abnormalities are detected, the inverter compressor is stopped, and transmits the signal code of stoppage cause to PCB1.

c. Cancellation of protection function. Transmission for signal code of stoppage cause is cancelled when a stopping order is issued or main power source is cut off.

3 Overcurrent protection for inverter

a. Level of detection.

- ◆ When the current detected by current sensor reaches 150% of the rated current, overcurrent is detected. (Instantaneous overcurrent).
- ◆ When the current detected by current sensor exceeds 105% of the rated current continuously for 30 seconds or for 3.5 minutes in total during a 10 minutes period, overcurrent is detected. (Electric thermal relay)

b. Function. When abnormalities are detected, the inverter compressor is stopped and transmits the signal code of stoppage cause to PCB1.

c. Cancellation of protection function. Transmission for signal code of stoppage cause is cancelled by stopping order is issued or main power source is cut off.

4 Protection of IPM/DIP-IPM

a. Level of detection.

- ◆ When some of the output terminals between “U” and “V”, “V” and “W”, “W” and “U” of IPM/dip IPM are short-circuited, an abnormality is detected.
- ◆ When the running current of IPM/DIP-IPM reaches (maximum rated current x 105%), an abnormality is detected.
- ◆ When an internal temperature is measured by internal thermistor of IPM, an abnormality is detected.
- ◆ When the control voltage of IPM/DIP-IPM decreases, an abnormality is detected.

b. Function. When abnormalities are detected, the inverter compressor is stopped and the signal code of stoppage cause is transmitted to PCB1.

c. Cancellation of protection function. Transmission for signal code of stoppage cause is cancelled when a stopping order is issued or main power source is cut off.

5 Fin temperature increase

a. Level of detection. When the temperature of internal thermistor exceeds more than 90°C (for 4-6HP) or 100°C (for 8/10HP), an abnormality is detected.

b. Function. When abnormalities are detected, the inverter compressor is stopped and the signal code of stoppage cause is transmitted to PCB1.

c. Cancellation of protection function. Transmission for signal code of stoppage cause is cancelled when a stopping order is issued or main power source is cut off.

6 Earth detection


- a. Level of detection.** When the starting current of the compressor reaches 80% of the overcurrent protection value, an abnormality is detected.
- b. Function.** When abnormalities are detected, the inverter compressor is stopped and the signal code of stoppage cause is transmitted to PCB1.
- c. Cancellation of protection function.** Transmission for signal code of stoppage cause is cancelled when a stopping order is issued or main power source is cut off.

8.1.4 Overload control

- 1 Level of detection.** When the output current exceeds 105% of the maximum output current, an abnormality is detected.
- 2 Function.** An overload signal is issued when output current exceeds 105% of the maximum output current, and the frequency decreases. For 10 seconds after the output current decreases lower than 88% of the rated current, the operation is performed with the compressor frequency limited to the upper level frequency when the output current decreases lower than 88% of the rated one. However, if the frequency order is smaller than the maximum value, the operation is performed according to the order.
- 3 Cancellation of protection function.** After the operation described in the above item 2 is performed for 10 seconds, this control is cancelled.

8.2 Thermistor


8.2.1 Summary of thermistors for RASC unit

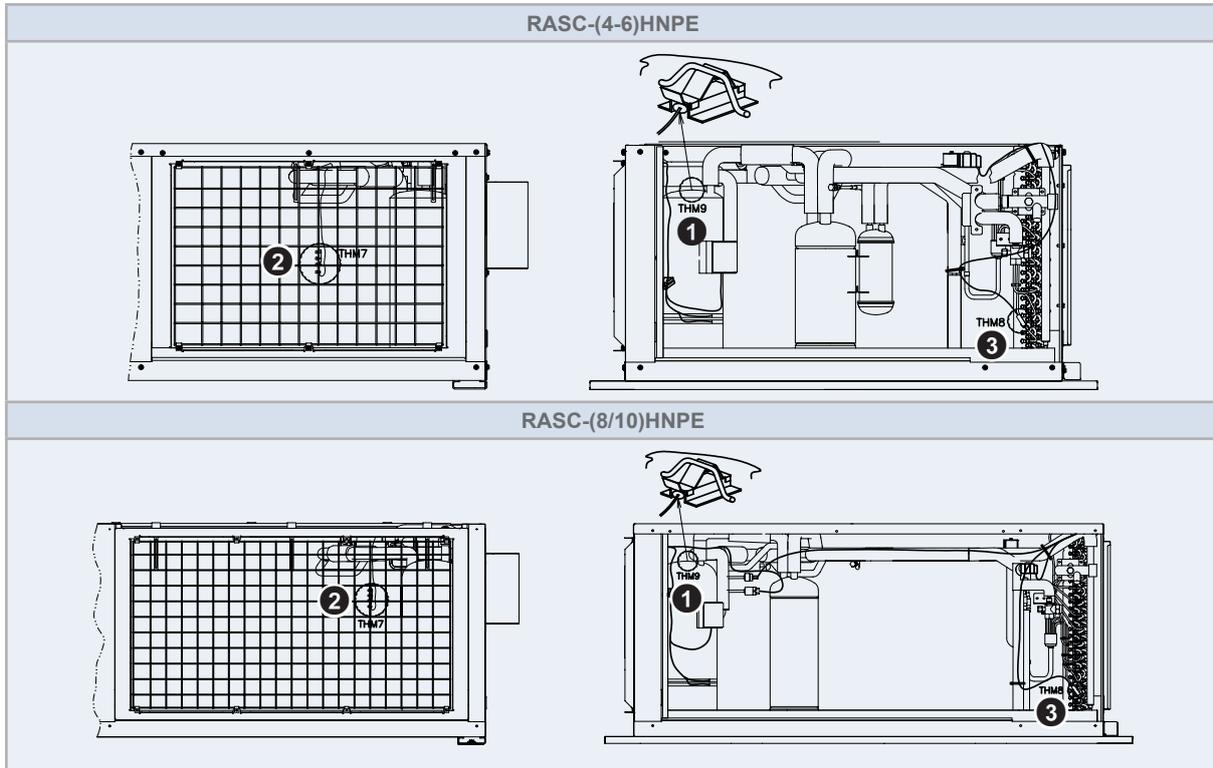

Number	Identification
①	Thermistor for discharge gas temperature (THM9)
②	Thermistor for outdoor ambient temperature (THM7)
③	Thermistor for evaporating temperature (THM8)

8.2.2 Diagrams of thermistors for RASC unit

◆ Thermistor for discharge gas temperature of compressor (THM9)

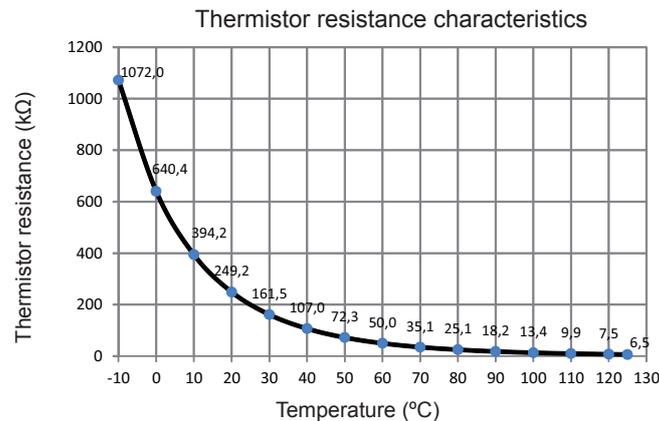


- 1 A thermistor for the upper part temperature of the compressor is installed to prevent discharge gas from overheating. If discharge gas temperature increases excessively lubricating oil deterioration occurs and lubricating properties deteriorate, resulting in short compressor life.
- 2 If discharge gas temperature increases excessively, compressor temperature increases. At the worst, compressor motor winding will be burnt out.
- 3 When the upper part temperature of compressor increases during heating operation, the unit is controlled according to the following method.
 - The electronic expansion valve of the unit is opened to return the liquid refrigerant to the compressor (through the accumulator for RASC unit), decreasing compressor temperature.
 - If the compressor upper part temperature increases exceeding 132°C even if the electronic expansion valve opens, the compressor is stopped, in order to protect the compressor.
 - In cooling operation, the above function is also available.
- 4 If compressor upper part temperature increases excessively, the protection control is activated and the compressor is stopped according to the following method.

Operation	Upper part temperature of compressor		Defecting period
	RASC-(4-6)HNPE	RASC-(8/10)HNPE	
Cooling	Over 115°C	Over 127°C	10 minutes (continuously)
	Over 125°C	Over 135°C	5 seconds (continuously)
Heating	Over 115°C	Over 120°C	10 minutes (continuously)
	Over 125°C	Over 135°C	5 seconds (continuously)
Defrosting	Over 115°C	Over 127°C	5 seconds (continuously)


◆ **Thermistor for outdoor ambient temperature (THM7) and for evaporating temperature (THM8)**

Thermistor resistance characteristics


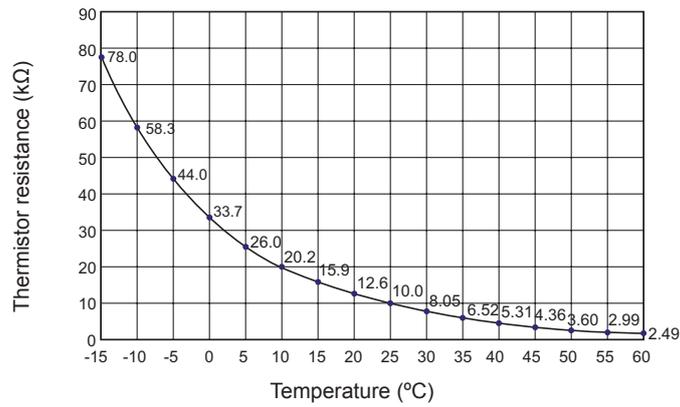


◆ **Thermistor for inverter fin temperature (THMI)**

Thermistor characteristics

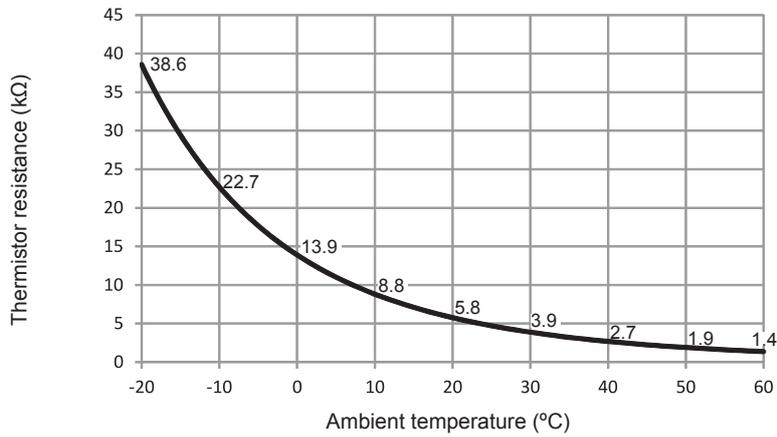

8.3 Electronic expansion valve

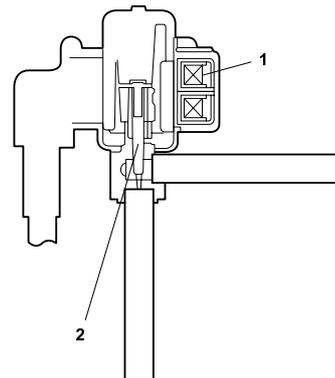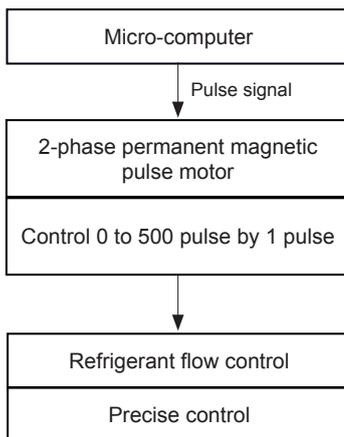


- 1. Pulse motor.
- 2. Needle.

Items	Specifications
Type	UKV series
Refrigerant	R410A
Working temperature range	-30°C ~ 70°C (operation time of the coil: less than 50%)
Mounting direction	Drive shaft in vertical direction within an angle of 45° as maximum
Flow direction	Reversible
Drive method	Permanent magnet type (20 poles). Stepping motor direct drive type
Rated voltage	DC12V ±10%
Drive condition	80 ±5 pps (for 4-6HP) and 63 ±5 pps (for 8/10HP) 1-2 phase excitation
Coil resistance (each phase)	46 ±3Ω (at 20°C)
Wiring diagram, drive circuit and activation mode	

8.4 High pressure protection devices

8.4.1 Location of the high pressure protection devices

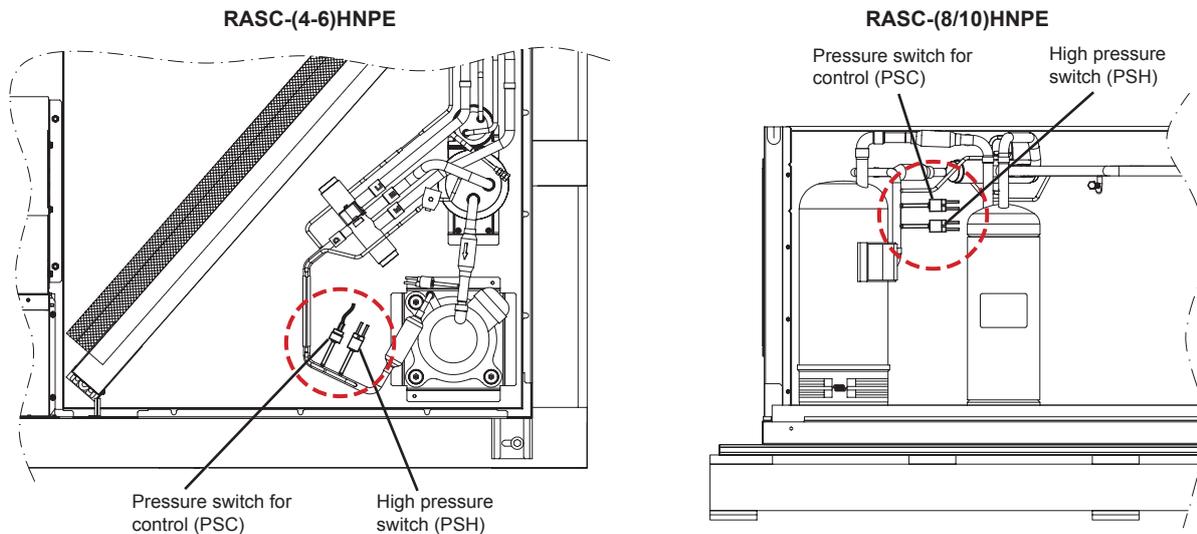

8.4.2 High pressure switch (PSH)

If the discharge pressure is excessively high, the compressor and the component parts of the refrigeration cycle can be damaged. Therefore, in case that the discharge pressure is higher than 4.15 MPa (R410A), the protection control is activated and the compressor is stopped.

8.4.3 Pressure switch for control (PSC)

In case that the discharge pressure is higher than 3.6 MPa (R410A) the protection control is performed.

- For controlling the high pressure not to increase excessively during heating operation, the gas by-pass circuit and the air volume of the RASC fan is controlled automatically.
- The gas by-pass circuit, which is composed of the solenoid valve and the capillary tube for flow adjustment, control the high pressure not to increase excessively by leading the high pressure gas to the low pressure side.

8.5 Noise filters (NF)

The noise filter decreases the leakage of noise made by the inverter to the power supply side. Terminals indicated with "LOAD" are connected to the inverter side and terminals indicated with "LINE" to the power supply side.


Items	Specifications
Model	4LFB-22930-2FB
Rated current	3N~ 400V, 27 A
Permissible temperature range	-25 °C to 65 °C
Circuit diagram	
Dimensions	

8.6 Capacitor (CB1, CB2) (Only for RASC-(8/10)HNPE)

This part is used for changing the alternative current to the direct current for the inverter.

◆ CB1 and CB2 (3N~ 400V 50Hz)

Items	Specifications
Models	LNX2W472MSEEHE
Capacity of static electricity	4700 μ F
Rated voltage	400 VDC
Permissible temperature range	-25°C to 85°C

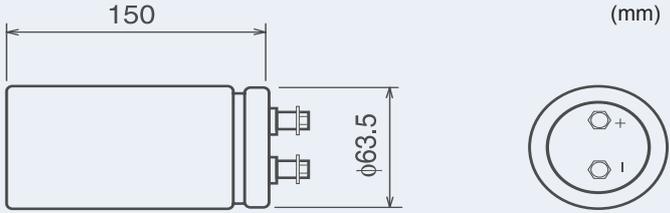

(mm)

8.7 Reactor (DCL)

DCL reactor suppresses harmonics generated on inverter input side. Also it is useful for power factor improvement.

8.7.1 Reactor for RASC-(4-6)HNPE

Items	Specifications
Characteristics	0.5 mH±10% (at 1kHz)
Rated current	30 A
Direct resistance	15.0 mΩ±20% (at 20°C)
Permissible temperature range	-20°C to 60°C

(mm)

8.7.2 Reactor for RASC-(8/10)HNPE

Items	Specifications
Characteristics	1.0 mH±10% (at 1 kHz)
Rated current	30 A
Direct resistance	27.4 mΩ±20% (at 20°C)
Permissible temperature range	-20°C to 60°C



(mm)

8.8 Scroll compressor

8.8.1 Reliable mechanism for low vibrating and low sound

- 1 The rotating direction is definite.
- 2 The pressure inside of the chamber is high pressure, and the surface temperature of the chamber is 60 °C to 110 °C.

8.8.2 Principle of compression

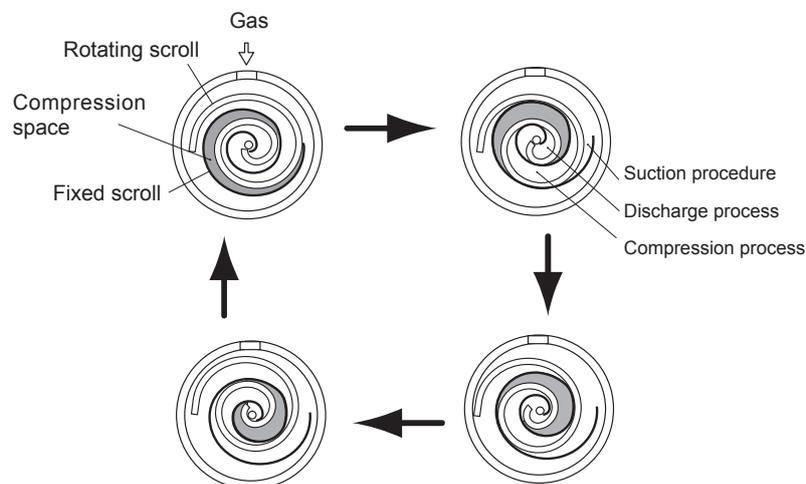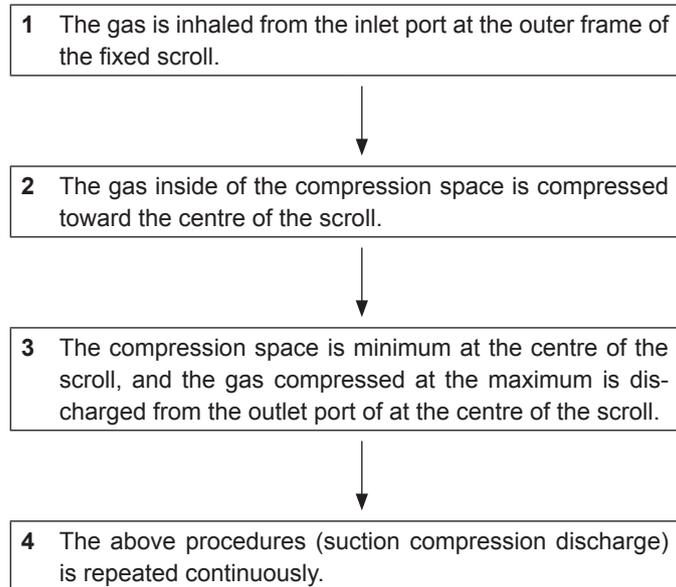


9 . Spare parts

Index

9.1. Cabinet and fan	140
9.2. Refrigerant cycle	141
9.2.1. RASC-(4-6)HNPE	141
9.2.2. RASC-(8/10)HNPE	142
9.3. Electrical parts	143
9.3.1. RASC-(4-6)HNPE	143
9.3.2. RASC-(8/10)HNPE	144
9.4. Parts name	145
9.4.1. Cabinet and fan	145
9.4.2. Refrigerant cycle	146
9.4.3. Electrical parts	148


9.1 Cabinet and fan

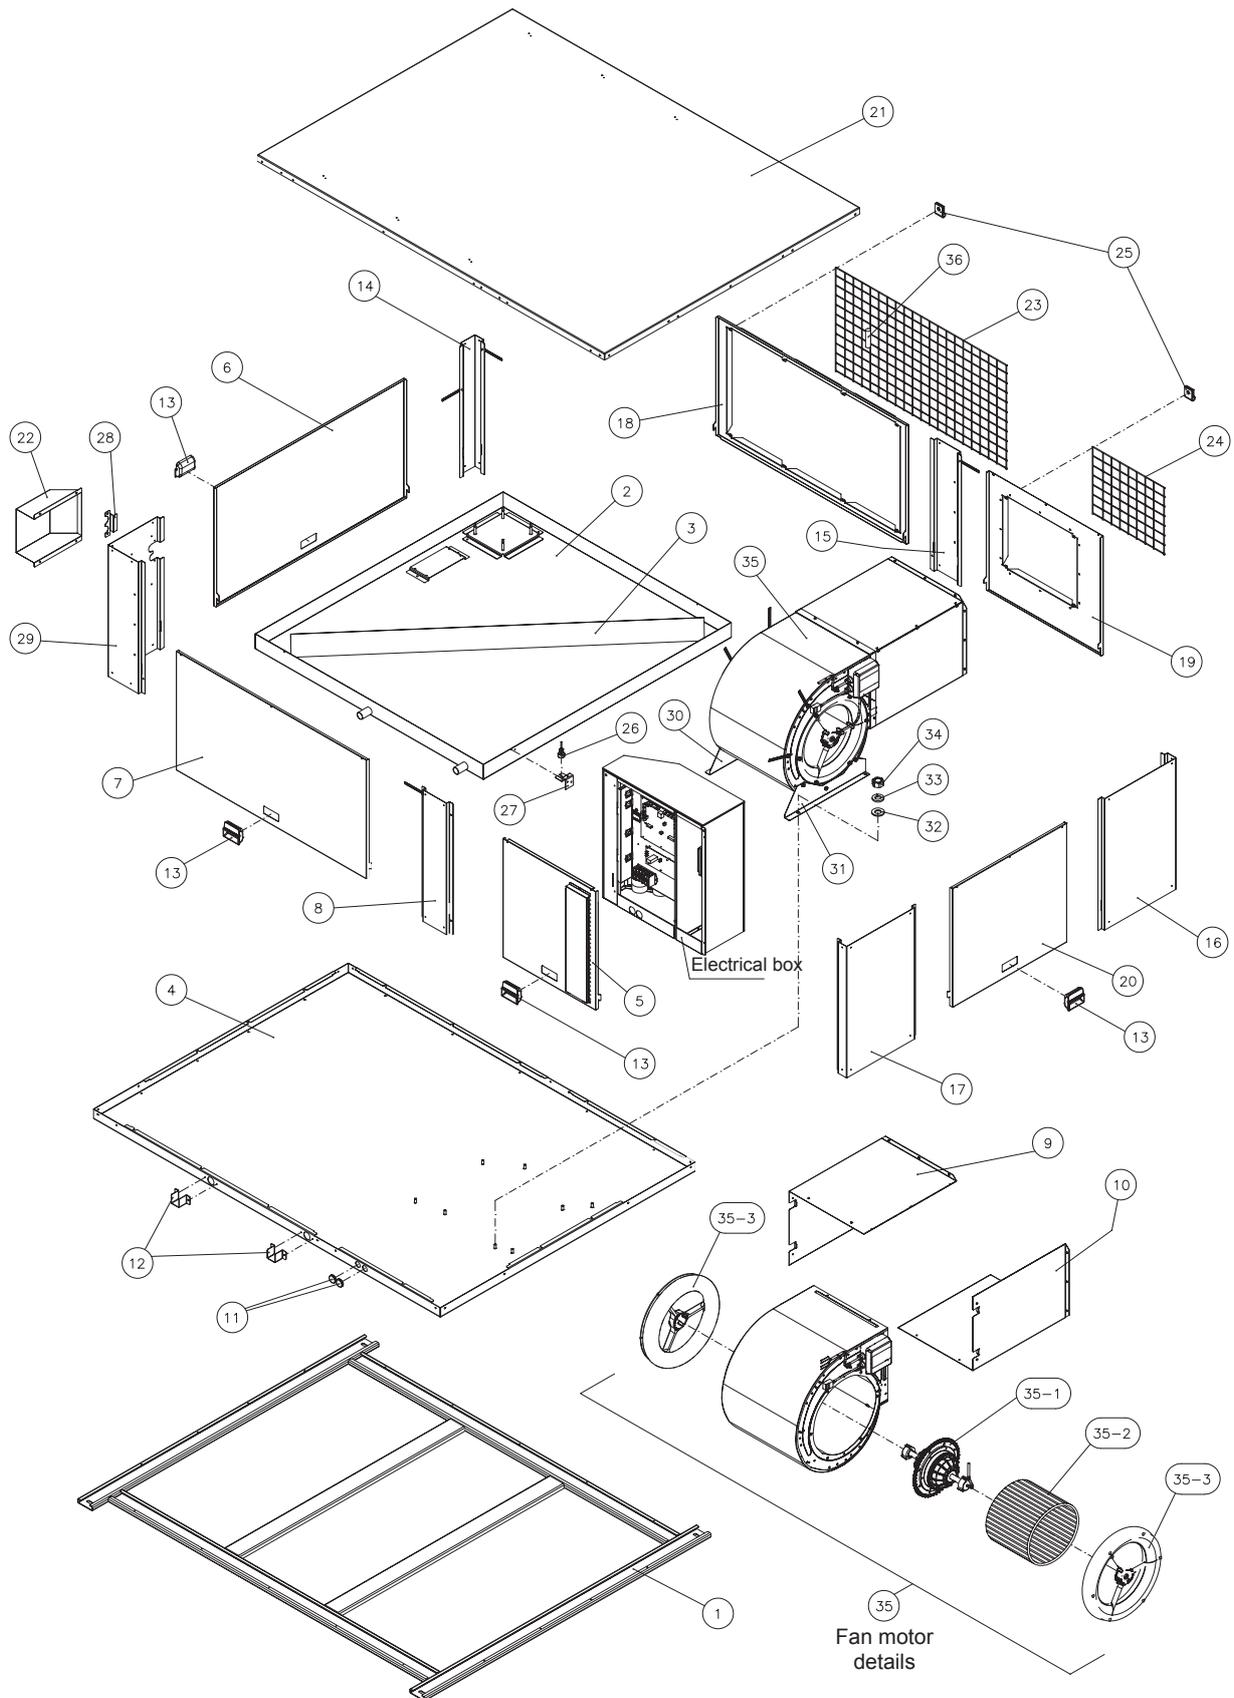

Spare Parts Document: EPN-201410A-1B


9.2 Refrigerant cycle

9.2.1 RASC-(4-6)HNPE

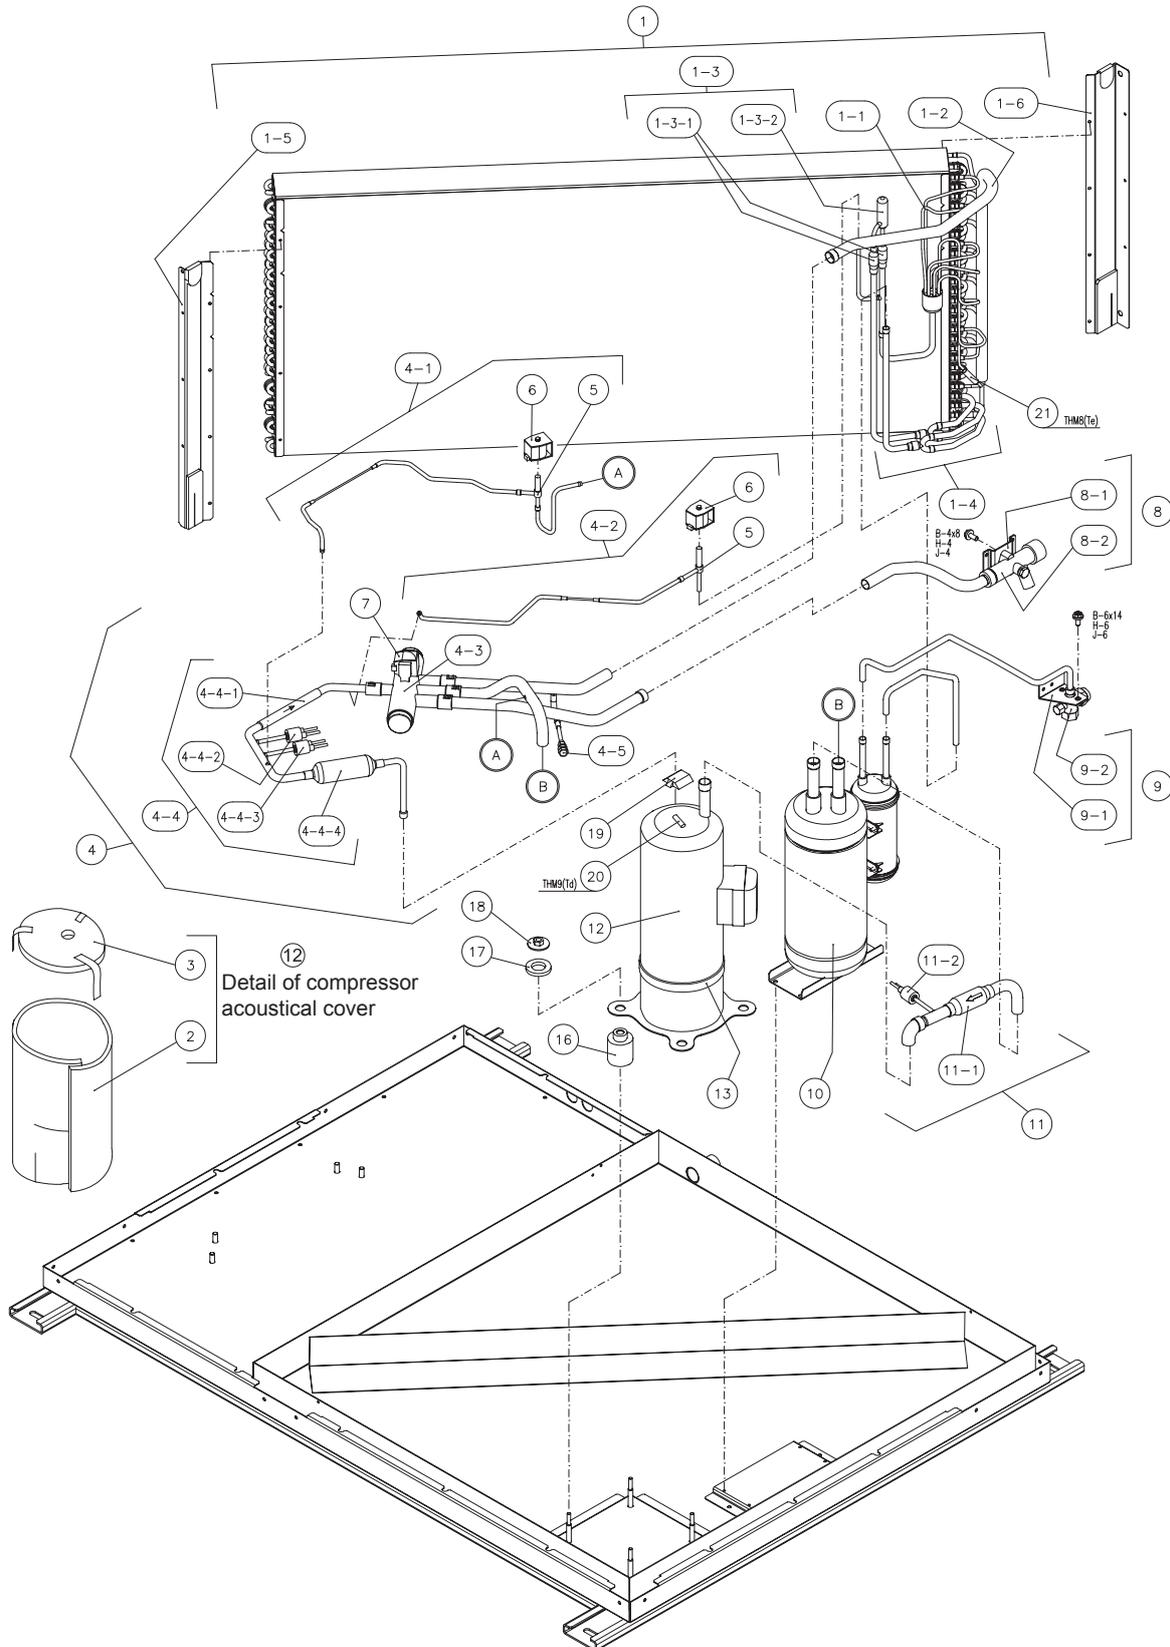


9.3 Electrical parts

9.3.1 RASC-(4-6)HNPE

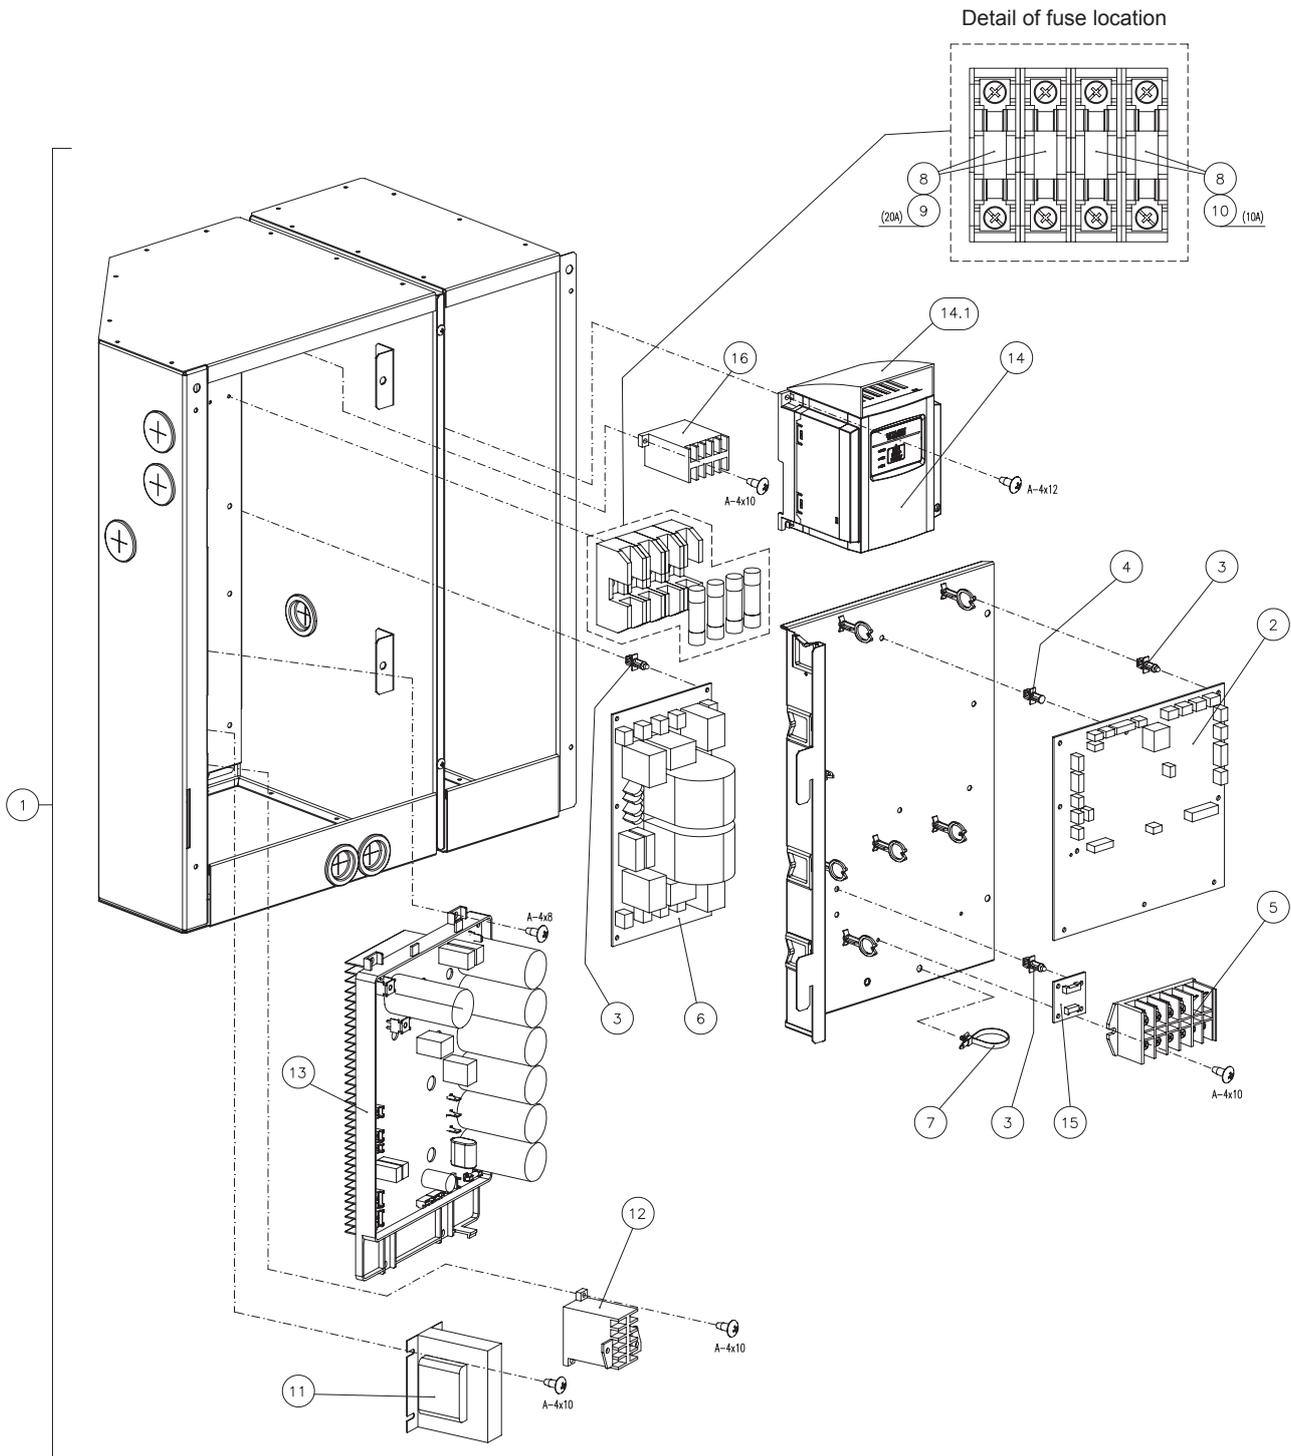

Spare Parts Document: EPN-201410A-4B

9.3.2 RASC-(8/10)HNPE

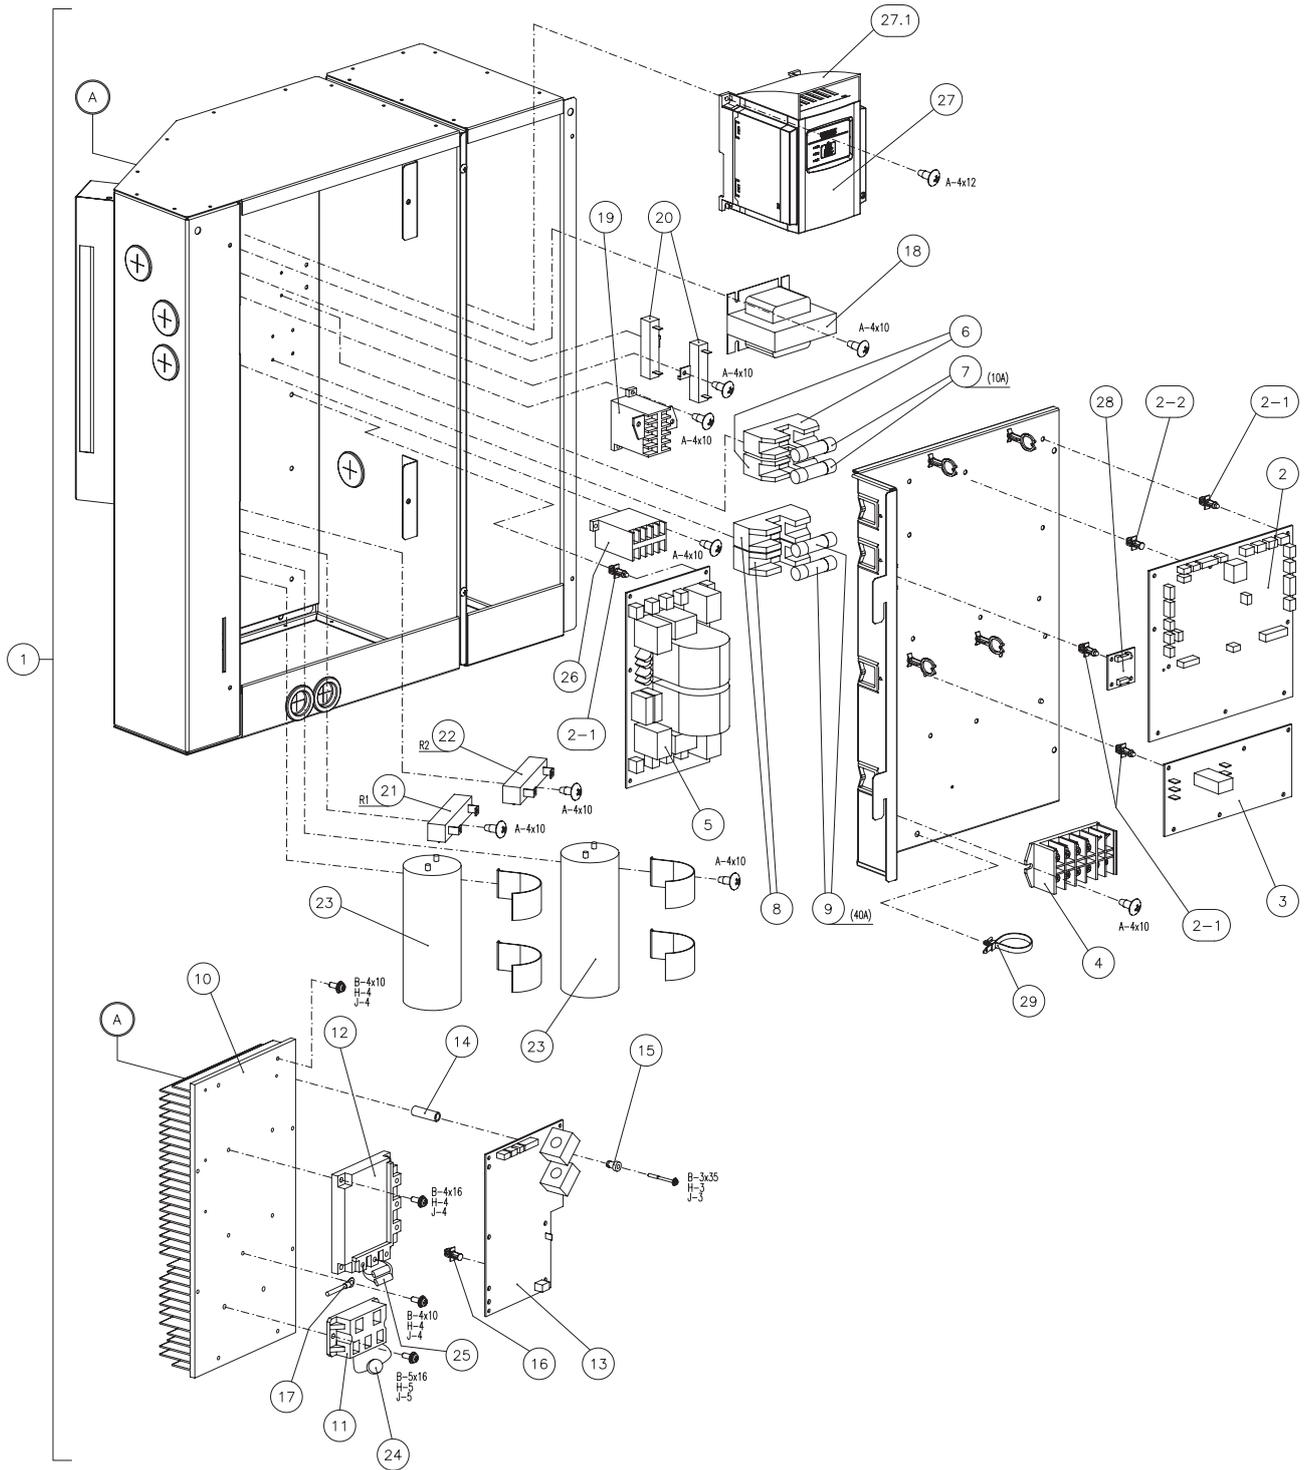

Spare Parts Document: EPN-201410A-5B

9.4 Parts name

9.4.1 Cabinet and fan

Number	Description	Quantity	Remarks	
1	Foot assy	1	Assembly	
2	Drain pan unit	1	Assembly	
3	Drain pan grille	1		
4	Bottom base assembly	1	Assembly (Plate + Insulations + 1)	
5	Electrical box cover unit	1	Assembly	
6	Right cover assy	1	Assembly (Plate + Insulations)	
7	Right cover assy	1	Assembly (Plate + Insulations)	
8	Back cover assy	1	Assembly (Plate + Insulations)	
9	Fan duct sub assy	1	Assembly (Pate + Insulations)	
10	Fan duct sub assy	1	Assembly (Pate + Insulations)	
11	Rubber bushing	2		
12	Protection pipe stay assy	1	For 4-6HP	Assembly (Pate + Insulations)
		2	For 8/10HP	
13	Handle	4		
14	Right corner assy	1	Assembly (Pate + Insulations)	
15	Front cover assy	1	Assembly (Pate + Insulations)	
16	Left corner assy	1	Assembly (Pate + Insulations)	
17	Left back corner assy	1	Assembly (Pate + Insulations)	
18	Inlet air cover assy	1	Assembly (Plate + Insulations)	
19	Outlet air cover assy	1	Assembly (Plate + Insulations)	
20	Left cover assy	1	Assembly (Plate + Insulations)	
21	Upper cover assy	1	Assembly (Plate + Insulations)	
22	Stop valve protection stay	1		
23	Inlet protector net	1	Inlet	
24	Outlet protector net	1	Outlet	
25	Clamp	10	For 4-6HP	For inlet and outlet protector net
		12	For 8/10HP	
26	Float switch	1		
27	Float switch stay	1		
28	Plate valve assy	1	Assembly (Plate + Insulations)	
29	Right back corner assy	1	Assembly (Plate + Insulations)	
30	Fan support	1		
31	Fan support			
32	Washer	4		
33	Washer	4		
34	Nut	4		
35	Fan motor assy	1	Assembly (35-1 + 35-2 + 35-3)	
35-1	Motor	1		
35-2	Runner	1		
35-3	Motor support	1		
36	Thermistor for outdoor ambient temperature	1	THM7 (Ta)	

9.4.2 Refrigerant cycle

◆ RASC-(4-6)HNPE

Number	Description	Quantity	Remarks
1	Condenser assy	1	Assembly (Heat exchanger + 1-1 + 1-2 + 1-3 + 1-4 + 1-5 + 1-6)
1-1	Header L assy	1	Assembly
1-2	Header G assy	1	Assembly
1-3	Expansion valve assy	1	Assembly
1-3-1	Strainer	2	
1-3-2	Expansion valve	1	EVO
1-4	Sub cooler pipe	1	Assembly
1-5	Condenser stay 1 assy	1	Assembly (Plate + Insulations + Rubber Bushing)
1-6	Condenser stay 2 assy	1	Assembly (Plate + Insulations + Rubber Bushing)
2	Acoustical cover	1	
3	Acoustical cover	1	Upper cover
4	4-way valve assy	1	Assembly
4-1	Solenoid valve A assy	1	SVA assembly
4-2	Solenoid valve C assy	1	SVC assembly
4-3	4-way valve	1	RVR
4-4	Dischage pipe assy	1	Assembly
4-4-1	Check valve	1	
4-4-2	Harness pressure sensor	1	PSC (Control)
4-4-3	Pressure switch	1	PSH (High)
4-4-4	Silencer	1	
4-5	Check joint	1	Check JA
5	Body for solenoid valve	2	SVA / SVC
6	Coil for solenoid valve	2	SVA / SVC
7	Coil for 4-way valve	1	
8	Gas valve assy	1	Assembly
8-1	Gas valve stay	1	
8-2	Stop valve	1	For gas line (5/8")
9	Liquid valve assy	1	Assembly
9-1	Liquid valve stay	1	
9-2	Stop valve	1	For liquid line (3/8")
10	Tank unit	1	Assembly (Accumulator + Liquid Tank)
11	Suction pipe assy	1	Assembly
11-1	Strainer	1	
11-2	Pressure switch	1	For low pressure
12	Compressor	1	E402HHD-36D2
13	Crankcase heater	1	240V-52W
16	Vibration absorber	4	
17	Vibration absorber	4	
18	Special nut	4	
19	Rubber cap	1	
20	Thermistor for discharge gas temperature	1	THM9 (Td)
21	Thermistor for evaporaitng pipe temperature	1	THM8 (Te)

◆ RASC-(8/10)HNPE

Number	Description	Quantity	Remarks	
1	Condenser Assembly	1	Assembly (Heat exchanger + 1-1 + 1-2 + 1-3 + 1-4 + 1-5 + 1-6)	
1-1	Header L assy	1	Assembly	
1-2	Header G assy	1	Assembly	
1-3	Expansion valve assy	1	Assembly	
1-3-1	Strainer	2		
1-3-2	Expansion valve	1		
1-4	Liquid valve assy	1	Assembly	
1-4-1	Liquid valve stay	1		
1-4-2	Stop valve	1	For 8HP	For liquid line (3/8")
			For 10HP	For liquid line (1/2")
1-5	Condenser stay 1 assy	1	Assembly (Plate + Insulations + Rubber bushing)	
1-6	Condenser stay 2 assy	1	Assembly (Plate + Insulations + Rubber bushing)	
2	Accumulator	1	Assembly	
3	4-way valve assy	1	Assembly	
3-1	Dischage pipe assy	1	Assembly	
3-1-1	Check valve	1		
3-1-2	Harness pressure sensor	1	PSC (Control)	
3-1-3	Pressure switch	1	PSH (High)	
3-2	Solenoid valve A assy	1	SVA assembly	
3-3	4-way valve	1	RVR	
3-4	Check joint	1	Check JA	
4	Body for solenoid valve	2	SVA	
5	Coil for solenoid valve	2	SVA	
6	Gas valve assy	1	Assembly	
6-1	Stop valve	1	For gas line (3/4")	
6-2	Gas valve atay	1		
7	Solenoid valve C assy	1	SVC assembly	
8	Suction pipe assy	1	Assembly	
8-1	Pressure switch	1	For low pressure	
8-2	Strainer	1		
9	Compressor	1	For 8HP	DA50PHD-D1SE2
			For 10HP	DA65PHD-D1SE2
10	Crankcase heater	1	240V-40.8W	
11	Acoustical cover	1		
12	Acoustical cover cap	1	Upper cap	
13	Vibration absorver	4		
14	Vibration absorver	4		
15	Special nut	4		
16	Rubber cap	1		
17	Thermistor for discharge gas temperature	1	THM9 (Td)	
18	Thermistor for evaporaitng pipe temperature	1	THM8 (Te)	

9.4.3 Electrical parts

◆ RASC-(4-6)HNPE

Number	Description	Quantity	Remarks
1	Electrical box	1	Assembly (Components + Harness + Steel plates + Insulations)
2	Printed circuit board	1	PCB1, PO101B Assy
3	Spacer	16	For PCB, fan adapter and noise filter
4	Push spacer	2	For PCB1
5	Terminal board	1	TB
6	Noise filter	1	NF
7	Clamp	1	
8	Fuse holder	4	
9	Fuse	2	20A
10	Fuse	2	10A
11	Reactor unit	1	
12	Magnetic switch	1	Fuji Electric,FC-0/SP
13	Inverter fin assembly	1	
14	Variable frequency driver	1	VFD
14.1	VFD top cover	1	
15	Fan adapter	1	
16	Magnetic contactor	1	For Fan

◆ RASC-(8/10)HNPE

Number	Description	Quantity	Remarks
1	Electrical box	1	Assembly (Components + Harness + Steel plates + Insulations)
2	Printed circuit board	1	PCB1, PO101B assy
2-1	Spacer	22	For PCB1, PCB3, noise filter and fan adapter
2-2	Push spacer	2	For PCB1
3	Printed circuit board	1	PCB3, PO121A assy
4	Terminal board	1	TB
5	Noise filter	1	NF
6	Fuse holder	2	
7	Fuse	2	10A
8	Fuse holder	2	
9	Fuse	2	40A
10	Inverter fin	1	
11	Diode module	1	DM
12	Transistor module	1	
13	Printed circuit board	1	PCB2, PV093 Assy
14	Collar	4	Plastic Material
15	Bush	4	Plastic Material
16	Push spacer	1	For PCB2
17	Thermistor	1	Fin thermistor
18	Reactor unit	1	DCL
19	Magnetic switch	1	CMC
20	Resister	2	RS1, RS2
21	Resistor	2	R1
22	Resistor	2	R2
23	Capacitor	2	CB1, CB2 (450V, 4700μF)
24	Noise suppressor	1	ZNR Assy
25	Capacitor assembly	1	HRN PC301
26	Magnetic contactor	1	
27	Variable frequency driver	1	VFD
27.1	VFD top cover	1	
28	Fan adapter	1	
29	Clamp	1	

10 . Troubleshooting

Index

10.1. Initial troubleshooting	152
10.1.1. Checking using the 7-segment display.....	152
10.1.2. Failure of the power supply to the indoor unit and the remote control switch.....	153
10.1.3. Abnormal transmission between the remote control switch and the indoor unit.....	154
10.1.4. Abnormal operation of the devices	154
10.2. Troubleshooting procedure	162
10.2.1. On-screen displays during abnormal operation.....	162
10.2.2. Alarm codes.....	163
10.2.3. Troubleshooting by alarm code	165
10.2.4. Alarm codes for the DX Interface	210
10.3. Troubleshooting in check mode	211
10.3.1. Troubleshooting using the remote controller PC-ART	211
10.3.2. Troubleshooting using the remote controller PC-ARF	222
10.3.3. Troubleshooting using the 7 segment display	227
10.4. Checking procedure for main parts	233
10.4.1. Checking procedure for the PCB (PCB1 ref PO101).....	233
10.4.2. Checking procedure for the DIP-IPM inverter.....	235
10.4.3. Checking procedure for the capacitors CB1 & CB2	241
10.4.4. Checking procedure for the DC fan motor.....	242
10.4.5. Checking procedure for the electronic expansion valve for indoor and RASC units	243
10.4.6. Checking procedure for other parts	243

10.1 Initial troubleshooting

10.1.1 Checking using the 7-segment display

◆ Simple checking procedure using the 7-segment display

- 1 Turn on all the indoor units which are connected to the RASC unit.
- 2 Turn on the RASC unit
- 3 Auto-addressing starts. (RASC unit printed circuit board PCB 1). During the auto-addressing, you can check the following items using the 7-segment display of the RASC unit.
 - a. Disconnection of the power supply to the indoor unit.
 - b. Reverse connection of the operating line between the RASC unit and indoor units. In this case, "03" appears after 30 seconds.
 - c. Duplication of the indoor unit number. See alarm code 35.

Normal case

The 7-segment display of the RASC unit is not indicated.

Abnormal case

If there is something wrong, the 7-segment display of the RASC unit displays the following indications:

Cause	Indication	Remarks
The indoor units are not supplied with power.	03	Continues to flash after 30 seconds.
Disconnection of the operating line between the RASC units and the indoor units.	03	Continues to flash after 30 seconds.
Duplicated settings of the indoor unit number on the rotary switch RSW (Refer to the section " 10.2.3 Troubleshooting by alarm code " for the description of the alarm code "35").	35	

10.1.2 Failure of the power supply to the indoor unit and the remote control switch

- The LED and the LCD are not indicated.
- Not operated

If the fuses are blown out or a breaker is activated, investigate the cause of the overcurrent and take the necessary action.

Phenomenon	Cause	Check item	Action (Turn OFF the main switch)
Power failure or power is not ON		Measure the voltage using the voltmeter	Supply the power
Blown out fuse or activation of the breaker at the power source	Short circuit supplied between the wires	Check for any uncovered part of the wires	Remove the cause of the short circuit and replace the fuse
	Short circuit of the wires to earth	Measure the insulation resistance	Remove the cause of the short circuit and replace the fuse
Blown out fuse at the control circuit	Short circuit supplied between the wires	Check for any uncovered part of the wires	Remove the cause of the short circuit and replace the fuse
	Short circuit of the control circuit to earth	Measure the insulation resistance	Remove the cause of the short circuit and replace the fuse
Failure of the transformer at the indoor unit side		Measure the voltage at the secondary side	Replace the transformer
Disconnected cable of the remote control switch		Connect the cable	Replace the cable or repair the cable
Insufficient contacting at the connectors of the remote control switch	Insufficient connection or incorrect connection of the indoor unit PCB	Check the connectors	Correctly connect the connector
	Insufficient connection or incorrect connection of the indoor unit PCB in the remote control switch		
Failure of the remote control switch		Check the remote control switch using the self-check mode *1)	Replace the remote control switch if it failed
Failure of PCB	Unconnected wires to PCB	Check the connectors	Correctly connect the wires
	Failure of PCB	Check PCB using the self-check mode *2)	Replace PCB if it failed
Incorrect wiring connection		Take action according to the procedure that is displayed in "TEST RUN"	



NOTE

- *1): Refer to section "Self-checking procedure of the remote control switch".
- *2): Refer to section "Self-checking procedure of PCB by means of the Remote Control Switch".

10.1.3 Abnormal transmission between the remote control switch and the indoor unit

- RUN LED on the remote control switch:
Flickering every 2 seconds.

Phenomenon	Cause	Check item	Action (Turn OFF the main switch)
Disconnection or insufficient contacting of the remote control cable		Check the cable and the connections	Repair the cable or connect the cable
Failure of the remote control switch		Check the remote control switch using the self-check mode *1)	Replace the remote control switch if the remote control switch is faulty
Failure of PCB (in the indoor unit and the remote control switch)	Disconnected wire to PCB	Check the connectors	Correctly connect the wires
	Failure of PCB	Check PCB using the self-check mode *2)	Replace PCB if it failed



NOTE

- *1): Refer to section “Self-checking procedure of the remote control switch”.
- *2): Refer to section “Self-checking procedure of PCB by means of the Remote Control Switch”.

10.1.4 Abnormal operation of the devices

Phenomenon	Cause		Check item	Action (Turn OFF the main switch)
RUN LED is ON and the LCD is indicated. However, the system does not operate. (For example, the indoor fan, the RASC fan or the compressor does not operate)	Failure of the indoor unit fan motor	Disconnected coil	Measure the coil resistance using the tester	Replace the indoor unit fan motor
		Burnt-out coil	Measure the insulation resistance	
	Failure of the RASC unit fan motor	Disconnected coil	Measure the coil resistance using the tester	Replace the RASC unit fan motor
		Burnt-out coil	Measure the insulation resistance	
	Failure of the magnetic switch for the RASC unit fan motor	Insufficient contacting	Measure the voltage between the contacting parts	Replace PCB for the RASC unit
	Failure of the compressor motor		Measure the resistance between two wires	Replace the compressor
	Failure of the compressor		Check for an abnormal sound from the compressor	
	Failure of the magnetic switch for compressor	Insufficient contacting	Check that the magnetic switch activates correctly or not	Replace the magnetic switch
	Failure of one of PCBs	Disconnected wiring to PCB	Check the connections	Correctly connect the wiring
		Failure of PCB	Check PCB using the self-check mode *2)	Replace PCB if it failed

Phenomenon	Cause		Check item	Action (Turn OFF the main switch)
The compressor does not stop or start even if the setting temperature on the LCD changes to *3)	Failure of air inlet thermistor	Failure of thermistor	Check it by self-checking *1)	Replace or correctly connect the wires if abnormal operation exists
		Disconnection of thermistor		
	Abnormal operation of the remote control switch cord			
	Failure of the indoor unit PCB		Check PCB using the self-check mode *2)	Replace PCB if it failed
	Incorrect optional setting		Check the setting condition of "remote control thermostat" using the optional setting. Setting and control: "00": Control using the indoor thermistor for the suction air. "01": Control using the thermostat of the remote control switch. "02": Control using the average value of the indoor thermistor for the suction air and the thermostat of the remote control switch.	If the thermostat of the remote control switch is not used, set at "00"
Incorrect input/output setting		Check setting condition of "i1" and "i2" by input/output setting. * Setting and control: "01": Room thermostat (cooling) "02": Room thermostat (heating)	In case that room thermostat is not used, set for input signal actually used. If no signal is used, set at "00"	
 NOTE *1): Refer to section "Self-checking procedure of the remote control switch". *2): Refer to section "Self-checking procedure of PCB by means of the Remote Control Switch". *3): Even if the remote control switches are normal, the compressor does not operate under the following conditions: 1. Indoor temperature is lower than 21°C or outdoor temperature is lower than -5°C during the cooling process (DB). 2. Indoor temperature is higher than 27°C (DB) or outdoor temperature is higher than 15°C (WB) during the heating process. 3. When a cooling (or heating) process signal is given to the RASC unit and a different mode as heating (or cooling) process signal is given to the indoor units. 4. When an emergency stop signal is given to RASC unit.				
Air flow volume "HH2" is not indicated on the remote control switch. (Depending on indoor unit model)	Incorrect remote control switch model		Check that remote control switch or transition wiring for remote control switch is directly connected to indoor unit(s) with "HH2" Air flow volume function	Connect remote control switch or transition wiring for remote control switch to indoor unit(s) with "HH2" air flow volume function if necessary

Phenomenon	Cause		Check item	Action (Turn OFF the main switch)
Indoor fan speed does not change	Failure of the discharge air temperature thermistor	Failure of the thermistor	Check the thermistor using the self-check mode *1)	Replace or correctly connect the wiring when it is abnormal
		Disconnected wire of the thermistor		
	Failure of the remote control switch	Failure of PCB for the indoor unit	Check it using the self-check mode *2)	Replace if it failed Replace if PCB fails
No defrost operation mode is available during the heating process or the defrost operation continues	Failure of thermistor for RASC evaporating temperature during heating	Failure of thermistor	Replace or correctly connect when it is abnormal	
		Disconnected wire of thermistor		
	Failure of 4-way valve	Disconnected 4-way valve coil	Measure the resistance of coil	Replace the 4-way valve
		Incorrect activation of 4-way valve	Enforced power supply	
	Disconnected control wires between indoor unit and RASC unit		Check the connectors	Correctly connect the wiring
	Failure of the RASC units of PCB	Disconnected wiring to PCB	Check the connectors	Correctly connect the wiring
		Failure of PCB	Check PCB using the self-check mode *2)	Replace PCB when the check mode is not available
Failure of the indoor unit of PCB	Disconnected wiring to PCB	Check the connectors	Correctly connect the wiring	
	Failure of PCB	Check PCB using the self-check mode *2)	Replace if PCB fails	
Failure of PCB in the indoor unit or the remote control switch				

i NOTE

- *1): Refer to section “Self-checking procedure of the remote control switch”.
- *2): Refer to section “Self-checking procedure of PCB by means of the Remote Control Switch”.

Phenomenon	Cause	Check item	Action (Turn OFF the main switch)	
Insufficient cooling process	Indoor cool load is greater than the cooling capacity	Calculate the cool load	Use a bigger unit	
	Excessively low suction pressure	Gas leakage or shortage of refrigerant	Measure superheat	Correctly charge the refrigerant after repairing the gas leakage
		Excessively small diameter tube or long piping	Measure and check the field-supplied pipes	Use the correct pipes
		Incorrect activation of the check valve of the RASC unit	Check whether or not the temperature difference exists before/after the check valve	Replace the check valve for the RASC unit
		Failure or malfunction of the expansion valve	Check for clogging	Remove the clogging
			Check the connection cord and the connector	Replace the connector
			Is there an operation sound from the coil?	Replace the coil
			Is the thermistor on the compressor normal?	Replace the thermistor
			Is the thermistor installed correctly on compressor?	Correctly install the thermistor
		Clogged strainer in the indoor unit; clogging at the low pressure piping	Check the temp. difference at the inlet and the outlet of the strainer	Replace the strainer in the indoor unit
		Clogging at the low pressure piping	Check the temperature difference	Remove the clogging
		Insufficient air flow to the indoor unit heat exchanger	Check for clogged air filter	Clean the air filter
			Check for an obstacle at the inlet or the outlet	Remove the obstacles
		Excessively low air temp. to the indoor unit heat exchanger	Insufficient speed of the indoor unit fan motor?	Replace the fan motor
			Short-circuited indoor unit air?	Remove the cause of the short-circuited air

Phenomenon	Cause		Check item	Action (Turn OFF the main switch)
Insufficient cooling process	Excessively high discharge pressure	Insufficient air flow to the RASC unit heat exchanger	Clogging of the RASC unit heat exchanger?	Remove the clogging
			Obstacles at the inlet or the outlet of the RASC unit heat exchanger	Remove the obstacles
			Is the service area for the RASC unit sufficient?	Secure the service area
			Correct fan speed?	Replace the fan motor
		Excessively high air temperature to the RASC unit heat exchanger	Short-circuited air to the RASC unit?	Remove the cause of the short-circuited air
			Any other heat load near the RASC unit?	Remove the heat source
		Excessively charged refrigerant	Expansion valve opening	Correctly charge the refrigerant
		Non-condensate gas in cycle	Check each temperature and each pressure	Charge the refrigerant after the vacuum pumping
		Clogging of the discharge piping	Check for clogging	Remove the clogging
		Failure or malfunction of the expansion valve	Check for clogging	Remove the clogging
			Check the connection cord and the connector	Replace the connector
			Is there an operation sound from the coil?	Replace the coil
	Is the thermistor on the compressor normal?		Replace the thermistor	
	Is the thermistor installed correctly on the compressor?		Correctly install the thermistor	
	Malfunction or internal leakage of the 4-way valve		Check the temperature difference at the inlet and the outlet of the 4-way valve	Replace the 4-way valve
	Excessively low suction pressure	Malfunction or internal leakage of the 4-way valve	Check the temperature difference between the inlet and the outlet of 4-way valve	Replace the 4-way valve
		Failure of solenoid valve for bypass	Check refrigerant leakage of solenoid valve	Replace solenoid valve
	Discharge temperature of the indoor unit is unstable		Check the expansion valve of the indoor unit in the same system	Replace the failed expansion valve of the indoor unit

Phenomenon	Cause		Check item	Action (Turn OFF the main switch)
Insufficient heating process	Indoor heat load is greater than the heating capacity		Calculate the heat load	Replace the unit with a bigger unit
	Excessively low suction pressure	Gas leakage or insufficient refrigerant charge	Measure superheat	Correctly charge the refrigerant after the gas leakage check and repairing
		Excessively small diameter or long piping	Measure the field-supplied piping	Use the specified pipes
		Failure or malfunction of the expansion valve	Check for clogging	Remove the clogging
			Check the connection cord and the connector	Replace the connector
			Is there an operation sound from the coil?	Replace the coil
			Is the thermistor on the compressor normal?	Replace the thermistor
		Clogging of IU/RASC unit strainer	Is the thermistor installed correctly on compressor?	Correctly install the thermistor
			Check the temperature difference between the inlet and the outlet of strainer	Replace the strainer for the RASC unit or the indoor unit
		Clogging of suction piping	Check the temperature difference of each part	Remove the clogging
		Insufficient air flow through the RASC unit heat exchanger	Is the RASC unit heat exchanger clogged?	Remove the clogging
			Are there any obstacles at the inlet or the outlet of RASC unit?	Remove the obstacles
			Is the service area for the RASC unit sufficient?	Secure a sufficient service area
			Check the speed of the RASC unit fan	Replace the fan motor
		Excessively low air temperature through the RASC unit heat exchanger	Check for any short-circuited air to the RASC unit	Remove the cause of the short-circuited air
		Defrosting is insufficiently completed	Check the thermistor for the defrost operation	Replace the thermistor for the defrost operation


Phenomenon	Cause		Check item	Action (Turn OFF the main switch)
Insufficient heating process	Excessively high discharge pressure	Insufficient air flow to the indoor unit heat exchanger	Check the filter for a clogging	Remove the clogging
			Check for any obstacles at the inlet or the outlet of the indoor unit	Remove the obstacles
			Check the indoor fan speed	Replace the fan motor
		Excessively high air temperature to the indoor unit heat exchanger	Check whether or not the short-circuited air exists	Remove the cause of the short-circuited air
		Excessively charged refrigerant	Check the refrigerant quantity *1)	Correctly charge the refrigerant
		Non-condensate gas in refrigerant cycle	Check the refrigerant quantity *1)	Recharge the refrigerant after the vacuum pumping
		Clogging of the discharge pressure piping	Check for clogging	Remove the clogging
		Malfunction or internal leakage of the 4-way valve	Check the temperature difference at the inlet and the outlet of the 4-way valve	Replace the 4-way valve
		Malfunction of the check valve of the RASC unit	Check the temperature difference at the inlet and the outlet of the check valve	Replace the check valve
	Excessively high suction pressure	Malfunction or internal leakage of 4-way valve	Check the temperature difference at the inlet and the outlet of the 4-way valve	Replace the 4-way valve
	Discharge temperature of the indoor unit is unstable	Check the expansion valve of the indoor unit in the same system	Replace the failed expansion valve of the indoor unit	

 **NOTE**
*1): Refer to section “3.4.1 Refrigerant charge amount” in this document.

Phenomenon	Cause	Check item	Action (Turn OFF the main switch)	
Cooling or heating process with an abnormal sound	Foreign particles inside of the fan casing	Visually inspect it	Remove the foreign particles	
	Indoor unit fan runner is hitting the casing	Visually inspect it	Adjust the position of the fan runner	
	RASC unit fan runner is hitting the casing	Visually inspect it	Adjust the position of the fan runner	
	Abnormal sound from the compressor	Faulty Installation	Check that each part is tightly fixed	Tightly fix each part
		Liquid refrigerant compression	Adjust the suction gas temp. and pressure	Ensure superheat
		Wear or breakage of the internal compressor parts	Abnormal sound from the inside of the compressor	Replace the compressor
		No heating by the oil heater	Check the resistance (oil heater, fuse)	Replace the oil heater or the fuse
Humming sound from the magnetic conductor	Check the surface of the contacts	Replace the magnetic switch		
Abnormal vibration of the cabinets	Check each fixing screw	Tightly fix each screw		
RASC fan does not operate when the compressor operates	Obstacle at the RASC fan	Check the obstacles	Remove the obstacles	
	Watching condition for the heating process	Wait for the switching of the 4-Way valve (1 ~ 3 minutes)	If the 4-Way valve does not switch, check for insufficient refrigerant	
Indoor fan does not operate when the compressor operates	Discharge pressure does not increase higher than 1.5 MPa due to the insufficient refrigerant	Check the operation pressure	Add the refrigerant	
	Disconnected wiring for the indoor fan	Check the wiring	Connect the wiring correctly	

10.2 Troubleshooting procedure

10.2.1 On-screen displays during abnormal operation

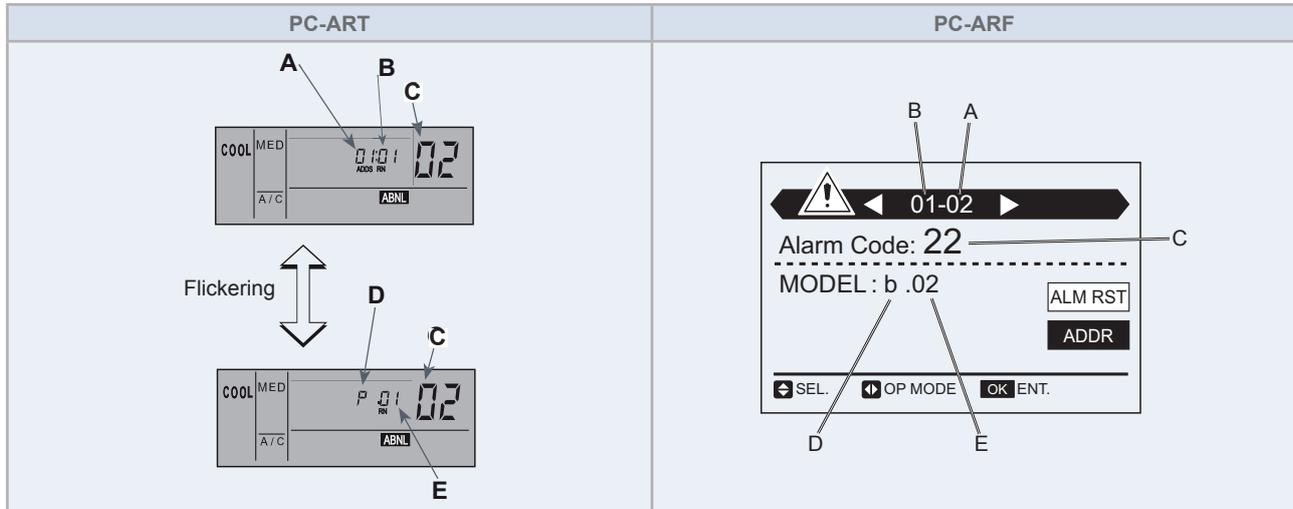

Abnormal operation can be produced due to the following reasons:

◆ Malfunction

The RUN (red) indicator flashes.

The ALARM indicator appears on the liquid crystal display.

The screen also displays the following items:

- A: indoor unit address.
- B: Refrigerant cycle number.
- C: Alarm code.
- D: Model code.

Model code	
Indication	Model
<i>H</i>	Heat pump
<i>P</i>	Inverter
<i>F</i>	Multi (SET-FREE)
<i>ℓ</i>	Cooling only
<i>ℰ</i>	Other
<i>b</i>	IVX, individual operation
<i>L</i>	KPI

- E: If there are various indoor units connected, the above mentioned information is shown for each one of them.

◆ Power supply failure.

All displays disappear.

If the unit stops due to a power shortage, it will not start again, even though the power comes back on. Carry out the start-up operations again.

If the power failure lasts less than 2 seconds, the unit will start again automatically.

◆ Electrical noise

The displays can disappear from the screen and the unit can stop. This is because the microcomputer has been activated to protect the unit from electrical noise.

10.2.2 Alarm codes

- The RUN LED flickers and “ALARM” is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section.
- The unit number and the alarm code are displayed on the 7 segments of the RASC unit PCB and Remote control Screen (if installed).



Code number	Category	Type of abnormality	Main cause
1	Indoor unit	Activation of protection device (float switch)	Failure of fan motor, drain discharge, PCB, relay, float switch activated (High Water Level in Drain Pan, Abnormality of Drain Pipe, Float Switch or Drain Pan)
2	RASC unit or Power source	Activation of protection device or Abnormality of power source wiring	Activation of the float switch (FS). Activation of the reverse phase sensor (RPR) Activation of the internal thermostat protection of the motor (ITO) Activation of the high pressure switch (PSH) Variable frequency driver failure (VFD)
3	Transmission	Abnormal transmission between outdoor and indoor units	Incorrect wiring. Loose terminals, Failure of PCB. Tripping of fuse. Power supply OFF.
4		Abnormal transmission between inverter PCB (DIP-IPM) and RASC unit PCB (PCB1)	Transmission failure between inverter PCBs. (Loose Connector, Wire Breaking, Blowout of Fuse)
5	Power supply	Reception of abnormal operation code for detection of power source phase	Power source with abnormal wave pattern. Main power supply phase is reversely connected or one phase is not connected. (units with power supply 3N~ 400V 50Hz only)
6	Voltage	Excessively low voltage or excessively high voltage for the inverter	Voltage drop in power supply. Incorrect wiring or insufficient capacity of power supply wiring.
7	Cycle	Decrease in discharge gas superheat	Excessive Refrigerant Charge, Failure of Thermistor, Incorrect Wiring, Incorrect Piping Connection, Expansion Valve Locking at Opened Position (Disconnected Connector).
8		Excessively high discharge gas temperature at the top of compressor	Insufficient refrigerant charge, refrigerant leakage. Expansion valve closed or clogged.
11	Indoor units sensor	Air inlet thermistor	Failure of thermistor, sensor, connection. (Incorrect Wiring, Disconnected Wiring, Wire Breaking, Short Circuit).
12		Air outlet thermistor	
13		Freeze protection thermistor	
14		Gas piping thermistor	
16		Remote thermistor	
17		Thermistor of RCS	
19	Fan motor	Activation of the protection device for the indoor fan motor	Failure of fan motor
20	RASC unit sensor	Compressor thermistor	Incorrect wiring, disconnected wiring, broken cable, short circuit.
21		High pressure sensor	
22		Thermistor for outdoor ambient temperature (THM7)	
23		Thermistor for discharge gas temperature (THM9)	
24		Thermistor for evaporating temperature (THM8)	Incorrect Wiring, Disconnected Wiring, Wire Breaking, Short Circuit, Fan Motor Locking at Heating Operation.
29		Low pressure sensor	Incorrect wiring, disconnected wiring, broken cable, short circuit.

Code number	Category	Type of abnormality	Main cause
31	System	Incorrect capacity setting or combined capacity between outdoor and indoor units	Incorrect Capacity Code Setting, Excessive or Insufficient Indoor Unit Total Capacity Code
32		Incorrect setting signal from another Indoor Unit in same system (RPK only)	Abnormality of another Indoor Unit in the same Refrigerant Cycle (Failure of Power Source, Abnormality of PCB)
35		Incorrect indoor unit number setting	Duplication of indoor unit number , number of indoor units over specifications.
36		Incorrect of Indoor Unit Combination.	"Indoor Unit is Designed for Other Refrigerant (R22 or R407C)."
38		Abnormality of picking up circuit for protection (RASC unit)	Failure of indoor unit PCB, incorrect wiring, connection to PCB in indoor unit.
41	Pressure	Cooling overload (possible activation of high pressure device)	OU pipe thermistor temp. is higher than 55 °C and the compressor top temperature is higher than 95 °C, OU protection device is activated.
42		Heating overload (high-pressure device may be activated)	If IU freeze protection thermistor temperature is higher than 55 °C and compressor top temperature is higher than 95 °C, OU protection device is activated.
43		Activation of the safety device from compression ratio decrease	Abnormal compress (Compressor, Inverter damage)
44		Activation of the safety device from excessively high suction pressure	Overload during cooling, high temperature with heating, locked expansion valve
45	Protection Device	Activation of the safety device from excessively high discharge pressure	Overload (obstruction of HEX, short circuit) mixture of inert gas, Excessive Refrigerant.
47		Activation of the safety device from excessively low suction pressure (protection from vacuum operation)	Shortage or leakage of refrigerant, piping clogging, expansion valve close-locked, fan motor locked.
48		Activation of overcurrent protection	Overload, overcurrent. Failure of DIP IPM, IPM or PCB2, heat exchanger clogged, locked compressor. EVI/EVO failure.
51	Inverter	Abnormal operation of the current sensor	Incorrect wiring of current sensor. Failure of control PCB, DIP IPM, IPM or PCB2.
53		Inverter fin temperature increase	Inverter module (IPM, DIP-IPM) and PCB2 abnormality. Failure of compressor, clogging of heat exchanger.
54		Abnormality of inverter fin temperature	Heat Exchanger Clogging. Fan Motor Failure
55		Abnormality of inverter module	Failure of DIP-IPM, IPM or PCB2.
EE	Compressor	Compressor protection	"Compressor failure. This alarm code appears when the following alarms 02, 07, 08, 45, 47 occur three times within 6 hours."
b0	IU model setting	Incorrect setting of unit model	No setting of unit capacity or incorrect setting of unit capacity
b1	Number setting	Incorrect setting address or refrigerant cycle	Over 64 indoor units setting by number or indoor unit address.
b5		Incorrect setting of indoor unit number for H-LINK type	The number of indoor units connected to the H-Link II of one system is 17 or higher


10.2.3 Troubleshooting by alarm code

Alarm code	01	Activation of the safety device (float switch) in the indoor unit (except RPK series)
------------	-----------	---

This alarm code is displayed when the contact between #1 and #2 of CN14 is not closed over 120 seconds during the cooling process, the heating process or the fan operation.

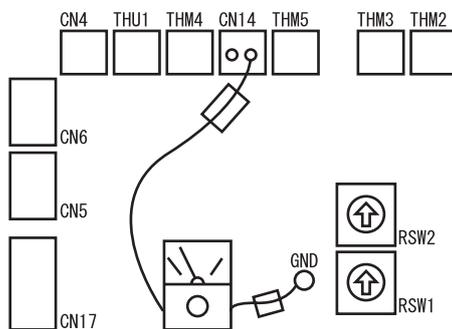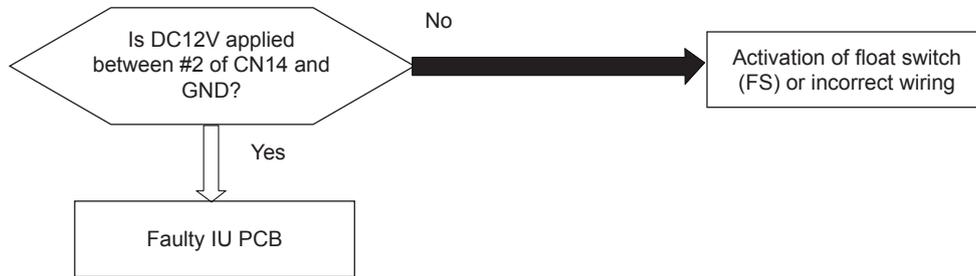


Indication of RASC unit PCB

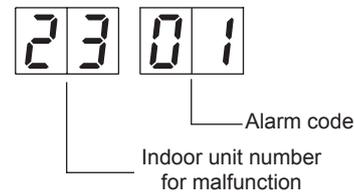

If all the above checks have been overcome, see the status of the following item:

- Check if float switch (FS) connected to the CN14 is open/activated by using a tester.

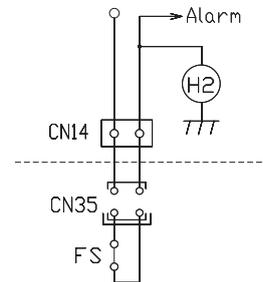

CN14: Safety devices line scheme



Phenomenon	Cause		Check item	Action (Turn OFF the main switch)
Activation of the float switch	High Drain Level	Clogging of the drainage	Check the drain pan	Remove the clogged foreign particles
	Faulty float switch	Fault	Check the continuity when the drain level is low	Replace the float switch if faulty
		Faulty contacting	Measure the resistance by means of the tester	Fix the looseness and Replace the connector
		Faulty connection	Check the connections	Repair the connection
Faulty indoor unit PCB (except RPC)			Check PCB by means of the self-check mode *1)	Replace PCB if faulty
Faulty wiring (RPC only)			Check whether short-circuited connector is connected to CN-14)	Connect it correctly

i NOTE

*1): Refer to section "Self-checking procedure of PCB by means of the Remote Control Switch".


Alarm code	01	Activation of the safety device (flow switch) in the indoor unit (RPK only)
------------	----	---

Indication of RASC unit PCB

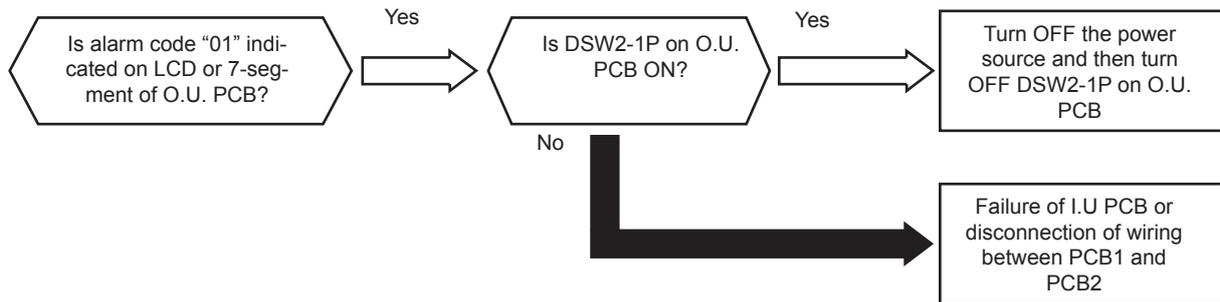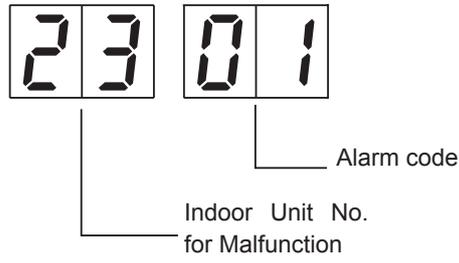

Alarm code	02	Activation of the safety device in the RASC unit
------------	-----------	--

This alarm is indicated when one of safety devices is activated during compressor running.

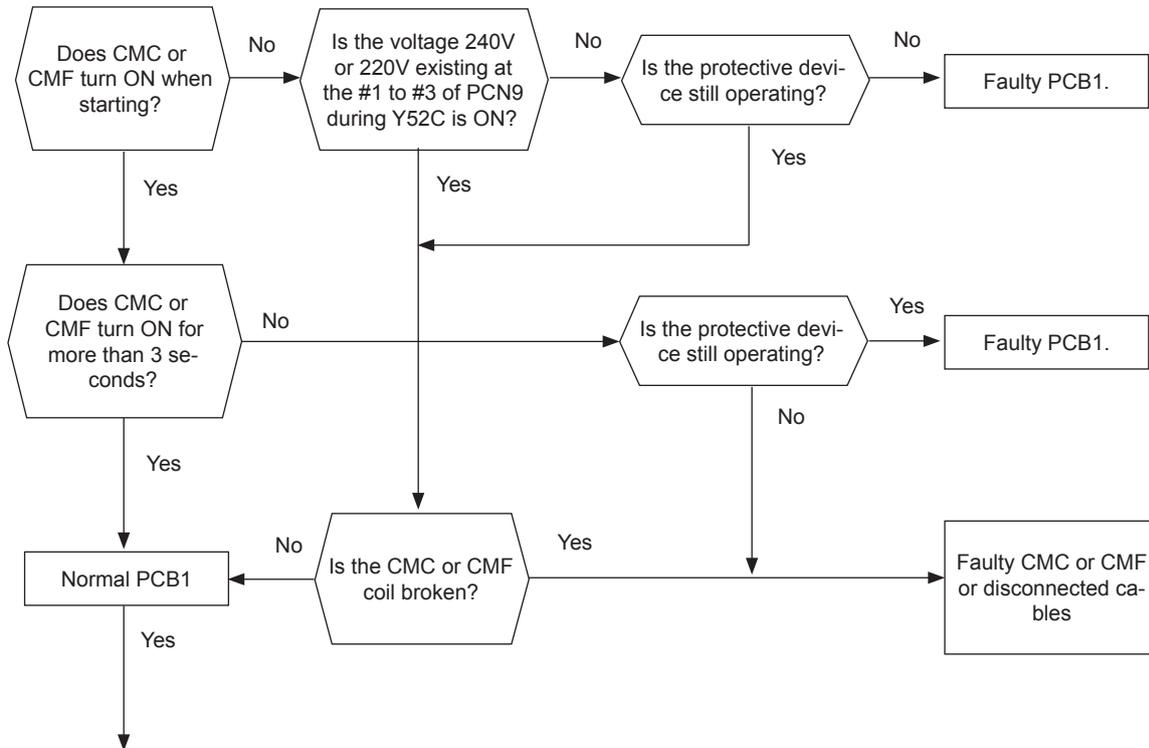

If all the above checks have been overcome, see the status of the following items in this order:
 (Check if some of the following devices terminals connected to the PCN8 are open/activated by using a tester)

- ① Activation of the float switch (FS)
- ② Activation of the internal thermostat protection of the motor (ITO)
- ③ Activation of the high pressure switch (PSH: 4.15 MPa)
- ④ Variable frequency driver failure (VFD)

i NOTE
 Please, refer to the table on the following page in order to know the specific details of each device.

Phenomenon		Cause		Check item	Action (Turn OFF the main switch)		
①	Activation of the float switch (FS)	High level of condensed water in the drain pan	Clogging of the drainage	Check the drain piping	Remove the clogged foreign particles		
		Faulty float switch		Check the continuity when the drain level is low	Replace the float switch if faulty		
		Insufficient contact or incorrect connection		Measure the resistance using the tester	Correct looseness and replace the connector		
Check the connections	Repair the connection						
②	Activation of the internal thermostat protection of the motor (ITO)	Locked motor		Check the correct rotation of the fan	Remove a possible obstacle of the fan		
		Insufficient contact or incorrect connection		Check the continuity after the fan motor temperature decreases to room temp	Replace the fan motor if there is no continuity		
				Measure the resistance by means of the tester	Correct looseness. Replace the connectors		
				Check the connections	Repair the connections		
		Coil damage		Measure the coil resistance and the insulation resistance	Replace the motor if faulty		
		Incorrect connection of the fan motor or variable frequency driver (VFD) (Only for RASC-10HP)		Check if it is disconnected the connector for fan motor protection (CN30)	Connect it		
Check the connection of the fan motor power cables with the connector for fan motor power supply (CN35) and with the fan motor terminal box.	Connect it						
		Check if it is disconnected the fan motor power cables (U,V,W) and the fan motor earth cable from the variable frequency driver	Repair the connections				
③	Activation of the high-pressure switch due to the excessively high discharge pressure (PSH)	Insufficient air flow to the heat exchanger (RASC heat exchanger during the cooling process or indoor heat exchanger during the heating process)		Clogging of the heat exchanger	Check if the heat exchanger is clogged (by dust or any strange particle)	Remove the dust or strange particles	
				Low fan speed	Check the fan motor speed (refer to the Component data in the Technical catalogue)	- Ensure the correct fan speed - Ensure that the RSW of the PCB3 is in factory setting position (B position) (Only for RASC-10HP) - Replace the fan motor if faulty	
				Fan not running (Only for RASC-10HP)		Check that the contacts of the terminals 12, 18, 19 of the variable frequency driver are closed	Ensure that the correct connection of the cables.
						Check that the voltage level of the terminals 53, 55 of the variable frequency driver are higher than 1.0 Vdc	
		Fan not running	Connect directly 230/400V (5HP/10HP) into the fan motor terminals and check the fan operation.	If not operation, replace the fan motor.			


Phenomenon	Cause		Check item	Action (Turn OFF the main switch)
③ Activation of the high-pressure switch due to the excessively high discharge pressure (PSH)	Excessively high temp. air to the indoor unit		Calculate the heat load	Reduce the heat load or use a bigger unit if possible
			Check for hot air near the ceiling (heating)	Provide good circulation
			Check for short-circuited air (heating)	Remove the short-circuited air
			Check if there is any heat source near the unit	Remove the heat source
	Faulty high-pressure switch	Faulty pressure switch	Measure the discharge pressure. Check the continuity after the decrease of the pressure	Replace the pressure switch if faulty
		Insufficient contacting	Measure the resistance using the tester	Fix the looseness. Replace the connector
		Incorrect connection	Check the connections	Repair the connections
	Faulty or malfunction of the expansion valve		Check for clogging	Remove the clogging
			Check the connect wiring and the connectors	Replace the connector
			Check the operation sound from the coil	Replace the coil
			Check the discharge gas thermistor	Replace the thermistor
			Check the attaching state of the discharge gas thermistor	Reattach the thermistor
			Disconnected of the connector or coil not well assembled	Fix the looseness or reconnect the connector
			Fully closed and locked	Replace the expansion valve
	Faulty gas bypass solenoid valve	Check for clogging	Replace the gas bypass solenoid valve	
	Overcharged refrigerant	Check the cycle operation temperature	Charge the refrigerant correctly	
	Mixture of the non-condensate gas in the refrigerant cycle	Check the air temperature and the pressure	Recharge the refrigerant after the vacuum pumping	
Clogging of the discharge piping	Check for clogging	Remove the clogging		
Liquid or gas line stop valve does not operate correctly	Check the stop valves	Fully open the stop valves		
Clogging of the check valve	Check for clogging	Replace the check valve		


Phenomenon		Cause	Check item	Action (Turn OFF the main switch)
④	Variable frequency driver failure (VFD) (Only for RASC-10HP)	Power supply failure in the variable frequency driver	Check if it is disconnected the mains supply cables (L1,L2,L3) from the variable frequency driver	Connect it correctly
			Check if the fuses (EF3, EF4) are blown out	Replace the fuses
			Check if the control terminal cables are correctly connected	Connect it correctly
		Over temperature of the VFD terminal	Check the temperature in the installation area	Ensure that the installation area has a proper ventilation so that ambient temperature around the unit does never exceed 46°C
		Incorrect connection of the fan motor or variable frequency driver (VFD)	Check if it is disconnected the fan motor power cables (U,V,W) and the fan motor earth cable from the variable frequency driver	Repair the connections
	Faulty variable frequency driver	-	Replace the variable frequency driver	

Alarm code	03	Abnormal transmission between the indoor units and the RASC unit
------------	-----------	--

- This alarm is displayed when an abnormal operation is maintained for three minutes after the normal transmission between the indoor units and the RASC unit. Also, an abnormal operation is maintained for 30 seconds after the micro-computer is automatically reset.
- The alarm is displayed when the abnormal transmission is maintained for 30 seconds from the starting of the RASC unit.
- Investigate the cause of the overcurrent and take the necessary action when the fuses are blown out or the circuit breaker for the RASC unit is activated.
- This alarm code may be indicated when the inverter or the fan motor malfunction and the RASC unit cannot secure the power source (No indication on the 7-segment of RASC unit PCB). In this case, surely check the inverter, fan motor and the continuity of the fuse on the circuit.

(Refer to the next page)

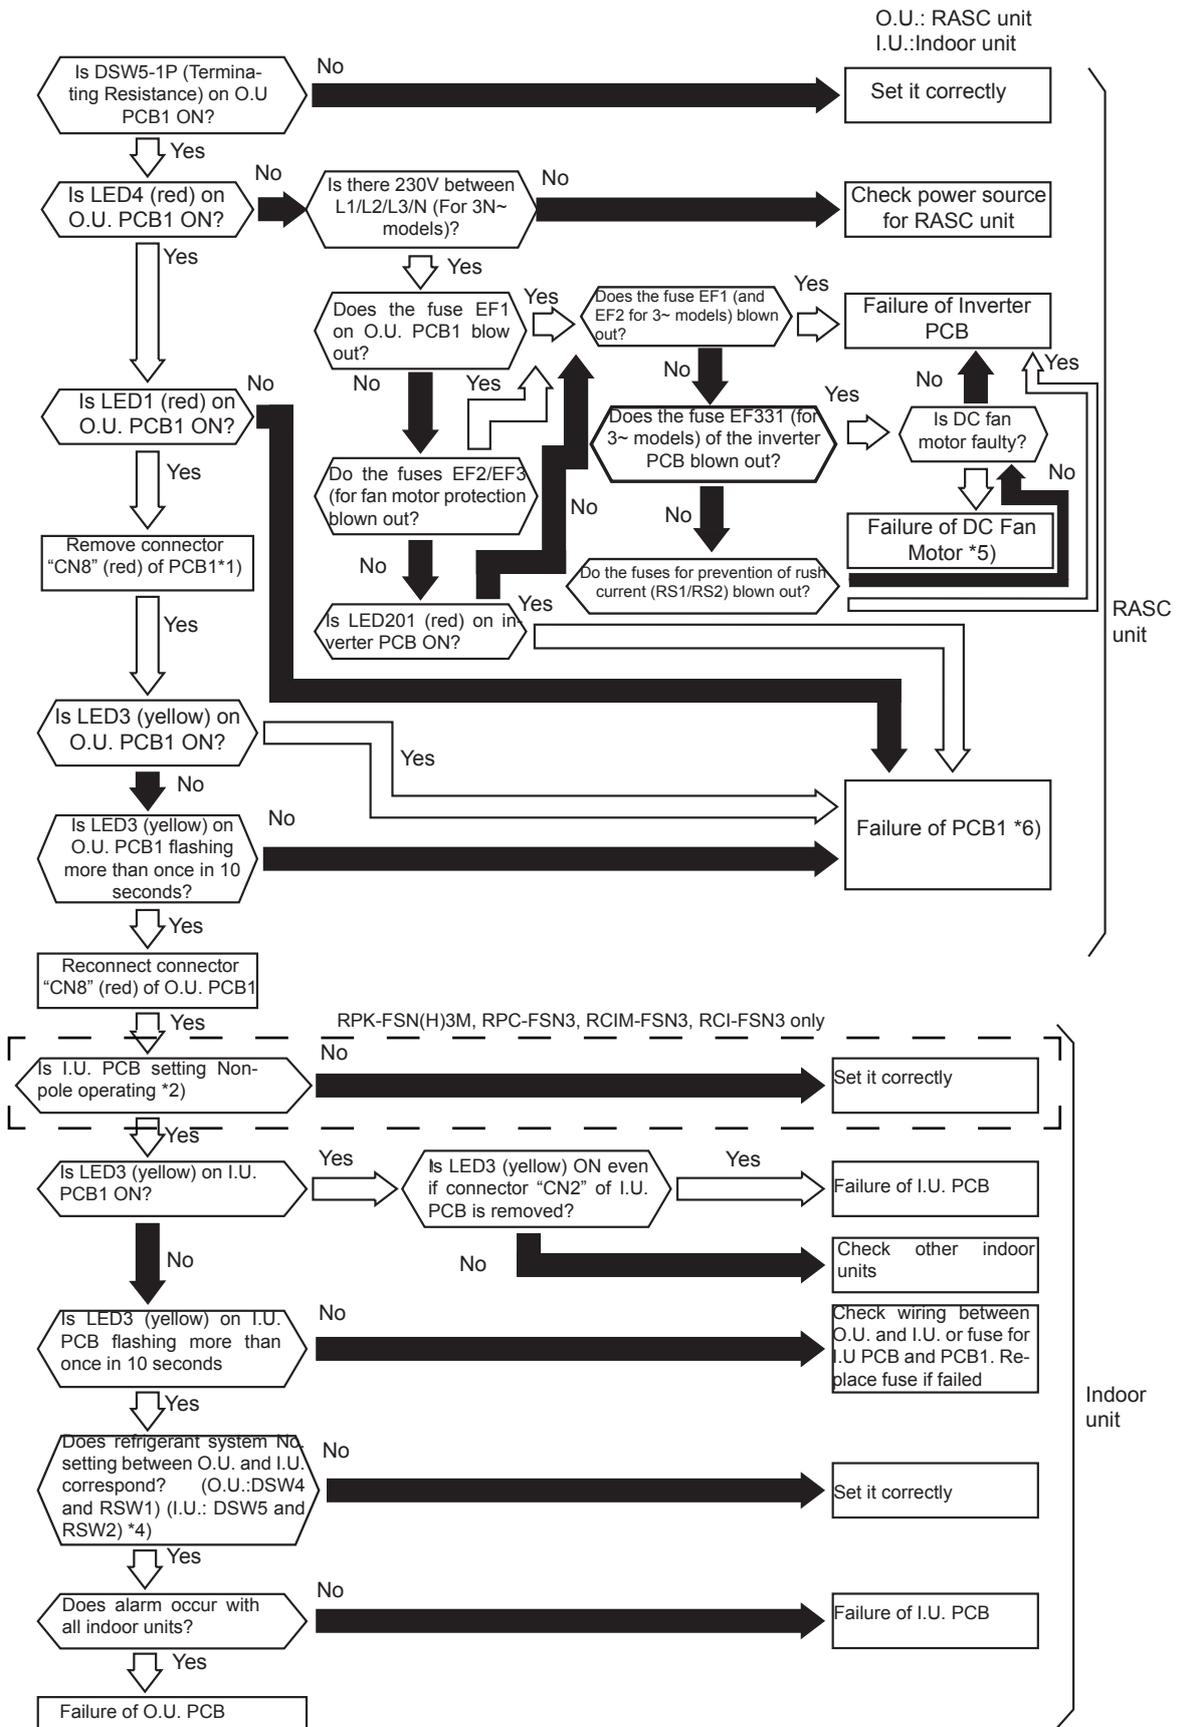

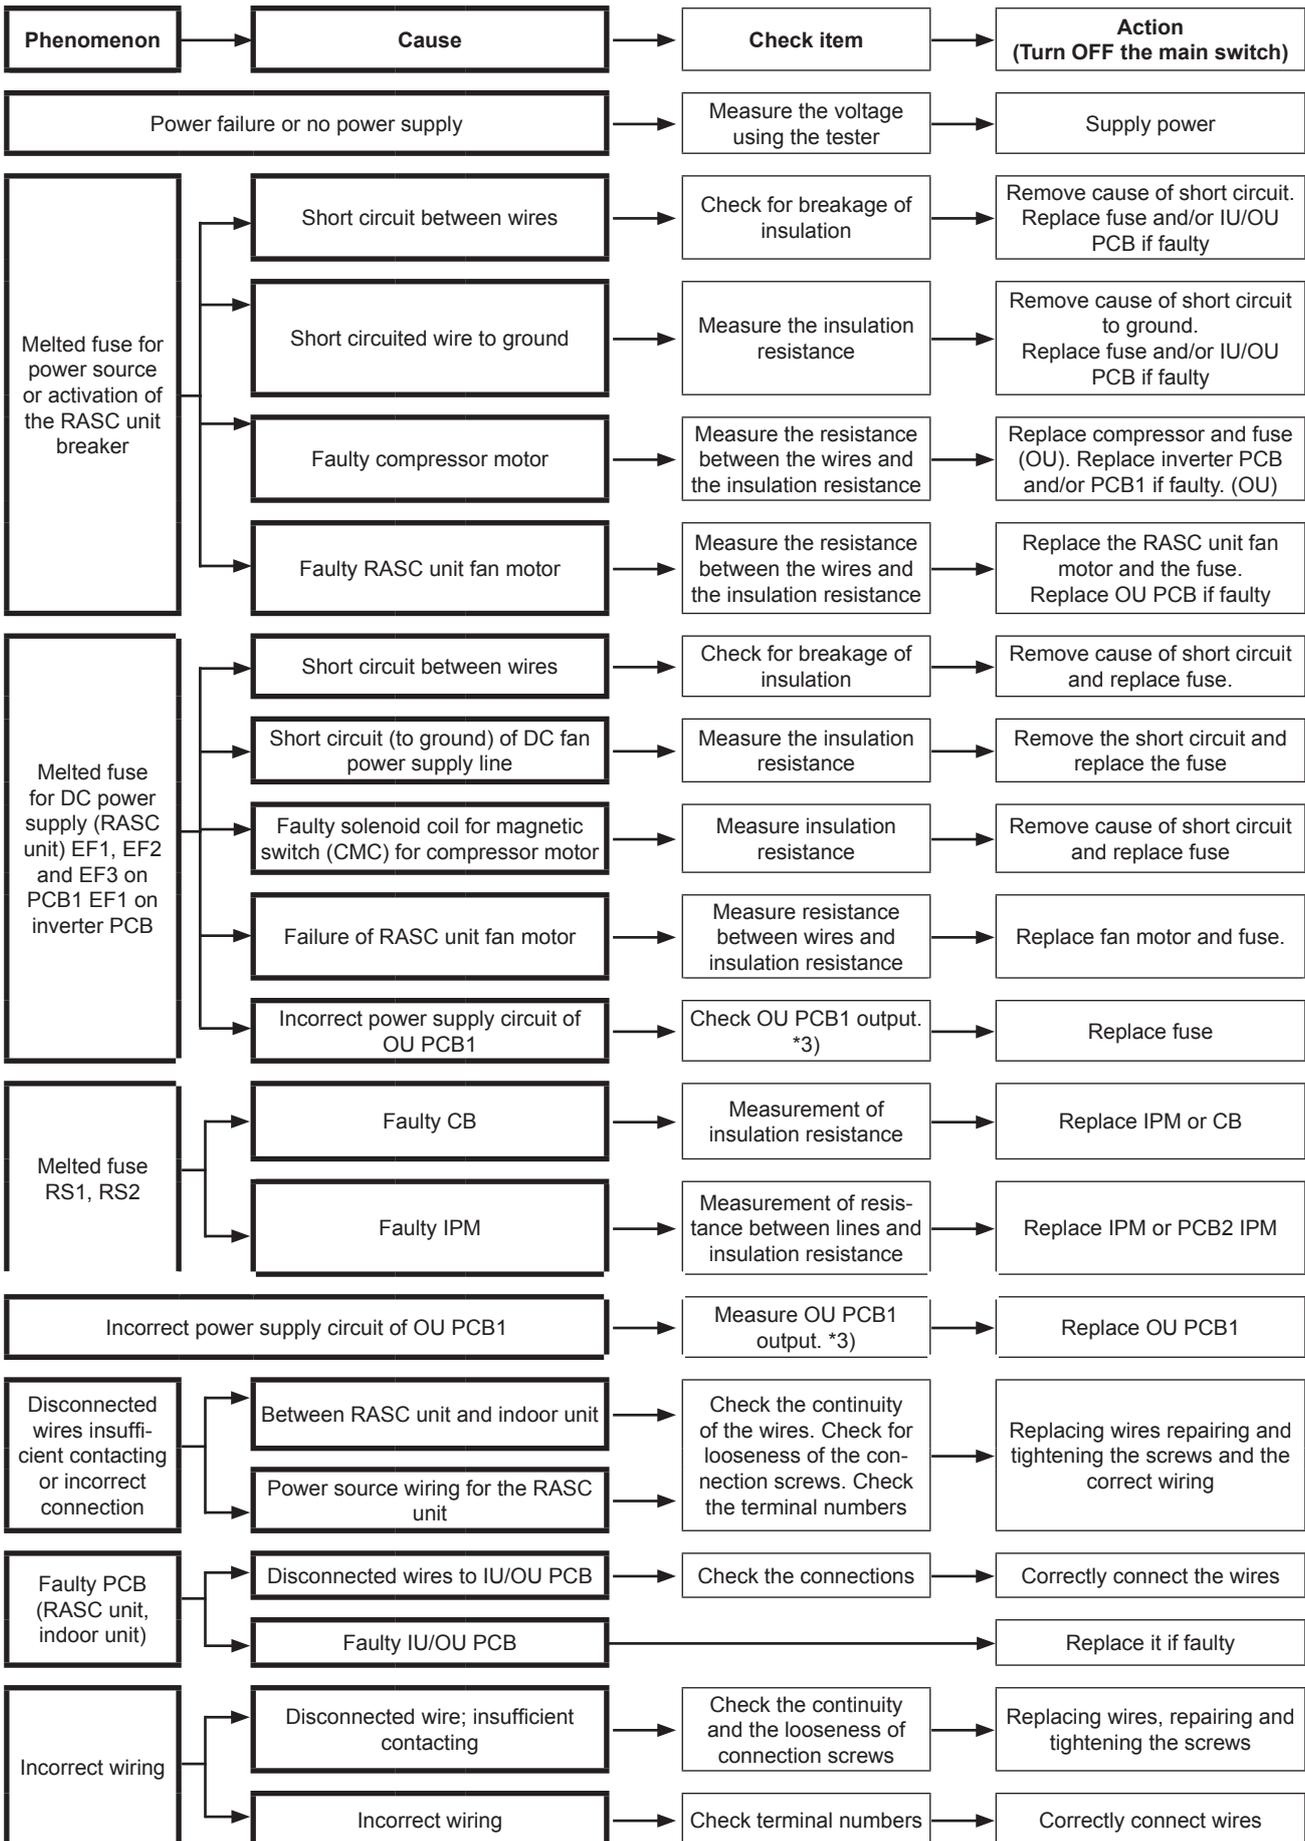



NOTE

- *1) In the case that the end terminal resistance (DSW5-1) is set to OFF for H-LINK connection, set the end terminal resistance to ON when CN8 is disconnected. Set the end terminal resistance to OFF when CN8 is reconnected.
- *2) Transmission Setting (SW1)

Item	Setting Position
SW1	

- *3)


PCB1 output voltage	Voltage
Vcc 12 – GND2	12 VDC
Vcc 05 – GND1	5 VDC
Vcc 12 – GND1	12 VDC
Vcc 15 – GND1	15 VDC
Vcc 24 – GND1	24 VDC
Vcc 12T– GND1	12 VDC

- *4) The rotary switch (RSW2) is not available depending on the indoor unit model.
- *5) Surely perform the troubleshooting of DC fan motor. If DC fan motor fails, the normal inverter PCB may be damaged.
- *6) Refer to section “Self-checking procedure of PCB by means of the Remote Control Switch”.

Alarm code	04	Abnormal transmission between Inverter PCB and Outdoor PCB1
------------	-----------	---

This alarm is displayed when the abnormal operation is maintained for 30 seconds after the normal transmission between the RASC unit PCB1 and inverter PCB2. Also, the abnormal operation is maintained for 30 seconds after the micro-computer is automatically reset. The alarm is displayed when the abnormal transmission is maintained for 30 seconds from the starting of the RASC unit.

RASC-(4-6)HNPE

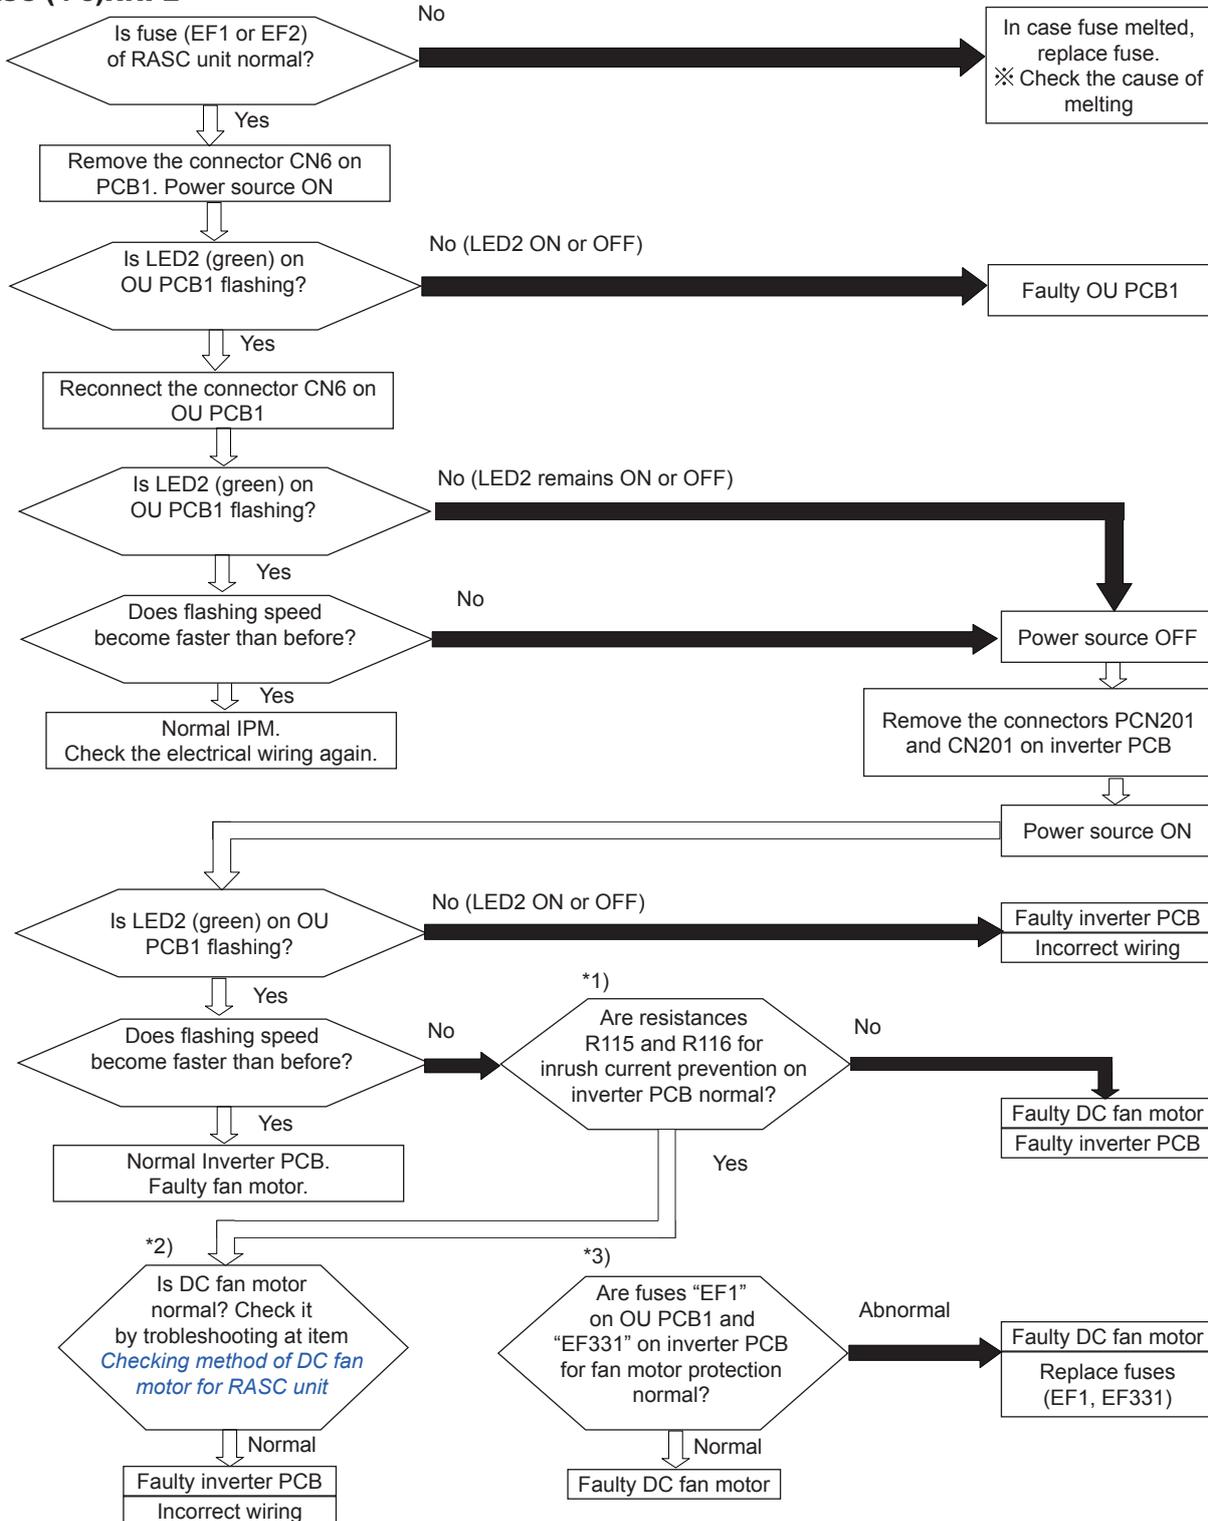




NOTE

- *1): Surely perform the troubleshooting of the resistance for inrush current prevention (R115/R116) on inverter PCB. If the resistance for inrush current prevention (R115/R116) fails, the abnormal transmitting occurs.
- *2): Surely perform the troubleshooting of DC fan motor according to section "8.4 Checking procedure for main parts". If the DC fan motor fails, the normal inverter PCB may be damaged.
- *3): Perform the troubleshooting of the fuses "EF1" on OU PCB1 and "EF1" on inverter PCB for fan motor protection. If the fuses for fan motor protection fail, DC fan motor is not operated normally.

RASC-(8/10)HNPE


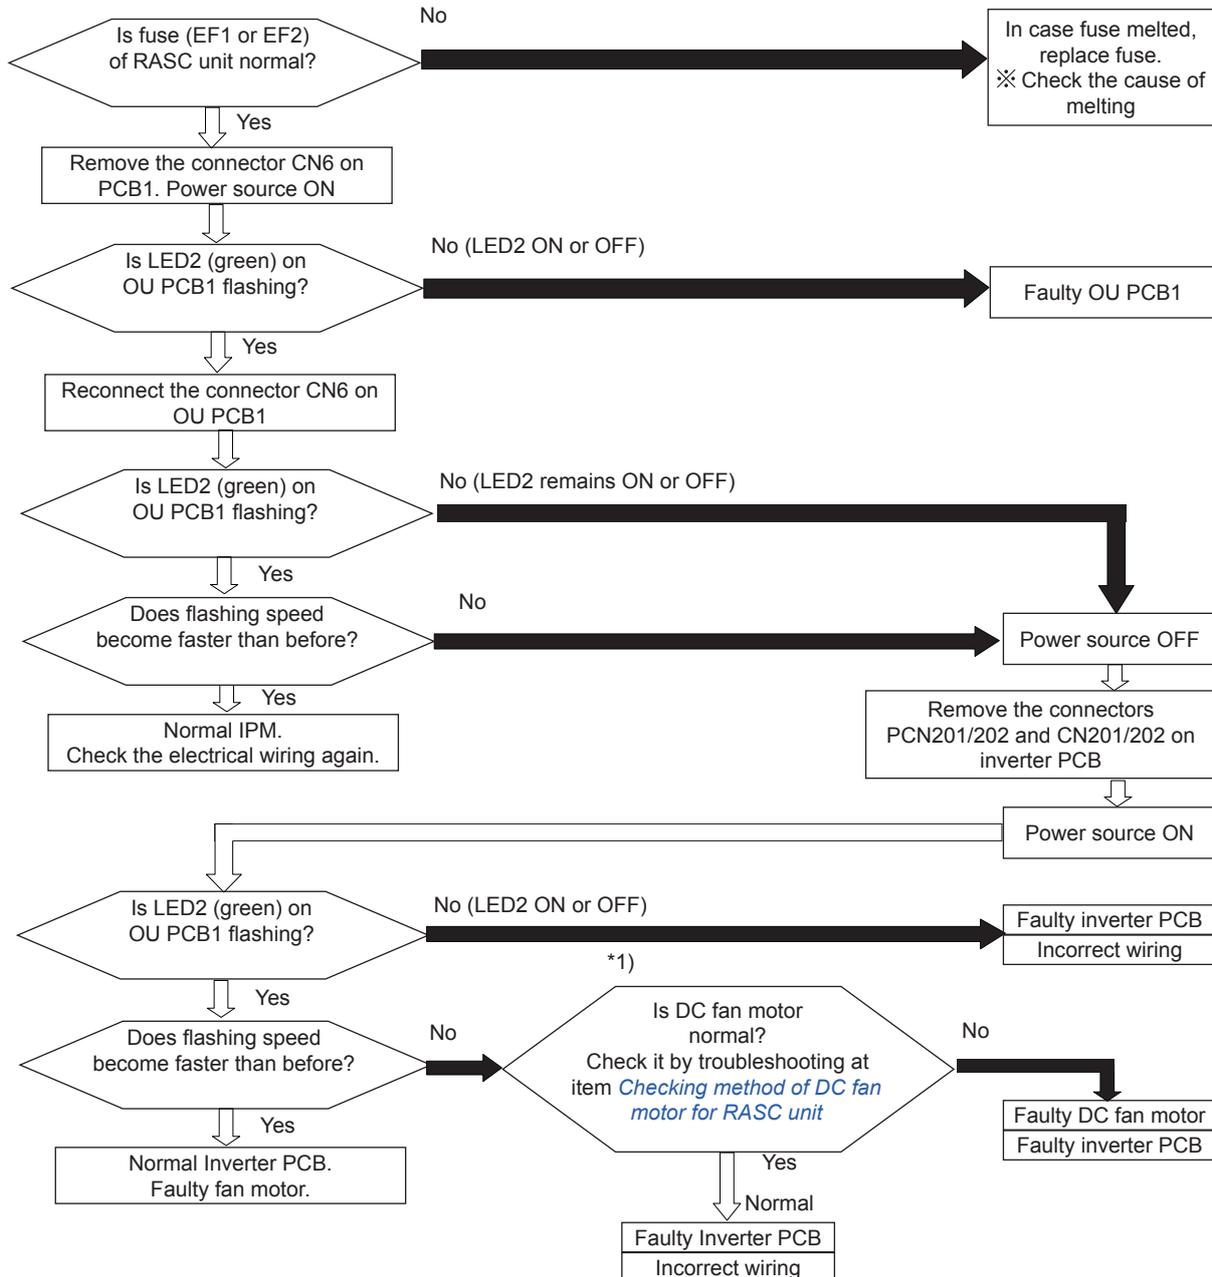


NOTE

Surely perform the troubleshooting of DC fan motor according to section "Checking procedure for main parts". If the DC fan motor fails, the normal inverter PCB may be damaged.

Alarm code	05	Code abnormal operation of picking up phase signal
------------	-----------	--

This alarm is displayed when the main power source phase is reversely connected or one phase is not connected.

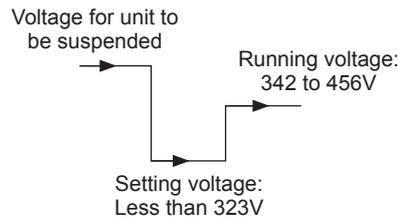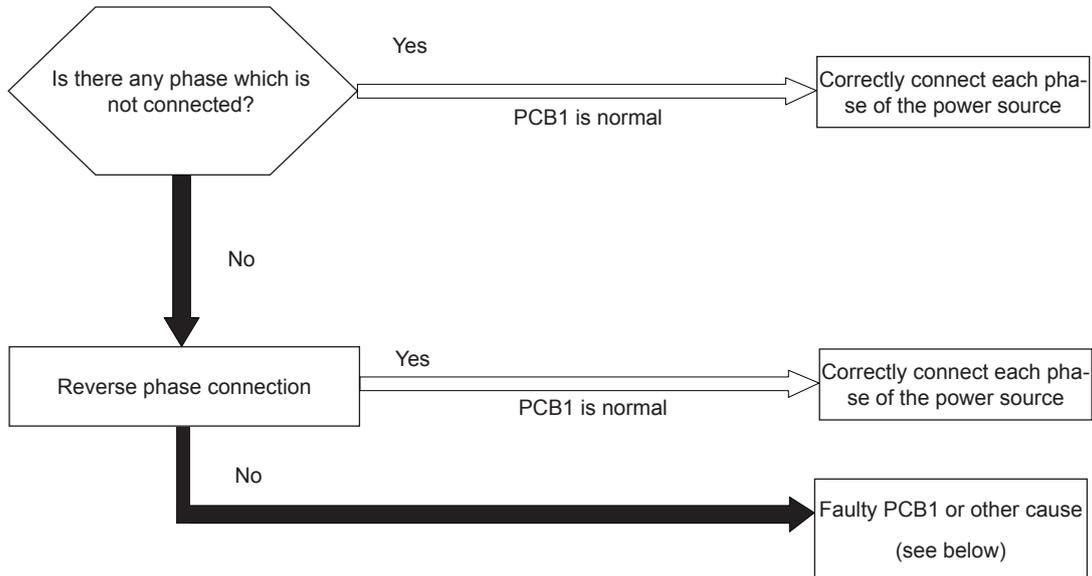


Phenomenon	Cause	Check item	Action (Turn OFF the main switch)
Activation of reverse phase sensor in the RASC unit	Reverse or single phase	Check it according to the electrical wiring	Replacing wires, repair, tightening screws or correct wiring
	Faulty RASC unit PCB	-	Replace PCB if faulty

Alarm code	06	Excessively low voltage or excessively high voltage for the inverter
------------	-----------	--

This alarm code is displayed when the voltage between terminal “P” and “N” of Inverter is insufficient and the alarm has three occurrences in 30 minutes. If the number of occurrences is smaller than two, the retry operation is performed. The alarm code “06.” Means fan controller Abnormal Operation.


RASC-(4-6)HNPE

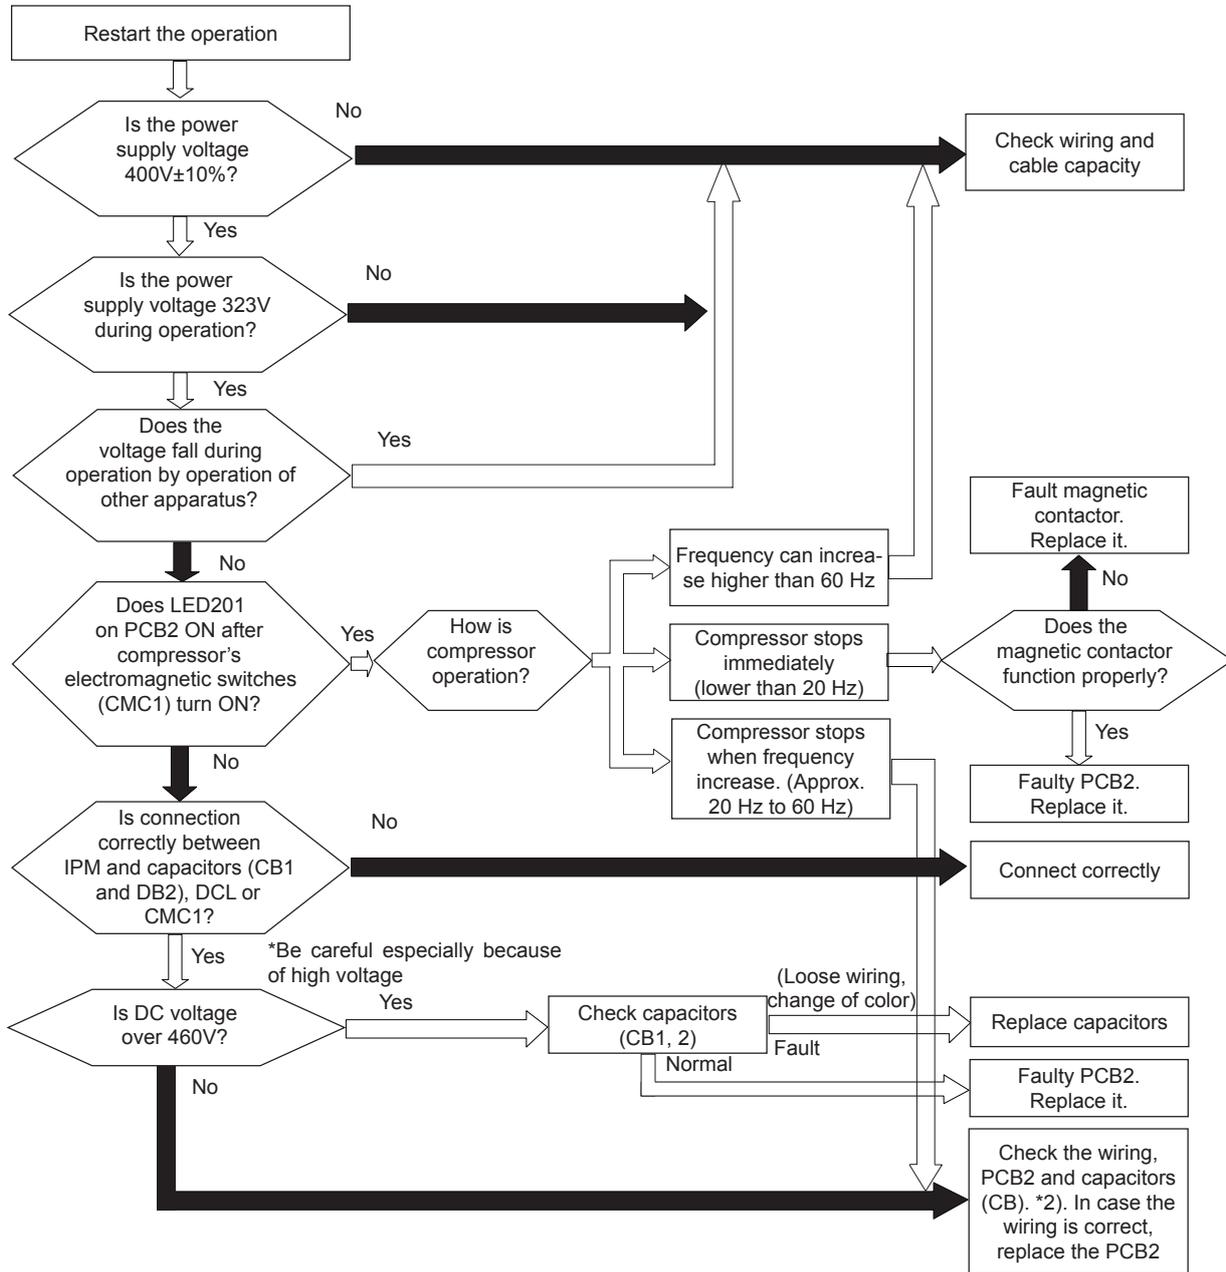

NOTE

- The indicated voltage is for three phase models. The power supply voltage for single phase models is 220V and 187V during operation.
- *1): If capacitor has high voltage, perform the high voltage discharge work refer to the item “10.4.6 Checking procedure for other parts”.
- *2): Regarding replacing or checking method for the inverter PCB, refer to the item “10.4.6 Checking procedure for other parts”.


PCB1: Control PCB in RASC unit
PCB2: Inverter PCB in RASC unit

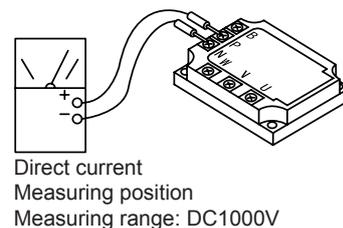

Alarm code	07	Decrease of Discharge Gas Superheat
------------	-----------	-------------------------------------

This alarm code is indicated as follows:

- When the temperature at the top of the compressor is lower than condensing temperature and indoor expansion valve opening is lower than 300 pulse for 30 minutes in cooling operation, retry operation will be performed once. When outdoor expansion valve opening is lower than 70 pulse for 30 minutes in heating operation, retry operation will be performed once. If these occurs again within 120 minutes after the retry, the alarm code will be indicated.

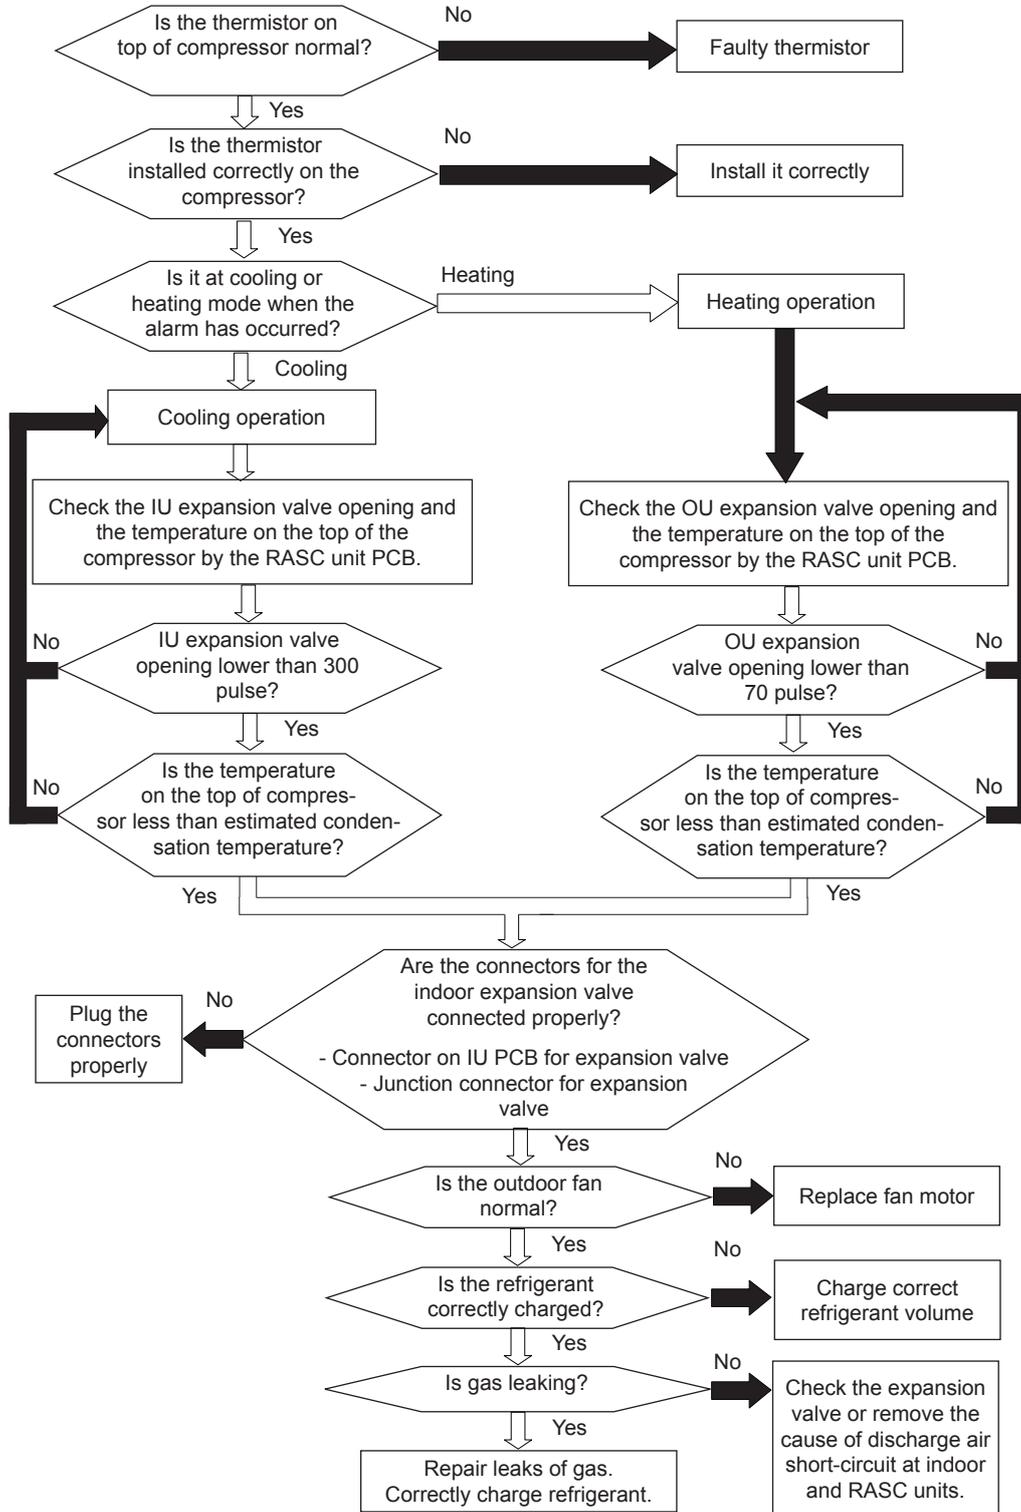

Phenomenon	Cause		Check item	Action (Turn OFF the main switch)
Decrease of discharge gas superheat	Refrigerant cycle is different from the electrical system		Check refrigerant cycle and the electrical system	Repair wiring
	Overcharged refrigerant		Measure pressure	Correctly charge refrigerant
	Faulty expansion valve		Check expansion valve *1)	Replace expansion valve if faulty
	Faulty PCB	Fault	Replace PCB and check operation	Replace PCB if faulty
		Disconnected wires for expansion valve control	Check connections.	Repair wiring connections
	Faulty discharge gas thermistor	Fault	Measure resistance.	Replace thermistor if faulty
		Incorrect mounting	Check mounting state. (See <i>Alarm Code 08.</i>)	Correctly mount thermistor.
		Incorrect connection	Check connections.	Remove looseness, replace connector or repair connections.




NOTE

*1) Refer to section “10.4.5 Checking procedure for the electronic expansion valve for indoor and RASC units”.


Alarm code	08	Excessively High Discharge Gas Temperature at the Top of Compressor
------------	-----------	---

The alarm appears during cooling operation when the compressor-top thermistor temperature remains at Tdc1 or above for 10 minutes, or at Tdc2 or above for 5 seconds.


The alarm appears during heating operation when the compressor-top thermistor temperature remains at Tdh1 or above for 10 minutes, or at Tdh2 or above for 5 seconds.

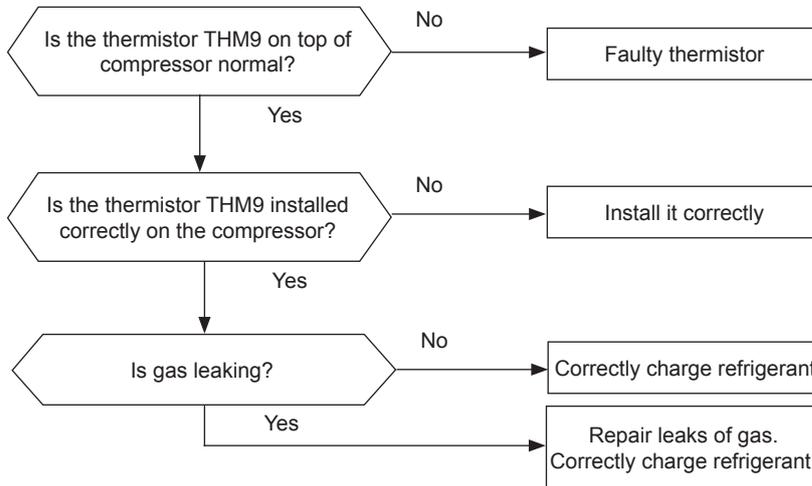

Compressor-top thermistor (THM9)

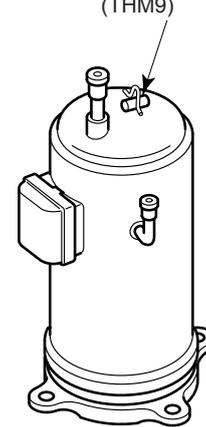

Thermistor resistance characteristics

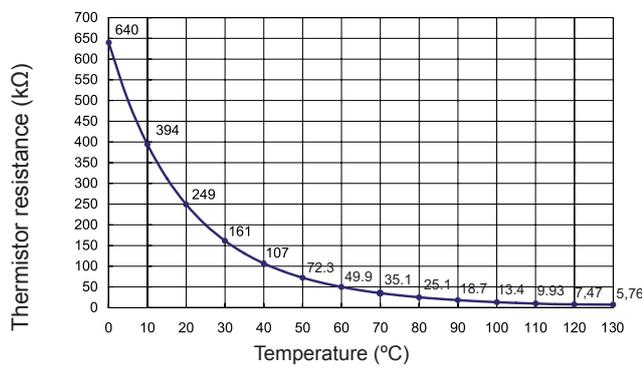


◆ **Limits of temperature**

Outdoor capacity	Tdc1	Tdc2	Tdh1	Tdh2
RASC-(4-6)HNPE	115	125	115	125
RASC-(8/10)HNPE	127	135	120	135

Alarm code	!!	Abnormal operation of thermistor for the indoor unit air inlet temperature (air inlet thermistor)
------------	-----------	---

This alarm code is displayed when the thermistor is short-circuited (less than 0.24 kΩ) or cut (greater than 840 kΩ) during the cooling process or the heating process. The system is automatically restarted when the fault is removed.

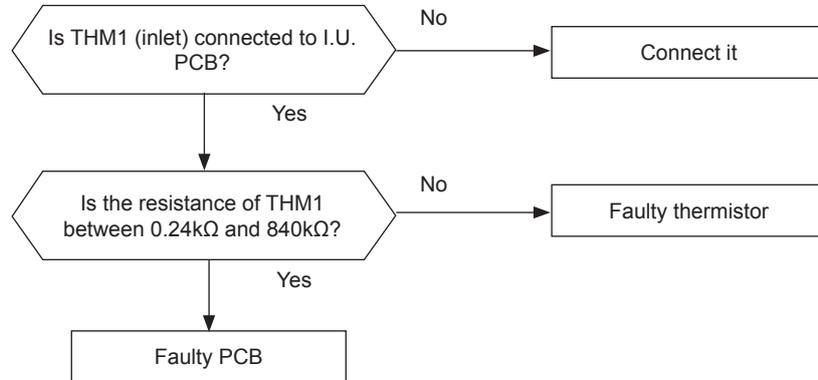

Phenomenon	Cause	Check item	Action (Turn OFF the main switch)
Faulty air inlet thermistor	Fault	Check the resistance	Replace the thermistor if faulty
	Incorrect connection	Check the connection	Repair the wiring and the connections
Faulty PCB		Replace PCB and check the operation	Replace PCB if faulty




NOTE


This data is applicable to the following thermistors:

- Indoor unit discharge air temperature
- Indoor unit liquid refrigerant temperature
- Indoor unit air inlet temperature
- Outdoor temperature
- RASC unit evaporating temperature
- Indoor unit gas piping

Thermistor characteristics

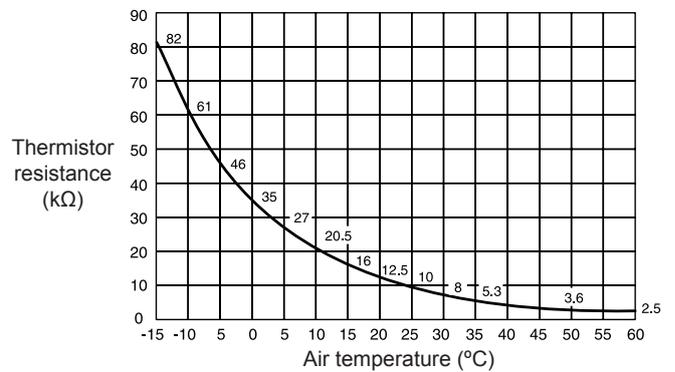


◆ Examples

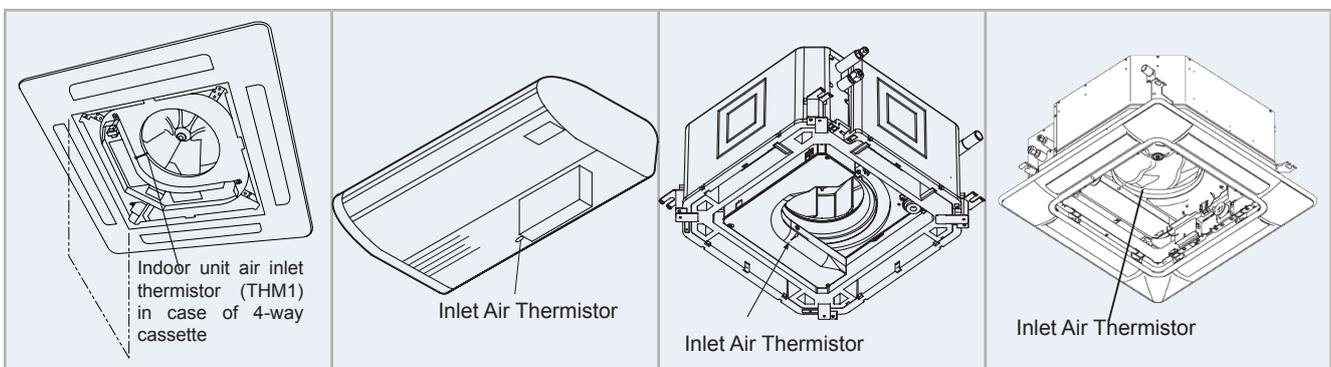


Alarm code	12	Abnormal operation of the thermistor for the indoor discharge air temperature (air outlet thermistor)
------------	-----------	---

This alarm code is displayed when the thermistor is short-circuited (less than 0.24 kΩ) or cut (greater than 840 kΩ) during the cooling process or the heating process. The system is automatically restarted when the fault is removed.

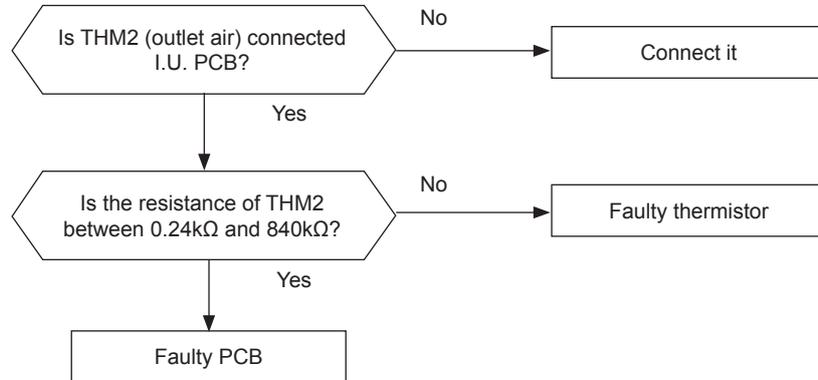


Phenomenon	Cause	Check item	Action (Turn OFF the main switch)
Faulty air outlet thermistor	Fault	Check the resistance	Replace the thermistor if faulty
	Incorrect connection	Check the connection	Repair the wiring and connections
Faulty PCB		Replace PCB and check the operation	Replace PCB if faulty

Thermistor characteristics

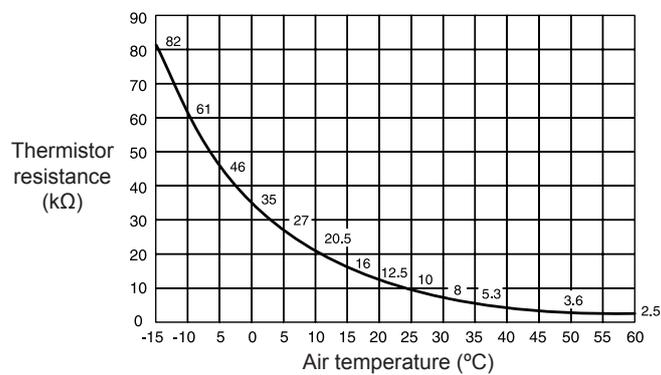


◆ **Examples**

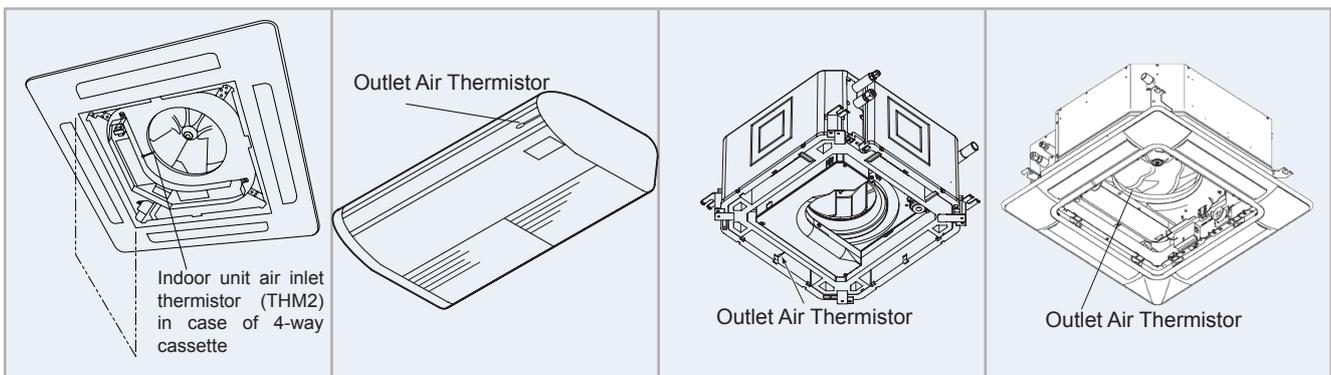


Alarm code	13	Abnormal operation of the thermistor for the indoor unit heat exchanger liquid pipe temperature (freeze protection thermistor)
------------	-----------	--

- This alarm code is displayed when the thermistor is short-circuited (less than 0.24 kΩ) or cut (greater than 840 kΩ) during the cooling process or the heating process. The system is automatically restarted when the fault is removed.

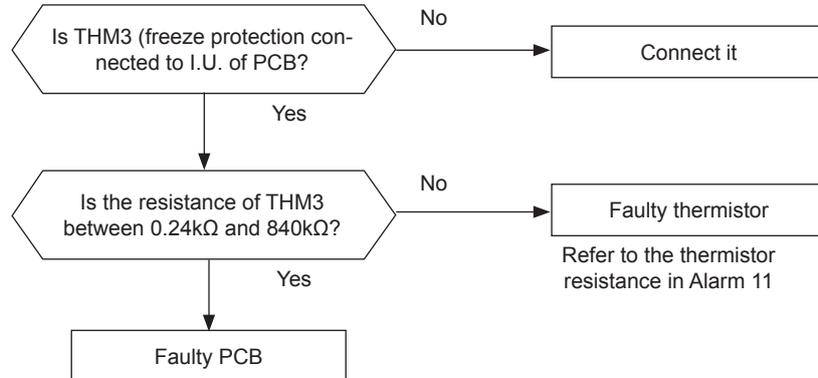


Phenomenon	Cause	Check item	Action (Turn OFF the main switch)
Faulty freeze protection thermistor	Fault	Check the resistance	Replace the thermistor if faulty
	Incorrect connection	Check the connection	Repair the wiring and connections
Faulty PCB		Replace PCB and check the operation	Replace PCB if faulty

Thermistor characteristics

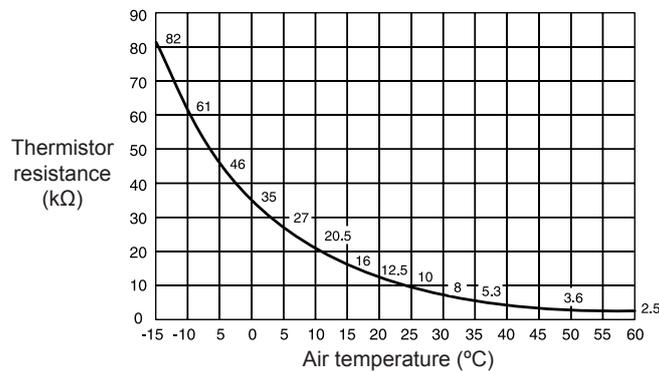


◆ **Examples**

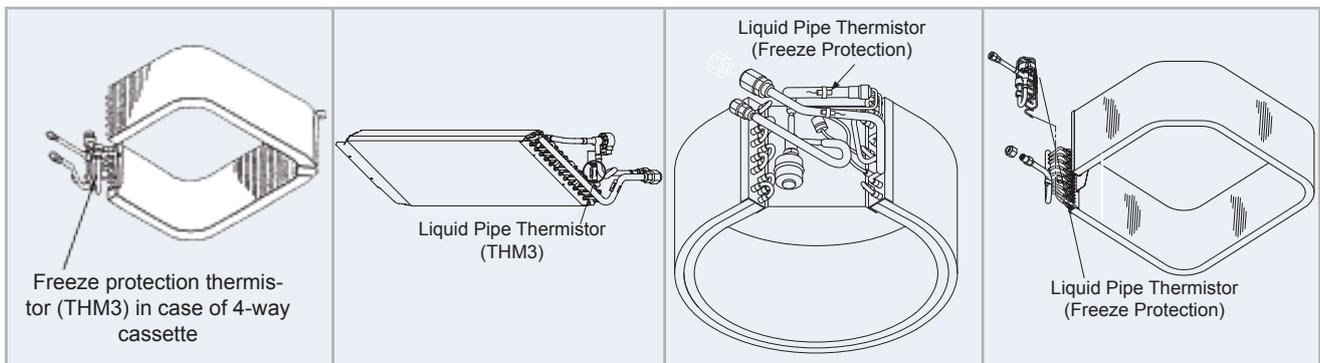


Alarm code	14	Abnormal operation of the thermistor for the indoor unit heat exchanger gas pipe temperature (gas piping thermistor)
------------	-----------	--

This alarm code is displayed when the thermistor is short-circuited (less than 0.24 kΩ) or cut (greater than 840 kΩ) during the cooling process or the heating process. The system is automatically restarted when the fault is removed.

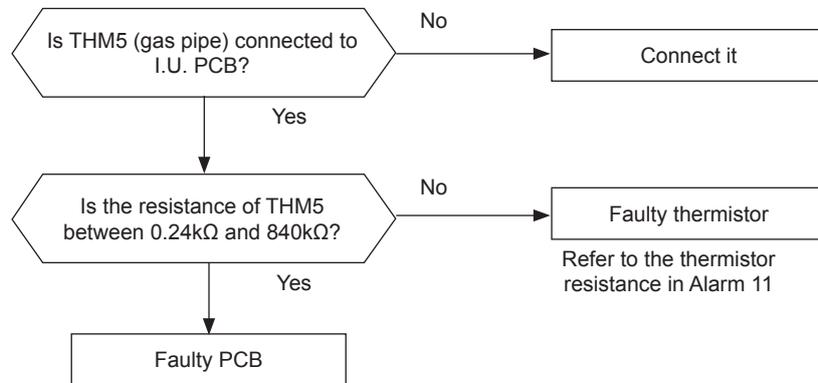


Phenomenon	Cause	Check item	Action (Turn OFF the main switch)
Faulty gas piping thermistor	Fault	Check the resistance	Replace the thermistor if faulty
	Incorrect connection	Check the connection	Repair the wiring and connections
Faulty PCB		Replace PCB and check the operation	Replace PCB if faulty

Thermistor characteristics

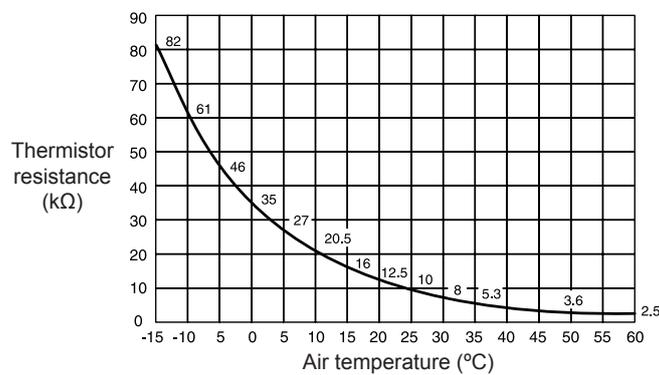


◆ **Examples**

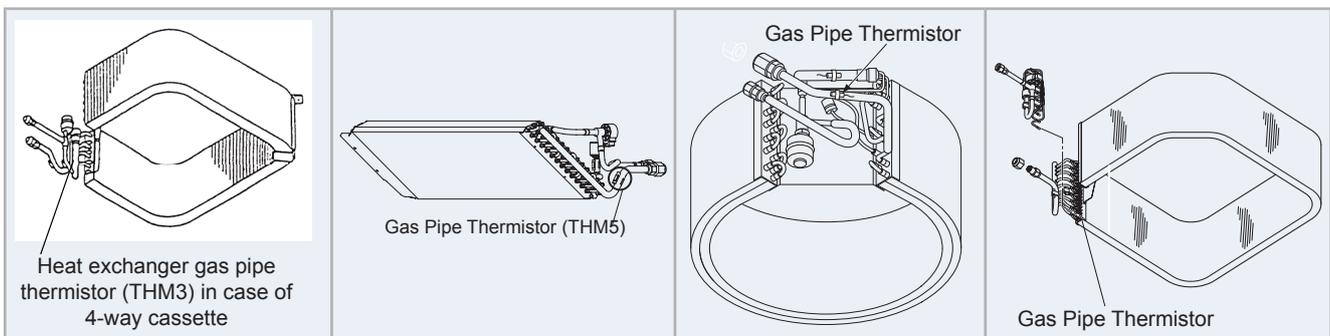

Alarm code	19	Activation of the protection device for the indoor fan motor (except RCI-FSN3, RCIM-FSN3, RPC-FSN3 and RPK-FSN(H)3M)
------------	-----------	--

This alarm code is displayed when the temperature of the internal thermostat for the indoor fan motor is higher than 135 °C.

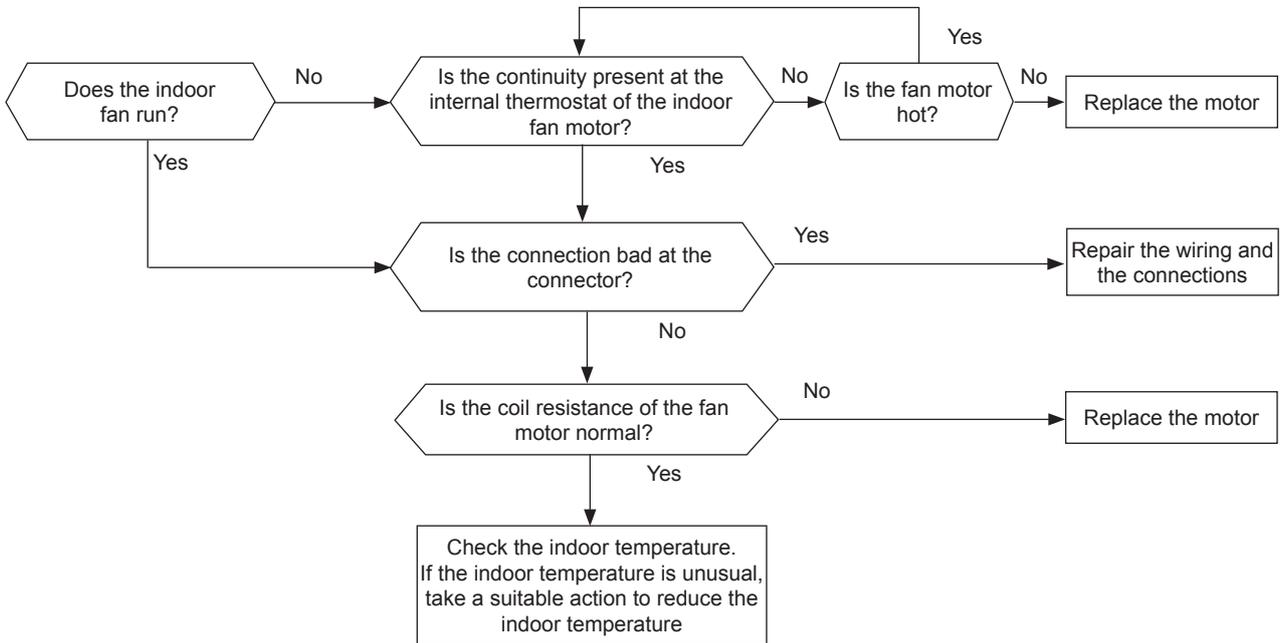


Phenomenon	Cause		Check item	Action (Turn OFF the main switch)
Activation of the internal thermostat for the indoor unit fan motor	Faulty indoor unit fan motor		Measure the coil resistance and the insulation resistance	Replace the motor if faulty
	Faulty internal thermostat	Fault	Check the continuity after the fan motor temperature decreases to room temp	Replace the fan motor if there is no continuity
		Insufficient contacting	Measure the resistance by means of the tester	Correct looseness. Replace the connectors
		Incorrect connection	Check the connections	Repair the connections

Alarm code	19	Activation of the protection device for the indoor fan motor (RCI-FSN3, RCIM-FSN3, RPC-FSN3)
------------	-----------	--

This alarm code is displayed when the following conditions occurs three times in 30 minutes. Indoor fan rotates less than 70 rpm for 5 seconds during operation.


(*)When the cause is checked by means of this flow chart, confirm that fan speed setting is Hi.

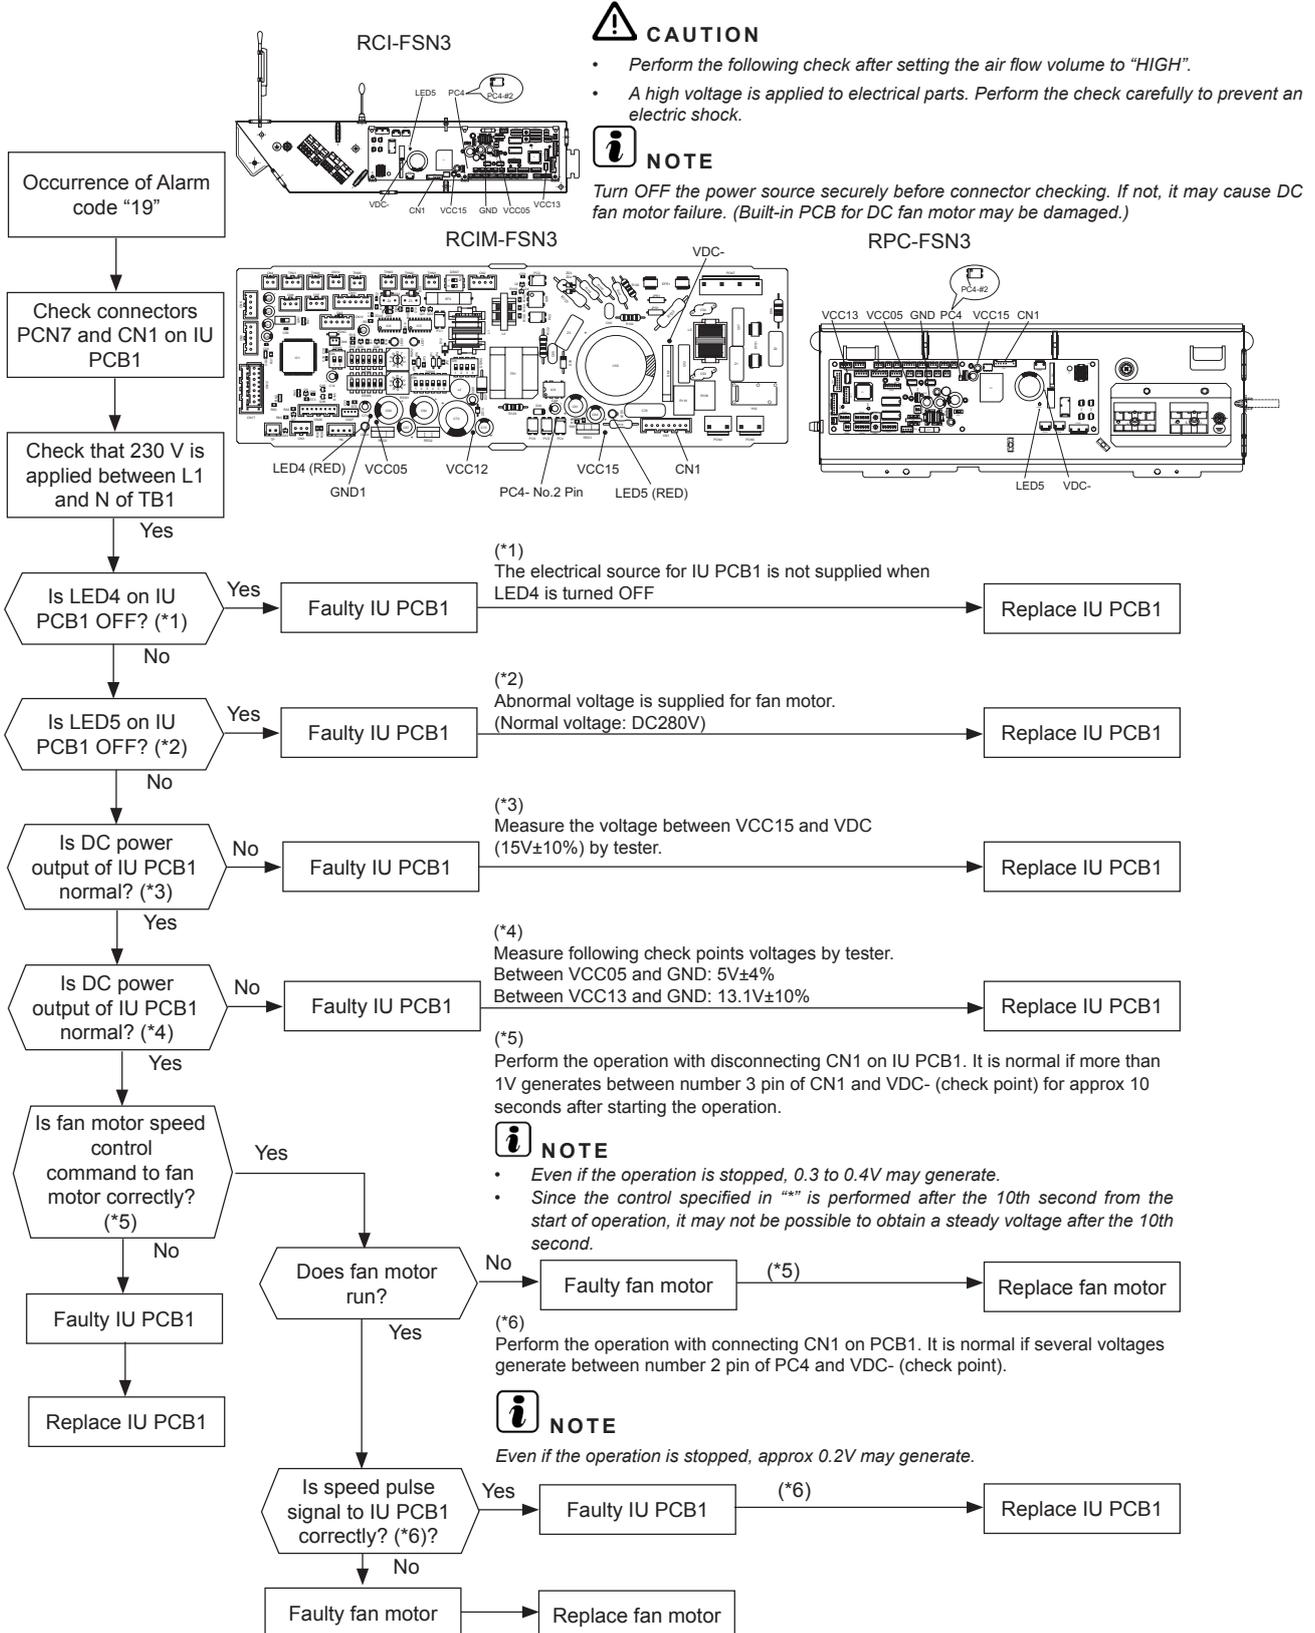

Alarm code	19	Activation of the protection device for the indoor fan motor (RPK)
------------	-----------	--



- This alarm code is displayed when the following conditions occurs three times in 30 minutes. Indoor fan rotates less than 70 rpm for 5 seconds during operation.

- (*)Set air flow volume "Hi" before starting this check.

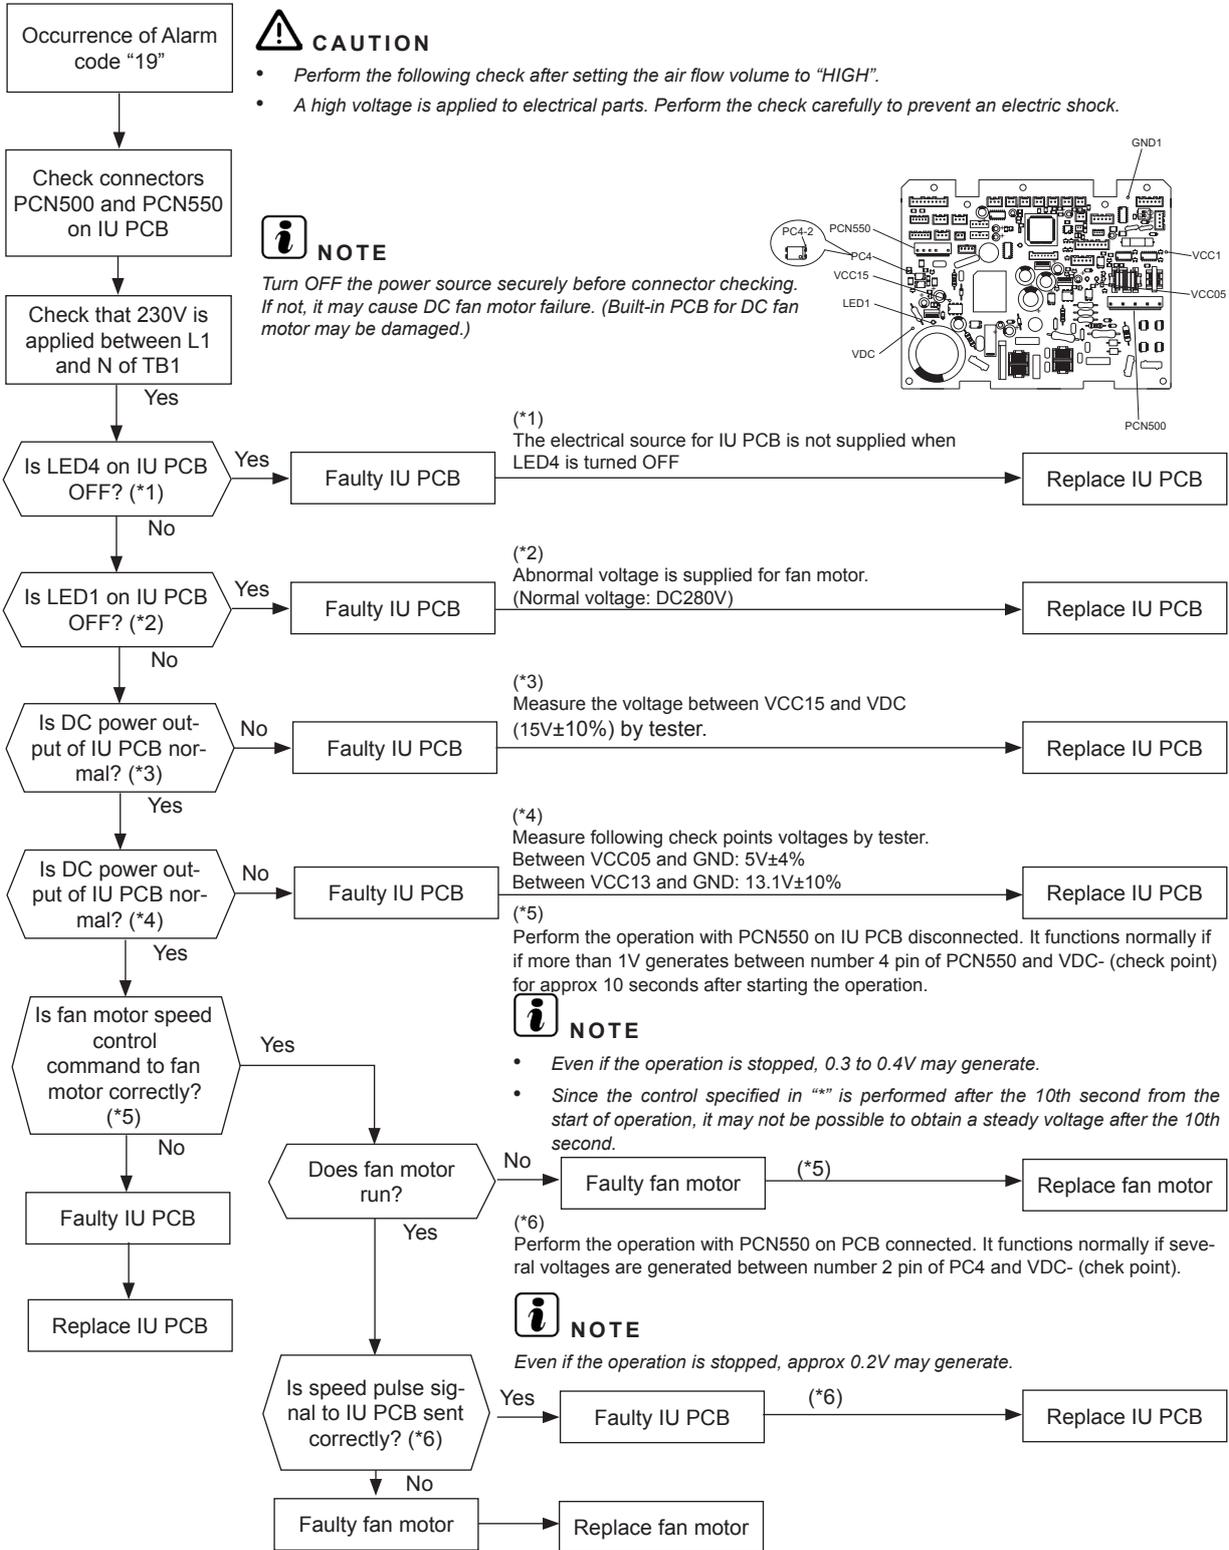


Alarm code	20	Abnormality of thermistor for discharge gas temperature (compressor thermistor)
------------	-----------	---

- The RUN LED flickers and “ALARM” is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the RASC unit PCB.
 - This alarm code is indicated when the thermistor is short-circuited (less than 1 kΩ) or cut (greater than 6 MΩ) during the cooling or heating operation.

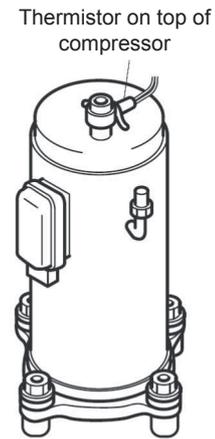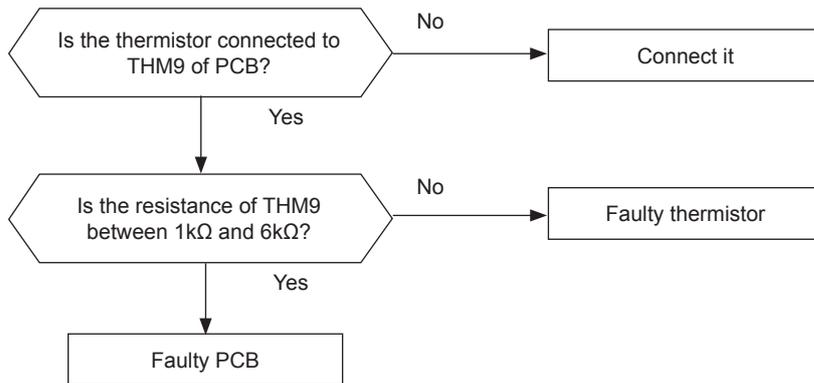

Phenomenon	Cause	Check item	Action (Turn OFF Main Switch)
Faulty top of compressor thermistor	Fault	Check resistance	Replace thermistor if faulty
	Incorrect connection	Check wiring to PCB1	Repair wiring and connections
Faulty PCB1		Replace PCB1 and check operation	Replace PCB1 if faulty


Thermistor characteristics

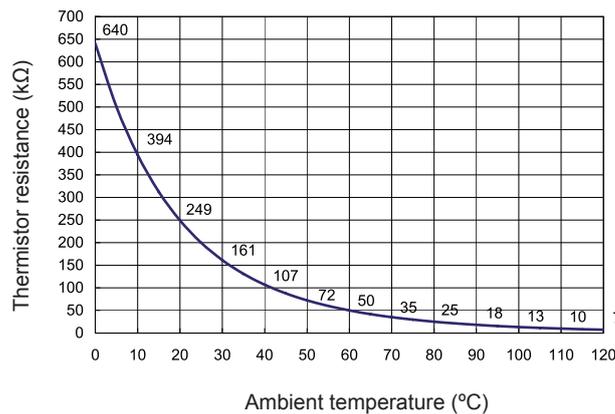

The resistance value have fudge factor (+10%).

Alarm code	21	Abnormality of High pressure sensor
------------	-----------	-------------------------------------


- The RUN LED flickers and “ALARM” is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the RASC unit PCB.
- This alarm code is indicated when the pressure sensor output voltage decreases (less than 0.1V) or increases (more than 4.9V) during the operation.

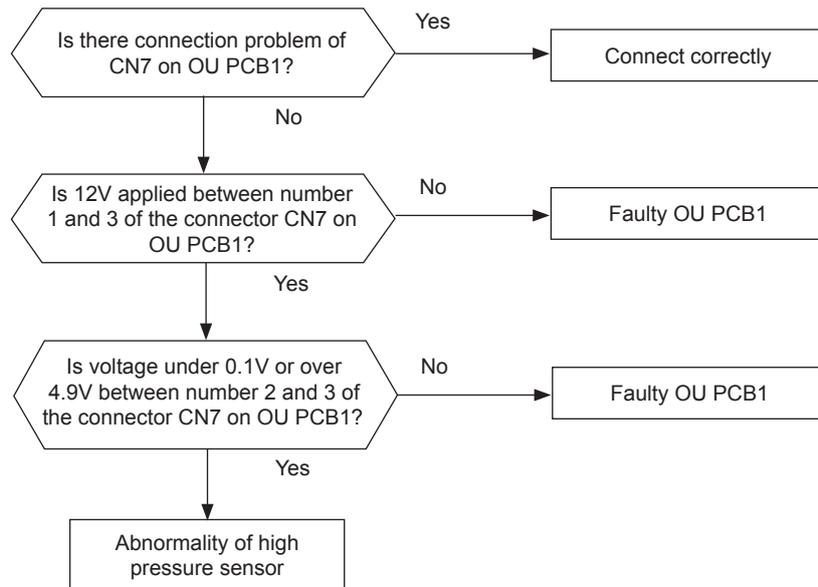


Phenomenon	Cause	Check item	Action (Turn OFF Main Switch)
Faulty top of compressor thermistor	Fault	Check resistance	Replace thermistor if faulty
	Incorrect connection	Check wiring to PCB1	Repair wiring and connections
Faulty PCB1		Replace PCB1 and check operation	Replace PCB1 if faulty
Indication of pressure value is excessively high or low	Malfunction of pressure sensor due to clogging wiring	-	Replace pressure sensor

Alarm code	22	Abnormal operation of the thermistor for the outdoor temperature (RASC unit ambient thermistor)
------------	-----------	---

- The RUN LED flickers and “ALARM” is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the RASC unit PCB.
- This alarm code is displayed when the thermistor is short-circuited (less than 0.2 kΩ) or cut (greater than 500 kΩ) during the operation.

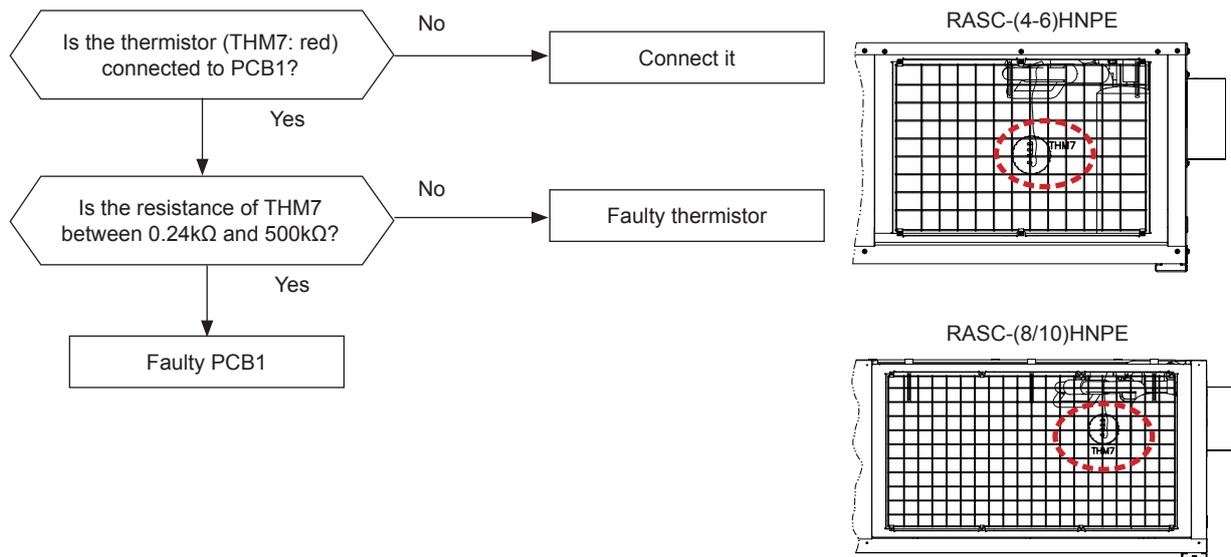

Thermistor characteristics

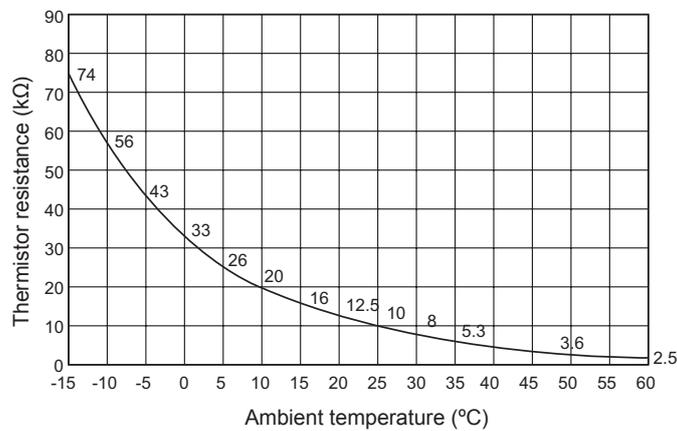




Phenomenon	Cause	Check item	Action (Turn OFF Main Switch)
Faulty thermistor for the RASC unit ambient	Fault	Check resistance	Replace thermistor if faulty
	Incorrect connection	Check wiring to PCB	Repair wiring and connections
Faulty PCB1		Replace PCB1 and check operation	Replace PCB if faulty

Alarm code	24	Abnormal operation of the thermistor for the evaporating temperature during the heating process (RASC unit)
------------	-----------	---


- The RUN LED flickers and “ALARM” is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the RASC unit PCB. (*1)

If you find an abnormal operation of the thermistor, check all the thermistors as shown below.

- The evaporating thermistor during the heating process is attached to the heat exchanger as shown in the figure below. If this the thermistor is faulty, such as short-circuit (less than 0,2kΩ) or cut (more than 500kΩ) during operation, this alarm is displayed. The position is indicated below.

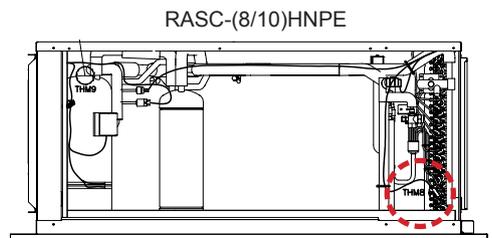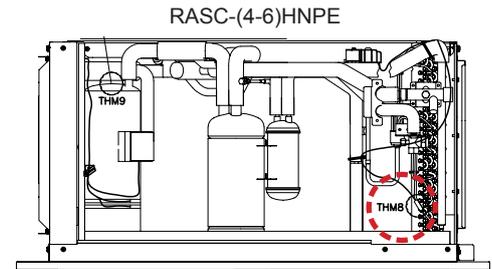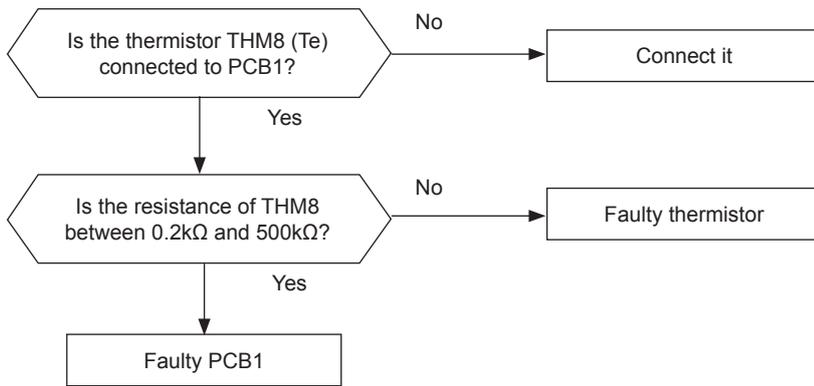


Phenomenon	Cause	Check item	Action (Turn OFF the main switch)
Faulty thermistor for the evaporating temperature during heating	Fault	Check the resistance	Replace the thermistor if faulty
	Incorrect Connection	Check the wiring to PCB	Repair the wiring and the connections
Faulty PCB		Replace PCB and check the operation	Replace PCB if faulty

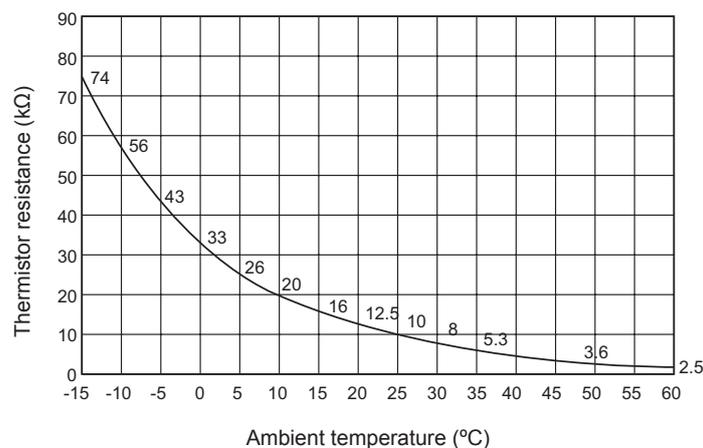

Ambient and evaporating temperature thermistor characteristics for RASC unit

Alarm code	31	Incorrect Capacity Setting or Combined Capacity between Indoor Units and RASC unit
------------	-----------	--

- The RUN LED flickers and “ALARM” is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the RASC unit PCB.
 - This alarm code is indicated when the undefined setting is set to DSW3 on the RASC unit PCB.
 - This alarm code is indicated when the total indoor unit capacity is outside the range allowed of the combined RASC unit capacity.
 - RASC unit capacity setting is not correct

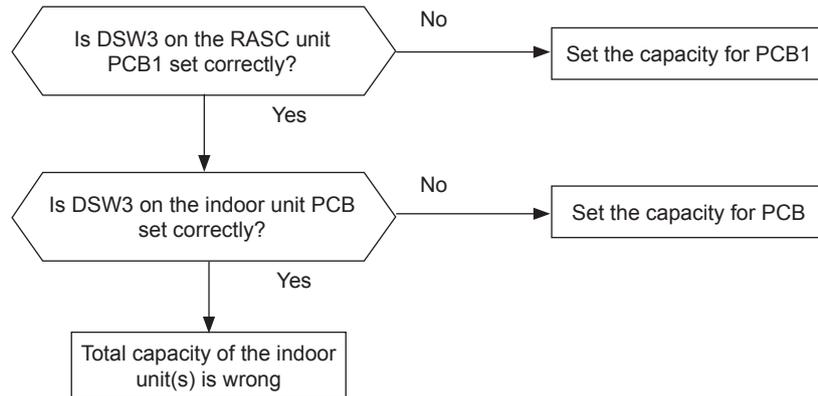

Phenomenon	Cause	Check item	Action (Turn OFF Main Switch)
Incorrect Capacity Setting of Indoor Unit		Check combination of indoor units and capacity setting on PCB.	Correctly set dip switch, DSW3.
Incorrect Capacity Setting of RASC unit		Check capacity setting on RASC unit PCB.	Correctly set dip switch, DSW3.
Total Indoor Unit Capacity Connected to the RASC unit is Beyond Permissible Range		Check RASC unit model by calculating total indoor units capacity.	Ensure that total indoor unit capacity agrees with the above capacity conditions.



NOTE

- In case of H-LINK system, this alarm code is indicated when DSW4, RSW1 (for refrigerant system setting) on the RASC unit PCB and DSW5, RSW2 (for refrigerant system setting) on the indoor unit PCB are incorrectly set.
- In this case, set correctly DSW4, RSW1, DSW5 and RSW2 after turning OFF main switch.
- (RSW2 is not equipped with some models.)

Alarm code	35	Incorrect Indoor number setting
------------	-----------	---------------------------------

- The alarm code appears from 3 to 5 minutes after the RASC unit power activation if duplication is detected in indoor unit numbers connected to an RASC unit (one refrigerant system). This applies when indoor unit numbers are set by DSW6 and RSW1.
- The alarm code appears when the indoor and RASC unit refrigerant system and address are set to 64 or above. (In such a case, the alarm code “b1” appears on the remote control switch.)



NOTE

The alarm code may appear when H-LINK system is employed for indoor-RASC unit transmission, if there is any incorrect setting in DSW4/RSW1 on the RASC unit PCB and DSW5/RSW2 on the indoor unit PCB; which are dip switches used for refrigerant system setting. In such a case, turn OFF the power and correctly set DSW4/RSW1 on the RASC unit PCB and DSW5/RSW2 on the indoor unit PCB before reactivating the power.


(Some indoor unit models do not have RSW2.)

Alarm code	36	Incorrect Indoor unit combination
------------	-----------	-----------------------------------


This alarm code is indicated when the indoor unit connected to the RASC unit is for other refrigerants (R22 or R407C).

Alarm code	38	Abnormality of Protective Circuit for Protection (RASC Unit)
------------	-----------	--

The alarm code appears if 1~ 230V is supplied to the connector on the RASC unit PCB while Y52C (compressor relay opened) is OFF or CMC1 (magnetic contactor for compressor is open).

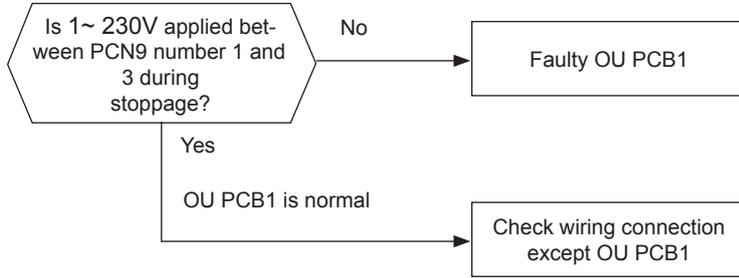

Connector number for check	
Connector	PCN9
Pin number	1 and 3

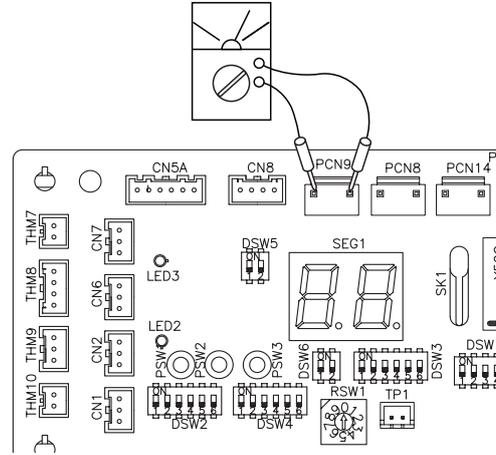

Phenomenon	Cause	Check item	Action (Turn OFF Main Switch)
Faulty DIP-IPM		Check DIP-IPM by self-checking	Replace DIP-IPM




NOTE

- This alarm may appear if the Faston terminal of the high pressure switch (63H1) is improperly connected or damaged (open-circuit fault) when the operation is started. Besides this, check also Alarm Code: 02 Activation of RASC Unit Protection Device.
- This alarm code may appear at the beginning of the operation if high pressure switch (PSH) is incorrectly connected or fail (open fault). See also alarm 02.

Alarm code	45	Activation of high pressure increase protection device
------------	-----------	--


When the compressor is operated with the discharge pressure (Pd) higher than 3.8MPa for 1 minute, the retry operation is performed 3 minutes after all compressors are stopped. Thereafter, this alarm code is indicated when above abnormality is detected twice in 30 minutes.

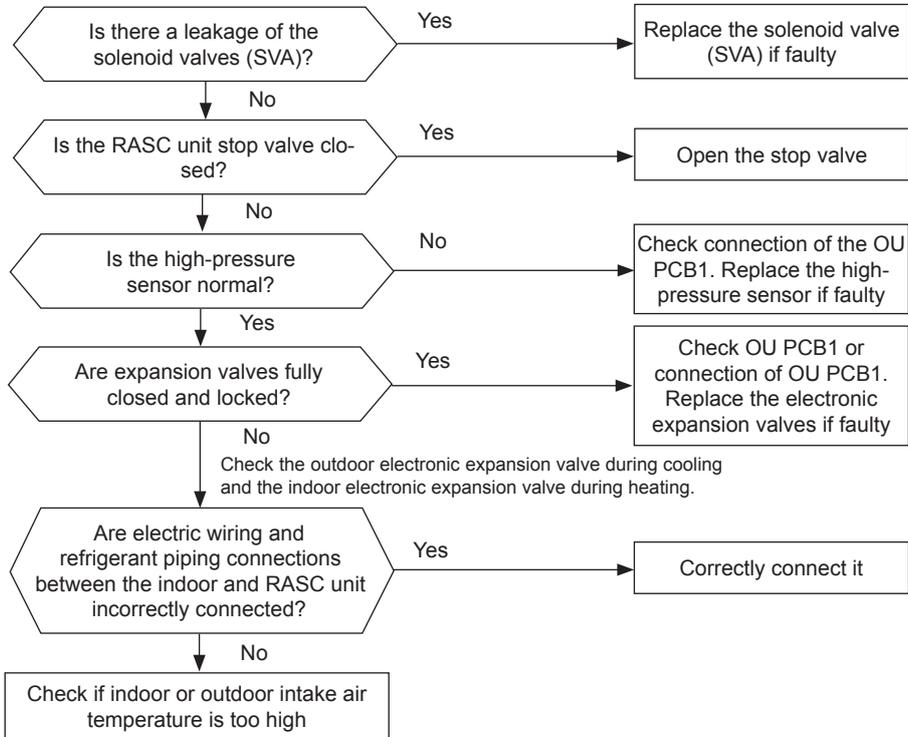

Phenomenon	Cause	Check item	Action (Turn OFF the main switch)
Excessively high discharge pressure	Leakage of solenoid valve (SVA)	Check the outlet temperature of solenoid valve (SVA)	Check connection. Replace solenoid valve (SVA) if faulty
	Closed stop valve	Check stop valve	Open stop valve
	Abnormal high pressure sensor	Check connecting condition and output voltage "CN100" (on OU PCB1) for high pressure sensor	Replace high pressure sensor if faulty
	Excessively high temperature of inlet air for RASC unit or indoor unit	Check thermistor for indoor unit and RASC unit inlet air temperature	Replace the inlet air thermistor if faulty
	Incorrect connection between indoor unit and RASC unit	Check electrical system and refrigerant cycle system	Correctly connect
	Locked expansion valve with fully closed	Check condition of connector "CN100" on OU PCB1	Repair connector for OU PCB1 or expansion valve. Replace if faulty


Alarm code	47	Activation to Protect System from Excessively Low Suction Pressure (Protection from Vacuum Operation)
------------	-----------	---

In the case that the evaporating temperature (Cooling: Liquid Refrigerant Piping Temperature of Indoor Unit, Heating: Evaporating Temperature of RASC Unit) is lower than -37 °C (250~350 kΩ) and the thermistor on top of compressor is higher than 90 °C for 10 minutes, retry operation is performed 3 minutes after compressor stoppage. However, when the state occurs more than 3 times including 3 in one hour, this alarm code is indicated.

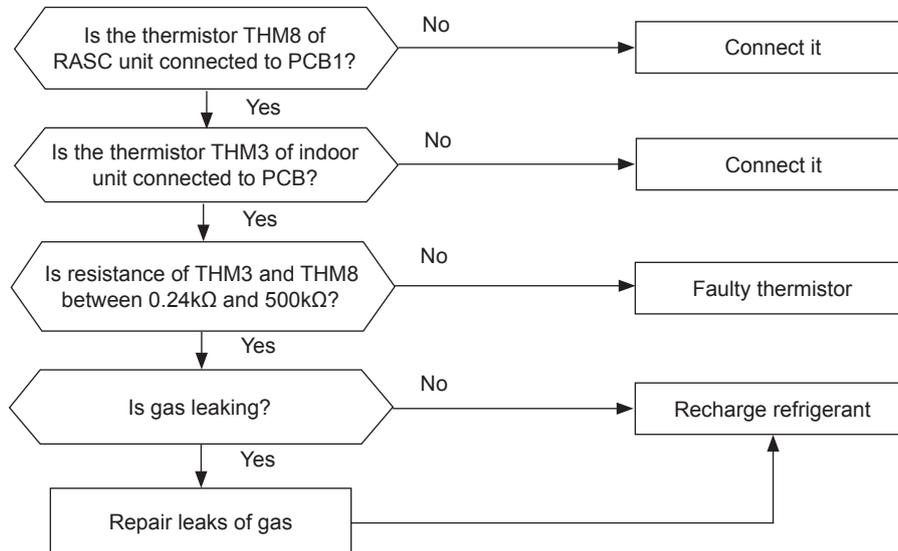

Phenomenon	Cause	Check item	Action (Turn OFF Main Switch)
– Faulty indoor unit liquid refrigerant temperature thermistor – Faulty RASC unit evaporating temperature thermistor	Fault	Check resistance.	Replace thermistor if faulty.
	Incorrect Connection	Check wiring to PCB.	Repair wiring and connections.
Faulty PCB (RASC Unit, Indoor Unit)		Replace PCB and check the operation.	Replace PCB if faulty.
Excessively low suction pressure (in vacuum)	Liquid line stop valve is not open before operation	Check stop valve.	Fully open stop valve.
	Faulty or malfunction of expansion Valve	Check for clogging.	Remove clogging.
		Check connecting wiring and connectors.	Replace connector.
		Check operating sound from coil.	Replace coil.
		Check discharge gas thermistor.	Replace thermistor.
		Check attaching state of discharge gas thermistor.	Reattach thermistor.
	Refrigerant Leakage	Check each temperature and pressure.	Charge refrigerant after vacuum pumping.
Check gas leakage part.		Correctly charge refrigerant after repairing gas leakage.	
Faulty outdoor fan at heating operation	Faulty outdoor fan motor	Measure coil resistance and insulating resistance.	Replace outdoor fan motor if faulty.

Alarm code	48	Overcurrent protection activation
------------	-----------	-----------------------------------

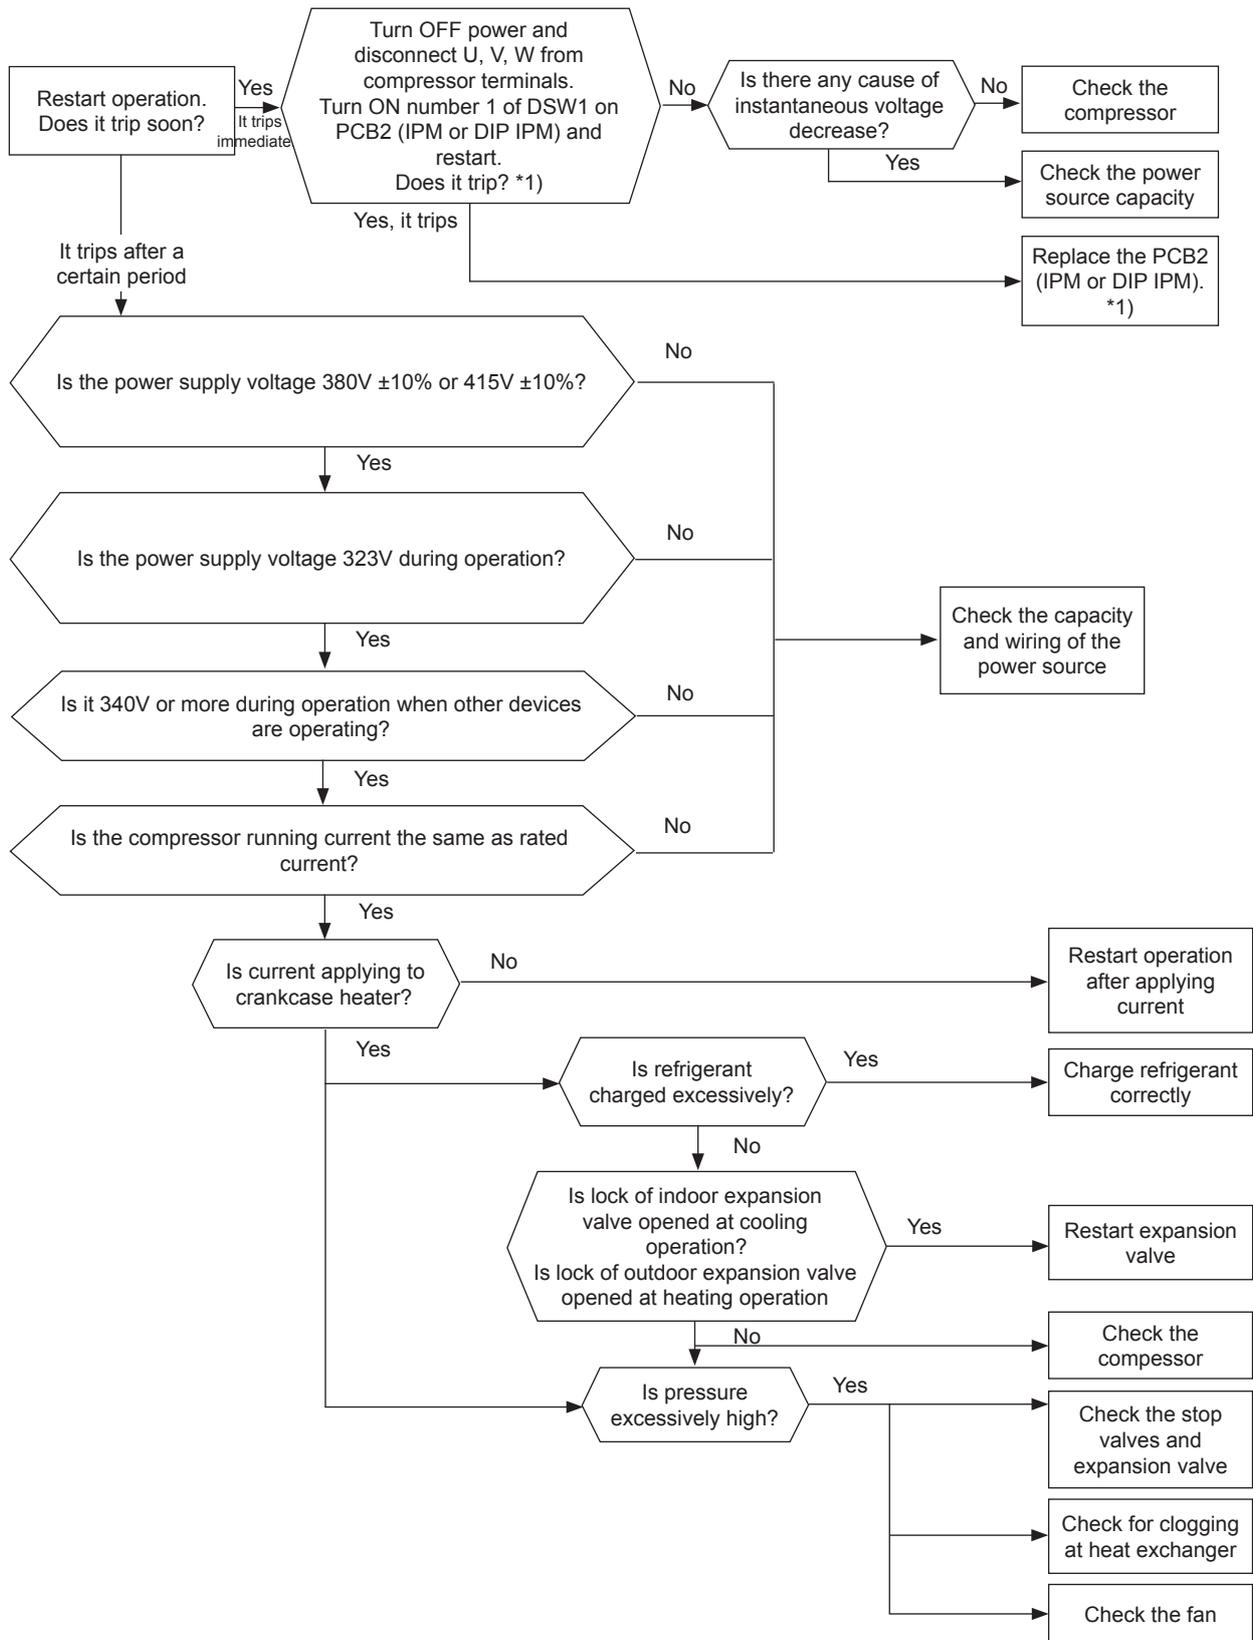


i NOTE

*1) Perform the high voltage discharge work by referring to section "10.4.6 Checking procedure for other parts" before checking and replacing the inverter PCB.

Alarm code	51	Abnormal operation of the current sensor (RASC-(4-6)HNPE)
------------	-----------	---

- This alarm code is displayed when the current transformer is abnormal (0 A detection or 5 A alarm condition) and the alarm has more than three occurrences in 30 minutes.
- Condition of Activation:
 - When the frequency of the compressor is maintained at 15~18 Hz after the compressor is started, one of the absolute values of the running current at each phase U+, U-, V+ and V- is less than 1.5 A (including 1.5A)
 - Before the compressor is operated (at the end of position control), the current wave value is less than 5.0 A.

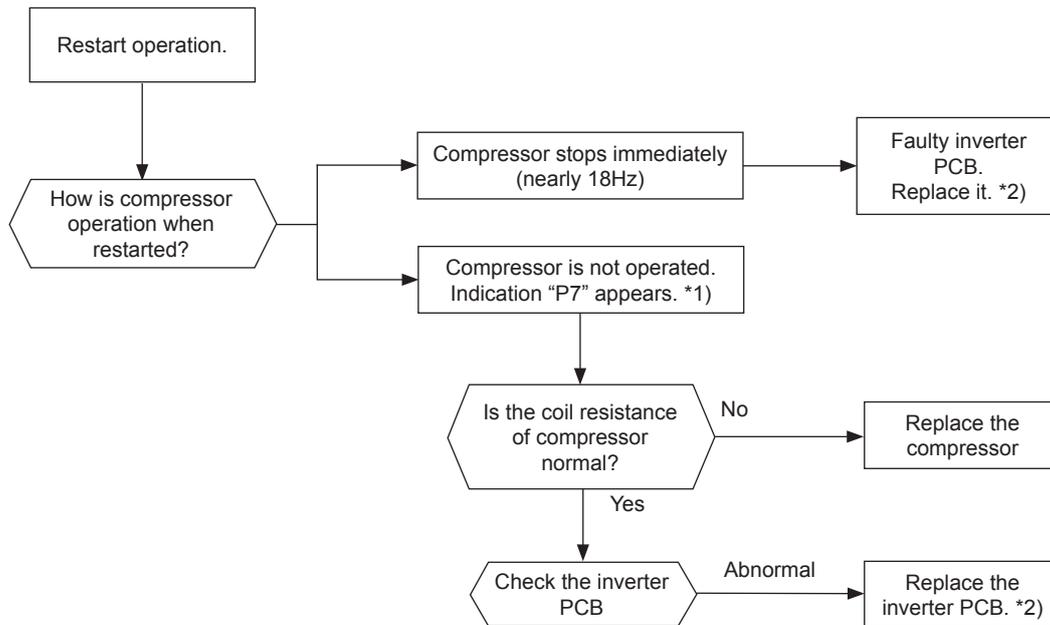


NOTE

- *1) P7 is shown at 7-segment on the RASC unit PCB.
- *2) Perform the high voltage discharge work by referring to the item "10.4.6 Checking procedure for other parts" before checking and replacing the inverter parts.

Alarm code	51	Abnormal operation of the current sensor (RASC-(8/10)HNPE)
------------	----	--

- This alarm code is displayed when the current transformer is abnormal (0 A detection or 5 A alarm condition) and the alarm has more than three occurrences in 30 minutes.
- Condition of Activation:
 - When the frequency of the compressor is maintained at 15~18 Hz after the compressor is started, one of the absolute values of the running current at each phase U+, U-, V+ and V- is less than 1.5 A (including 1.5A)
 - Before the compressor is operated (at the end of position control), the current wave value is less than 5.0 A.

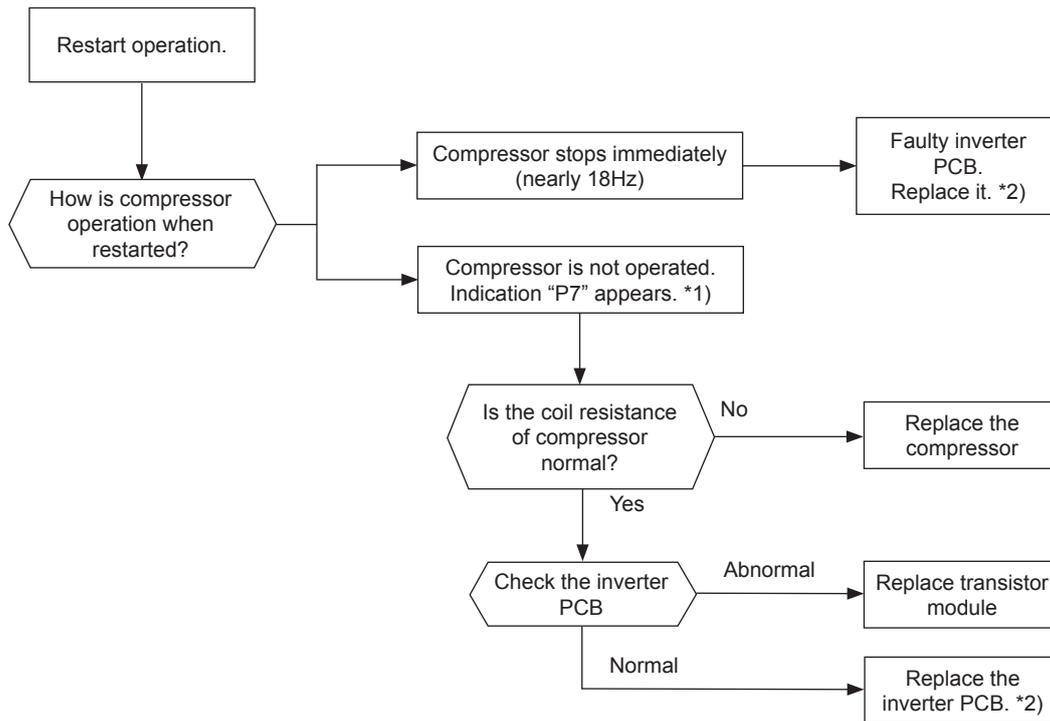

NOTE

- *1) P7 is shown at 7-segment on the RASC unit PCB.
- *2) Perform the high voltage discharge work by referring to the item "10.4 Checking procedure for main parts" before checking and replacing the inverter parts.


Alarm code	53	Activation of transistor module (RASC-(4-6)HNPE)
------------	-----------	--

IPM or Dip IPM and PCB2 have detecting function of abnormality. This alarm is indicated when the transistor module detect the abnormality 7 times in 30 minutes including 7. Retry operation is performed up to the occurrence of 6 times.

Conditions:

- The abnormal current such as short circuited, grounded or the overcurrent occurs at the transistor module.
- The temperature at transistor module increases abnormally.
- The control voltage decreases.
- The angle difference between the shaft in compressor and the shaft in the control program exceeds +60deg.

(Refer to the next page)

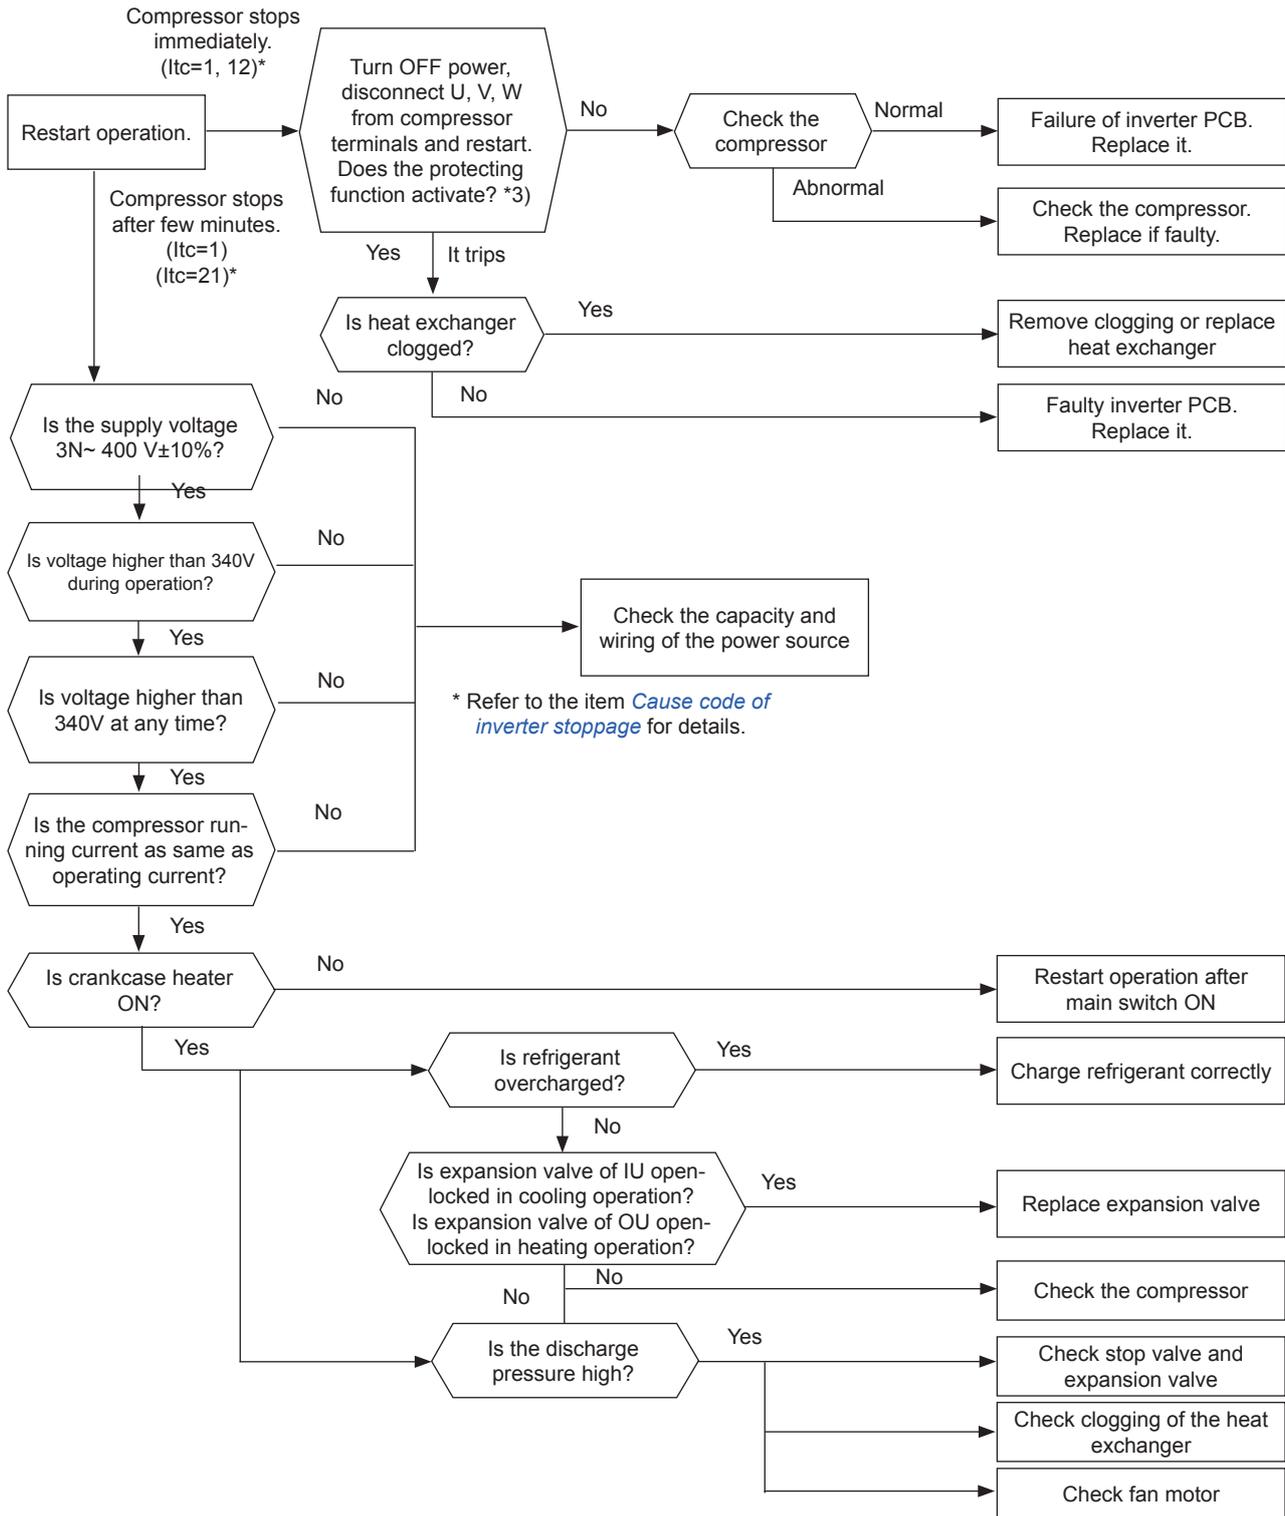

i NOTE

- *1) Perform the high voltage discharge work by referring to the item “10.4.6 Checking procedure for other parts”, before checking and replacing the inverter components.
- *2) Regarding replacing or checking method for inverter components, refer to item “10.4.6 Checking procedure for other parts”.
- *3) Turn ON the number 1 switch of the dip switch DSW1 on PCB2 (inverter) when restarting with disconnecting the terminals of the compressor. After troubleshooting, turn OFF the number 1 switch of the dip switch DSW1 on PCB2.
- When the alarm code “53” is indicated, the outdoor fan motor (DC motor) ensure that DC fan motor is checked according to the item “10.4.6 Checking procedure for other parts”.


Alarm code	53	Activation of transistor module (RASC-(8/10)HNPE)
------------	-----------	---

IPM or Dip IPM and PCB2 have detecting function of abnormality. This alarm is indicated when the transistor module detect the abnormality 7 times in 30 minutes including 7. Retry operation is performed up to the occurrence of 6 times.

Conditions:

- The abnormal current such as short circuited, grounded or the overcurrent occurs at the transistor module.
- The temperature at transistor module increases abnormally.
- The control voltage decreases.
- The angle difference between the shaft in compressor and the shaft in the control program exceeds +60deg.

(Refer to the next page)

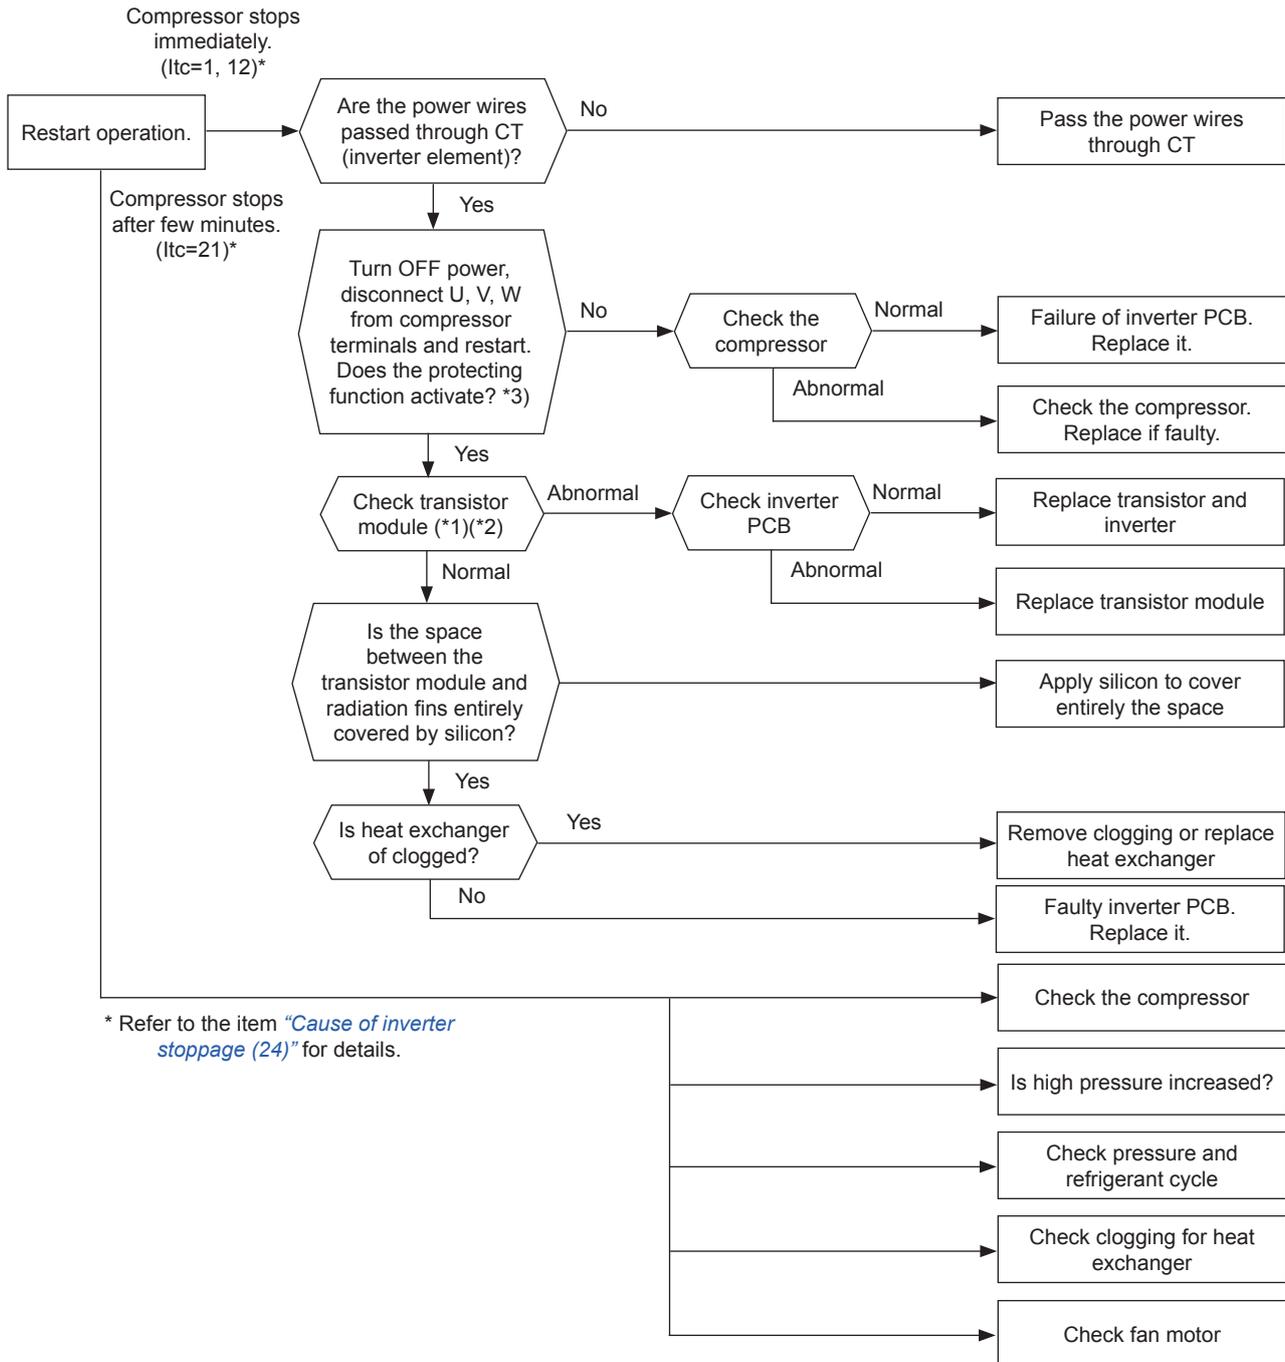

NOTE


- *1) Perform the high voltage discharge work by referring to the item "10.4.6 Checking procedure for other parts", before checking and replacing the inverter components.
- *2) Regarding replacing or checking method for inverter components, refer to item "10.4.6 Checking procedure for other parts".
- *3) Turn ON the number 1 switch of the dip switch DSW1 on PCB2 (inverter) when restarting with disconnecting the terminals of the compressor. After troubleshooting, turn OFF the number1 switch of the dip switch DSW1 on PCB2.
- When the alarm code "53" is indicated, the outdoor fan motor (DC motor) ensure that DC fan motor is checked according to the item "10.4.6 Checking procedure for other parts".

Alarm code	54	Abnormality of inverter fin temperature (RASC-(4-6)HNPE)
------------	-----------	--

This alarm code is indicated after the operation is stopped when the following condition occurs three times within 30 minutes. The retry operation is performed twice.

Conditions:

When the temperature inside the transistor module exceeds 90 °C.

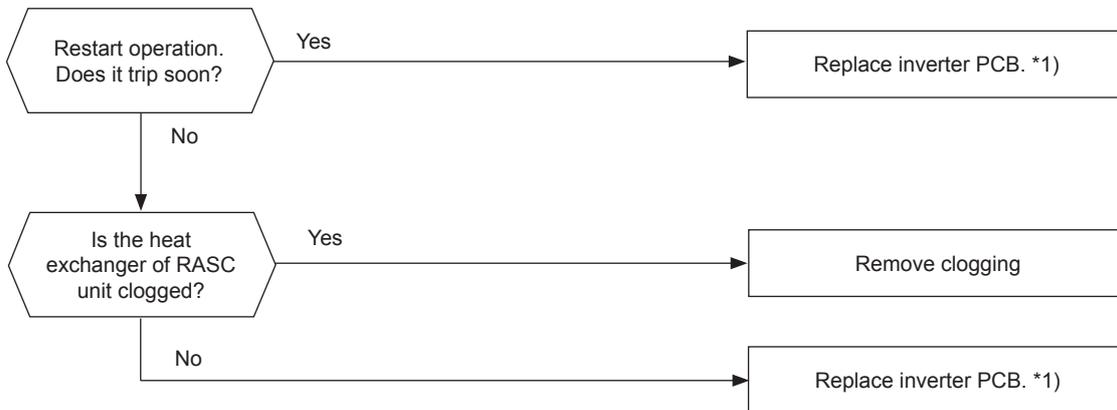

NOTE


1*): Perform the high voltage discharge work by referring to the item “10.4.6 Checking procedure for other parts”, before checking and replacing the inverter components.

Alarm code	54	Abnormality of inverter fin temperature (RASC-(8/10)HNPE)
------------	-----------	---

This alarm code is indicated after the operation is stopped when the following condition occurs three times within 30 minutes. The retry operation is performed twice.

Conditions:

When the temperature of the thermistor for inverter fin exceeds 100 °C.

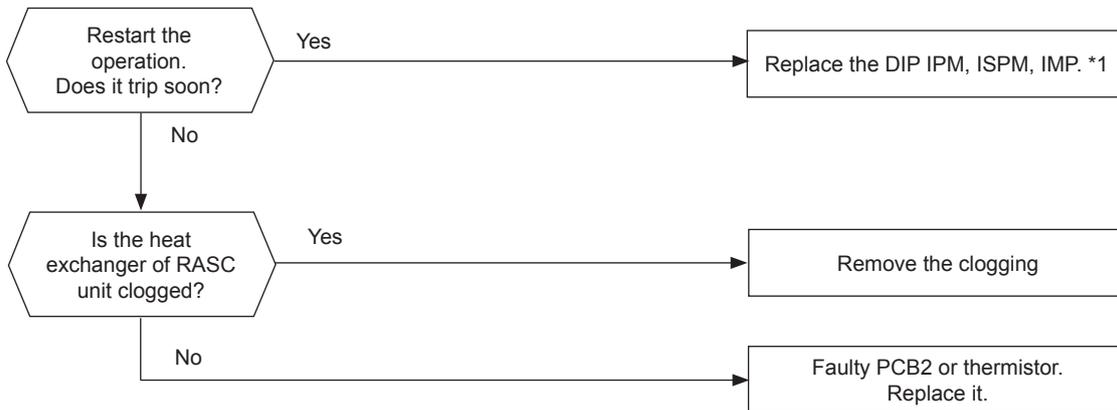

NOTE


1*): Perform the high voltage discharge work by referring to the item “10.4.6 Checking procedure for other parts”, before checking and replacing the inverter components.

Alarm code	55	Abnormality of Inverter Module
------------	-----------	--------------------------------

- Actual frequency from Inverter PCB is less than 10 Hz (after inverter frequency output form PCB1 to Inverter PCB).
- This alarm is displayed when it occurs 3 times in 30 minutes. Retry operation is performed up to the occurrence of 2 times.


Condition of Activation:

This alarm is indicated when Inverter PCB is not performed normally.

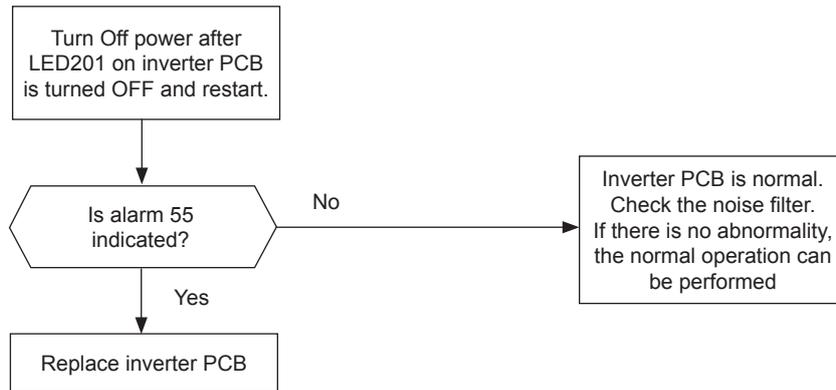

i NOTE

When the excessive surge current is applied to the unit due to lighting or other causes, this alarm code or the cause code of inverter stoppage (l_{tc}=11) will be indicated on the 7-segment display on RASC PCB1 and the unit can not be operated. In this case, check to ensure the surge absorber (SA) on the noise filter (NF1). The surge absorber may be damaged if the inner surface of the surge absorber is changed to black. If the surge absorber is damaged, replace the noise filter. If the surge absorber does not have abnormality, turn OFF the power source once and wait until turning OFF LED201 (red) on inverter PCB for approx. 5 min. Then, turn ON again.

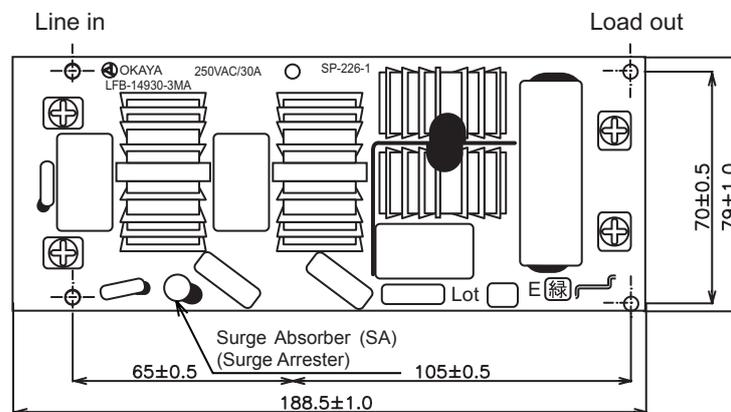

Alarm code	EE	Compressor protection
------------	-----------	-----------------------

This alarm code is displayed when one of the following alarms occurs three times within six hours. If the RASC unit operates continuously without removing the cause of the alarm, the compressor may be seriously damaged

Alarm code	Content of abnormality
02	Tripping of protection device in RASC unit
07	Decrease in discharge gas superheat
08	Increase in discharge gas temperature
45	Activation of high pressure increase protection device
47	Low pressure decrease protection activating

You can check these alarms using the check mode 1. Follow the action that is indicated in each alarm chart. You can clear these alarms only by turning OFF the main switch to the system. **However, you must pay careful attention before starting, because there is a possibility of causing serious damages to the compressors.**

Alarm code	b0	Incorrect Setting of Unit Model Code
------------	-----------	--------------------------------------

This alarm code is indicated in the following condition. Check the unit model code setting (DSW4) of I.U. PCB after turning OFF the power source.

Condition	Action
The unit model code setting (DSW4) is not set (all pins are "OFF"), or is set for the incorrect indoor unit type.	Set DSW4 correctly according to the dip switch setting in "Installation and Maintenance Manual".

Alarm code	b1	Incorrect Setting of Unit and Refrigerant Cycle Number
------------	-----------	--

This alarm code is indicated in the following condition. Check the settings of the dip switch (DSW) and the rotary switch (RSW) after turning OFF the power source.

Conditions	Action
The unit unit number setting (DSW6 and RSW1) or the refrigerant cycle unit number setting (DSW5 and RSW2) is set as "64" or more, or more than 2 pins of DSW5 or DSW6 are set.	<ul style="list-style-type: none"> a. Unit number setting / refrigerant cycle number setting starting from "1" (recommended) <ul style="list-style-type: none"> - set the unit number and the refrigerant cycle number from "1" to "63". (Setting number for the 64th unit shall be "0".) a. Unit number setting / refrigerant cycle number setting starting from "0" <ul style="list-style-type: none"> - set the unit number and the refrigerant cycle number from "0" to "63." (Setting number for the 64th unit shall be "63".)
The unit unit number setting and the refrigerant cycle unit number setting are set between "16" and "63," and the indoor unit does not support H-LINK II.	Set the unit number and the refrigerant cycle unit number between "0" and "15".

Alarm code	b5	Incorrect Setting of Indoor Unit Number for H-LINK Type
------------	-----------	---

*) The alarm code indicated on the remote control switch is "35".

Condition	Action
The number of the connected indoor units not supporting H-LINK II is 17 and after.	The number of the connected indoor units shall be 16 and before.

10.2.4 Alarm codes for the DX Interface



Code number	Category	Type of Abnormality	Main cause
01	Indoor	Activation of protection device	Float switch activation (high water level in drain hose or abnormality in drain pipe, float switch or drain pan).
03	Transmission	Transmission Error	Outdoor fuse meltdown, Indoor/outdoor connection wiring (breaking, wiring error, etc.)
11	Indoor	Air inlet thermistor (RA for KPI)	Loose, disconnected, broken or short-circuited connector
12	Indoor	Air outlet thermistor (OA for KPI)	Loose, disconnected, broken or short-circuited connector
13	Indoor	Liquid pipe thermistor	Loose, disconnected, broken or short-circuited connector
14	Indoor	Gas pipe thermistor	Loose, disconnected, broken or short-circuited connector
15	Indoor	Fresh Outdoor Air Thermistor (Eco-nofresh)	Loose, disconnected, broken or short-circuited connector
16	Indoor	Air inlet DX Coil thermistor (Tincoil)	Loose, disconnected, broken or short-circuited connector
17	Indoor	Air outlet DX Coil thermistor (Toutcoil)	Loose, disconnected, broken or short-circuited connector
18	Indoor	Indoor RA fan protection device activation for KP	Fan motor overheating, locking.
19	Indoor	Indoor OA fan protection device activation for KPI or DX-KIT2 fan	Fan motor overheating, locking.
31	System	Incorrect setting of outdoor and indoor units	Outdoor/Indoor Unit capacity setting error, Indoor total capacity excessively large/small
35	System	Indoor unit number setting error	Indoor units with the same number exist in a refrigerant piping system
70	Indoor	Abnormal transmission between PCB1 and PCB2	Loose, disconnected
71	Indoor	Incorrect PCBs setting	Wrong setting are performed in PCBs
EE	Compressor	Compressor protection alarm (cannot be reset from the remote controller)	This alarm code is displayed when the following alarms are triggered three times within six hours: 02,07,08,39,43 to 45, 47
74	Indoor	Remote sensor thermistor (Trem)	Loose, disconnected, broken or short-circuited connector

10.3 Troubleshooting in check mode


10.3.1 Troubleshooting using the remote controller PC-ART

Use the "OK" switch of the remote control in the following cases:

- 1 When the RUN LED is flickering.
- 2 To trace back the cause of the malfunction after restarting from the stoppage while the RUN LED is flickering.
- 3 To check during the normal operation or during the stoppage.
- 4 To monitor the inlet air temperature and the discharge air temperature.

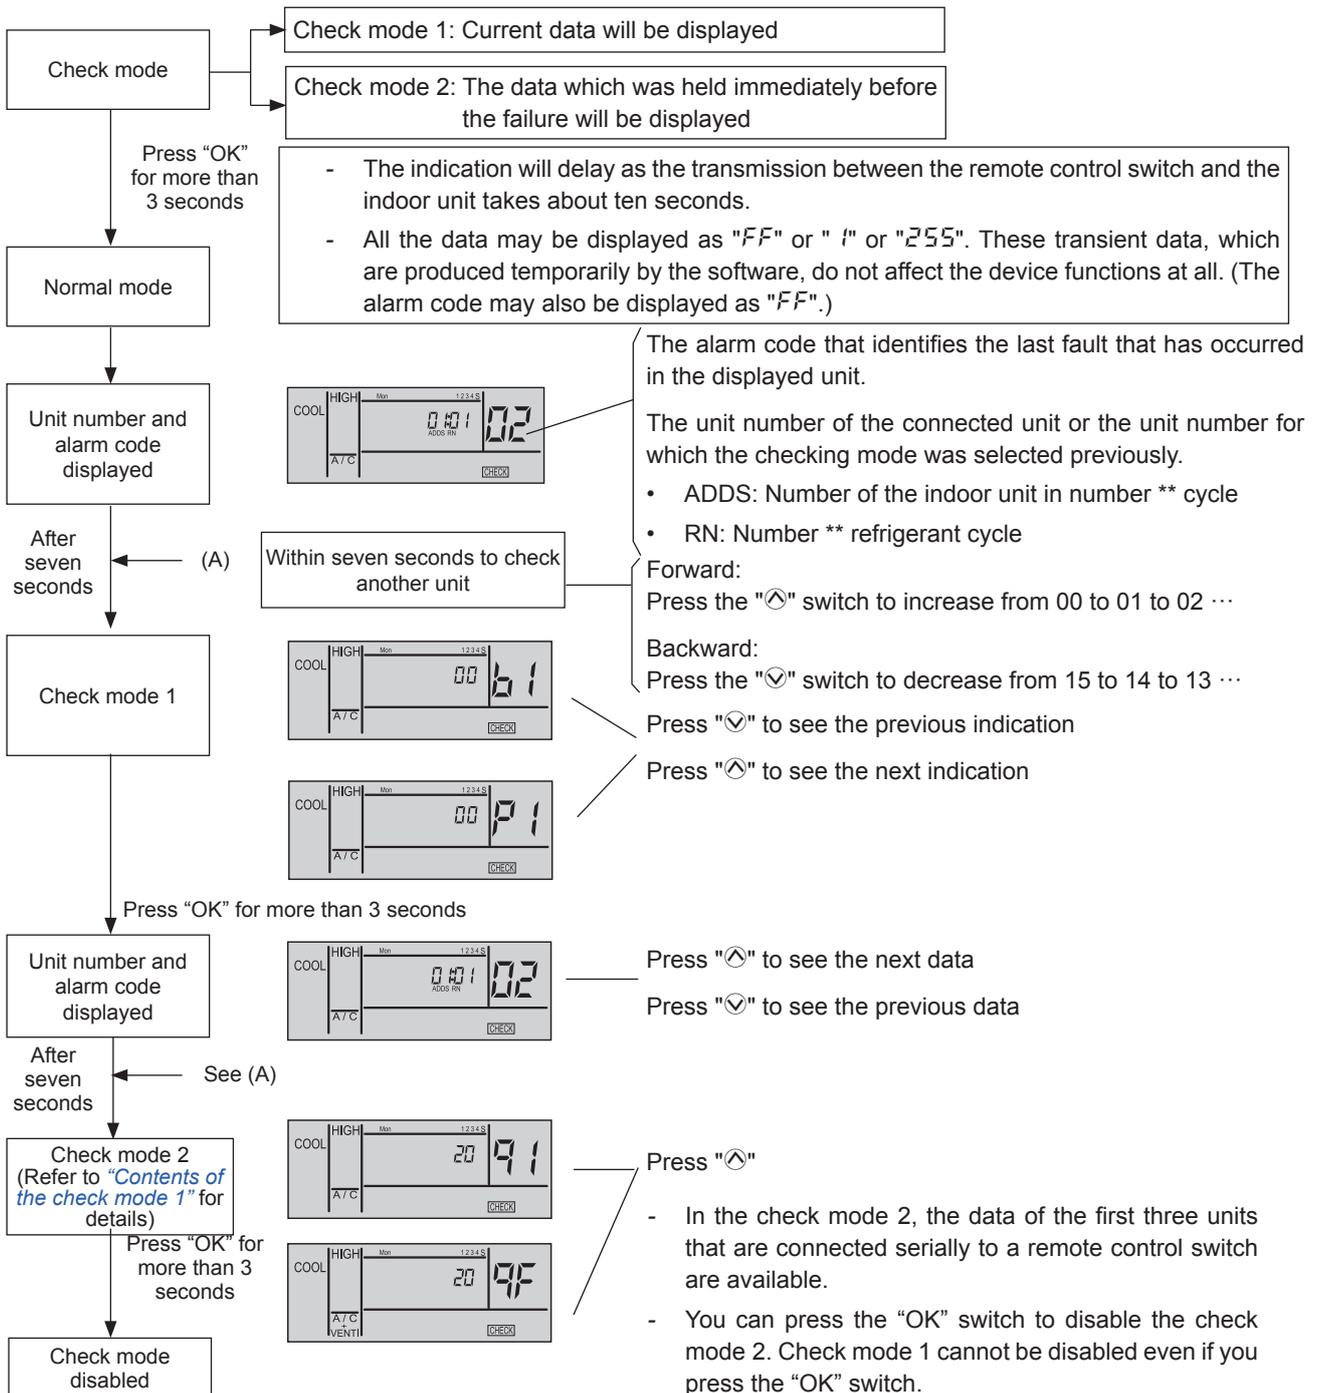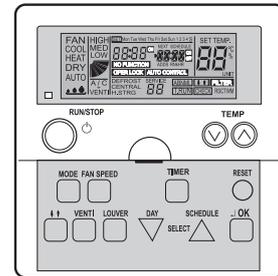

Although the wireless controller is used for the wall type indoor unit with the built-in receiver part, you can check the alarm code by connecting the PC-P2HTE.

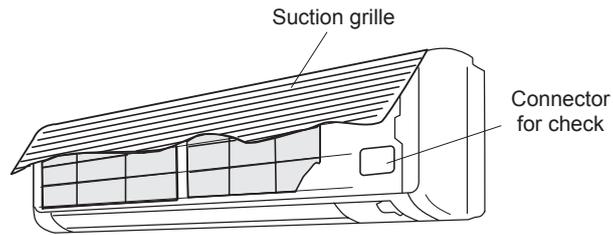**NOTE**

- *The unit does not operate by pressing the operation switch.*
- *The above function is available only when the alarm occurs.*
- *The PCB check using the remote control switch is not available.*
- *The indication is the data when you are connecting PC-P2HTE. The indication is not the data before the alarm occurs.*

◆ **Contents of the check mode 1**

The next indication is shown if you press the part “△” of the TEMP switch. If you press the part “▽” of the TEMP switch, the previous indication is shown.

Temperature indication

1	Indoor unit temperature setting (°C)	b122	Indication of the category code Indication of the temperature, etc
2	Indoor unit air inlet temperature at thermistor (°C)	b220	
3	Indoor unit discharge air temperature at thermistor (°C)	b355	
4	Indoor unit heat exchanger liquid pipe temperature (°C)	b420	
5	Temperature at remote sensor (°C)	b525	
6	RASC unit ambient temperature (°C)	b610	
7	Indoor unit heat exchanger gas pipe temperature (°C)	b725	
8	RASC unit evaporating temperature during heating (°C)	b802	
9	Control information	b9--	
10	Discharge gas temperature at the top of the compressor chamber (°C)	bA41	
11	Thermo temperature of the remote control switch	bB23	

Normal	... Temperature displayed
Abnormal	-- (Thermistor is open-circuited or PCB is defective)
	or
	129 (Temperature for top of compressor)
	or
	FF (Thermistor is short-circuited or PCB is defective)
	or
255	
or	
127 (Temperature for top of compressor)	

Refer to section “Self-checking procedure of PCB by means of the Remote Control Switch”

During the transient periods such as starting time and other, the indicators “--” or “00” may be displayed for a limited time.


This is indicated only when a remote sensor is connected. The indicator “--” is normally displayed. RPK series cannot connect a remote sensor. Therefore, the indicator is “--”.

This indicates the internal information for the remote control switch. This does not have any specific meaning.

(Ex.) During the operation of several compressors, the average temperature of two compressors is indicated. If the temperature is higher than 126 °C, “126”

Indication of micro-computer input/output

12	Micro-computer input/output in indoor unit	
13	Micro-computer input/output in RASC unit	

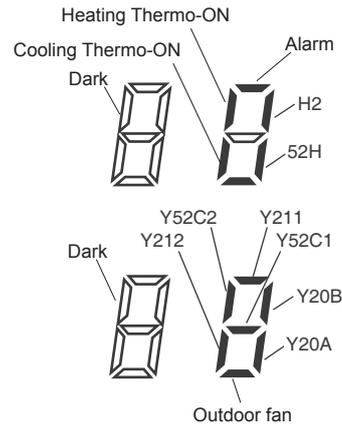

Indication of unit stoppage cause

14	Cause of stoppage	
----	-------------------	--

	Operation OFF, Power OFF
	Thermo-OFF (NOTE 1)
	Alarm (NOTE 2)
	Freeze protection, overheating protection
	Instantaneous power failure at RASC unit (NOTE 3)
	Instantaneous power failure at indoor unit (NOTE 4)
	Stoppage of Cooling Operation due to Low Outdoor Air Temperature
	Stoppage of Heating Operation due to High Outdoor Air Temperature
	Demand
	Retry due to compression ratio decrease
	Retry due to low pressure increase
	Retry for Pd increase prevention
	Vacuum/discharge gas temperature increase retry
	Retry due to discharge gas SUPERHEAT decrease
	IPM error retry, instantaneous over current of inverter retry, electronic thermal activation of inverter retry, abnormal current sensor of inverter retry
	Retry due to inverter voltage decrease Retry due to Inverter Overvoltage Retry due to inverter transmission abnormality
	Retry due to Expansion Valve Control
	Forced Thermo-OFF
	Outdoor hot start control
	Thermo-OFF during energy saving operation mode
	Retry due to high pressure decrease
	Cooling air discharge temperature decrease
	Forced Thermo-OFF (example: due to Air Filter Cleaning)
	Forced Thermo-OFF (example: due to Motion Sensor)
	Retry due to abnormal operating mode (Reversing valve switching failure)
	Forced Thermo-OFF due to Power Saving Control)



NOTE 1

Explanation of term,

Thermo-ON: A condition that an indoor unit is requesting compressor to operate.

Thermo-OFF: A condition that an indoor unit is not requesting compressor to operate.



NOTE 2

Even if stoppage is caused by "Alarm", "02" is not always indicated.



NOTE 3

If transmission between the inverter printed circuit board and the control printed circuit board is not performed during 30 seconds, the RASC unit is stopped.

In this case, stoppage is d1-05 cause and the alarm code "04" may be indicated.



NOTE 4

If transmission between the indoor unit and the RASC unit is not performed during 3 minutes, indoor units are stopped.

In this case, stoppage is d1-06 cause and the alarm code "03" may be indicated.

Abnormal operation occurrence counter

15	Abnormal operation occurrence counter	E101
16	Instantaneous power failure occurrence counter in indoor unit	E200
17	Transmission error occurrence counter between remote control switch and indoor unit	E300
18	Abnormal operation occurrence counter on inverter	E400

Countable up to 99.
 Over 99 times, "99" is always displayed.



NOTE

- If a transmission error continues for three minutes, one is added to the occurrence counter.
- The memorized data can be cancelled by the method which is explained in section "Self-checking procedure of PCB by means of the Remote Control Switch".

Indication of automatic louver condition

19	Louver sensor	F100
----	---------------	------

00 : Normal
 FF : Abnormal

Compressor pressure/frequency indication

20	Discharge pressure (high) (x 0.1 MPa)	H118
21	Suction pressure (low) (x 0.01 MPa)	H204
22	Control information	H344
23	Operation frequency (Hz)	H444

This is an indication for internal information for the remote control switch. This does not have any specific meaning

This is an indication for frequency of inverter

Indoor unit capacity indication

24 Indoor unit capacity J108

The capacity of the indoor unit is indicated as shown in the table below.

Capacity code of indoor unit

Indication code	Equivalent capacity (HP)
06	0.8
08	1.0
10	1.3
13	1.5
14	1.8
16	2.0
18	2.3
20	2.5
22	2.8
26	3.0
32	4.0
40	5.0
48	6.0
64	8.0
80	10.0

25 RASC unit code J2Fn

26 Refrigerant cycle number (Indoor unit shipment DSW5+RSW2) J301

27 Refrigerant cycle number (Indoor unit shipment DSW5+RSW2) J400

"n" indicates the total number of Indoor Units:

1~9	A	b	c	d	E	F	U
1~9	10	11	12	13	14	15	16

J3: 01 ~ 64 (Decimal code)

J4: 00 ~ 3F (Hexadecimal code)

Expansion opening indication

28 Indoor unit expansion valve opening (%) L120

29 RASC unit expansion valve MV1 opening (%) L299

30 RASC unit expansion valve MV2 opening (%) L399

In case of models without the expansion valve (MV2), the same figure is displayed

31 Control information L400

Estimated electric current indication

32 Compressor running current (A) P125

The total current is displayed when several compressors are running.

In case of the inverter compressor, the running current of the primary side of the inverter is displayed.

☛ Returns to temperature indication

◆ **Contents of the check mode 2**

When more than three indoor units are connected to one remote control switch, the latest data of only the first three indoor units that are connected serially are displayed.

If you press the part “” of the TEMP switch, the next display appears. If you press the part “” of the TEMP switch, the previous display appears.

Temperature indication

			Indication of the category code
			Indication of the temperature, etc
1	Indoor unit air inlet temperature at thermistor (°C)	91.23	Corresponds to check mode 1 “b2”
2	Indoor unit discharge air temperature at thermistor (°C)	92.50	Corresponds to check mode 1 “b3”
3	Indoor unit heat exchanger liquid pipe temperature (freeze protection) (°C)	93.25	Corresponds to check mode 1 “b4”
4	Outdoor temperature (°C)	94.12	Corresponds to check mode 1 “b5”
5	Indoor unit heat exchanger gas pipe temperature (°C)	95.25	Corresponds to check mode 1 “b7”
6	Evaporating temperature at heating (°C)	96.03	Corresponds to check mode 1 “b8”
7	Control information	97 --	Corresponds to check mode 1 “b9”
8	Discharge gas temperature at the top of compressor chamber (°C)	98.45	Corresponds to check mode 1 “b9”

Compressor pressure/frequency indication

9	Discharge pressure (high) (x 0.1 MPa)	99.18	Corresponds to check mode 1 “H1”
10	Suction pressure (low) (x 0.01 MPa)	98.04	Corresponds to check mode 1 “H2”
11	Control information	96.44	Corresponds to check mode 1 “H3”
12	Operating frequency (Hz)	90.44	Corresponds to check mode 1 “H4”

Expansion opening indication

13	Indoor unit expansion valve opening (%)	9d.20	Corresponds to check mode 1 “L1”
14	RASC unit expansion valve mv1 opening (%)	9E.99	Corresponds to check mode 1 “L2”



Estimated electric current indication

15	Compressor running current (A)	9F.20	Corresponds to check mode 1 “P1”
----	--------------------------------	-------	----------------------------------

◀ Returns to temperature indication

◆ **Self-checking procedure of PCB by means of the Remote Control Switch**

Use the following troubleshooting procedure for testing the PCB in the indoor unit and the RASC unit:

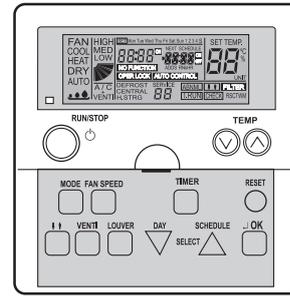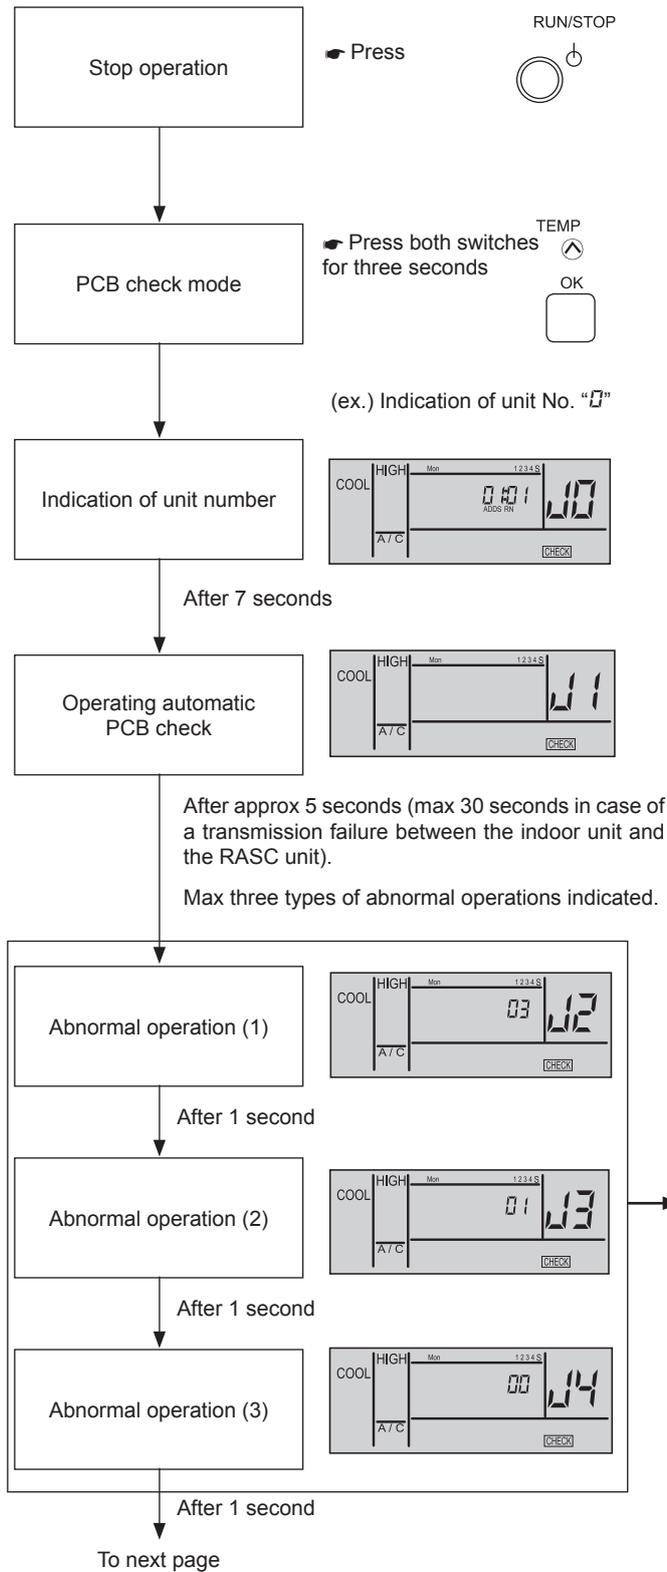

Indication	Contents
00	Normal
Abnormality (open-circuit, short-circuit, etc.) in circuit for:	
01	Air inlet temperature thermistor
02	Discharge air temperature thermistor
03	Liquid pipe temperature thermistor
04	Remote thermistor abnormality
05	Gas pipe temperature thermistor
06	Remote sensor
08	Transmission of central station
0A	EEPROM
0b	Zero cross input failure
EE	Transmission of indoor units during this checking operation

Indoor unit PCB


07	Transmission of RASC unit
F4	Internal thermostat fan input failure
F5	PSW input failure
F6	PSH protection signal detection circuit
F7	Phase detection
F8	Transmission of inverter
FR	High-pressure sensor
Fb	Compressor discharge gas temperature thermistor
FC	Low-pressure sensor
Fd	Heat exchanger evaporation temperature thermistor
FF	Ambient air temperature thermistor

RASC unit PCB

If you are using a wireless remote control switch with the built-in receiver part of the wall-type indoor unit and you need to perform the above checking, perform the following procedure:


- 1 Turn OFF the power supply.
- 2 Disconnect the connector (CN25) on PWB(M).
- 3 Connect the PC-ART.
- 4 Turn ON the power supply.

After finishing the checking, turn OFF the power supply again and reconnect the connectors according to the previous situation before the checking.

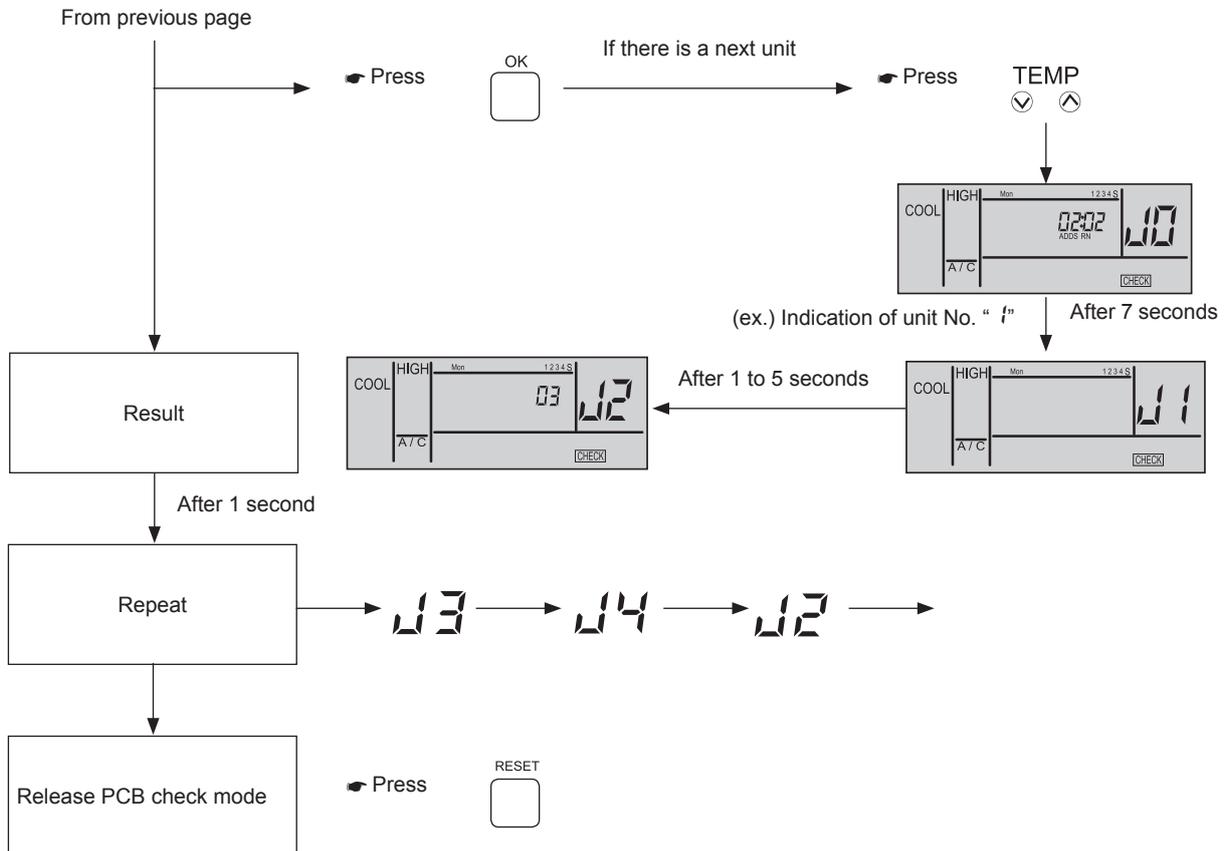

NOTE

- If this indication continues and the alarm code "1" is not displayed, this means that each one of indoor unit is not connected to the remote control switch. Check the wiring between the remote control switch and the indoor unit.



- In this troubleshooting procedure, checking of the following parts of the PCB is not available.
 PCB in indoor unit: relay circuit, DIP switch, option circuit, fan circuit, protection circuit.
 PCB in RASC unit: relay circuit, DIP switch, option circuit.
- If this troubleshooting is performed in the system using the central station, the indication of the central station may change during this procedure. However, this is not abnormal.
- After this troubleshooting, the memory of the abnormal operation occurrence counter, which was described before, will be deleted.

◆ **Self-checking procedure of the remote control switch**

Cases where the OK switch is used:

- 1 If the remote control switch displays a malfunction.
- 2 For the regular maintenance check.

1 Turn ON the power source


2 Simultaneously press the following three switches. (During the operation, you can press the switches.)

TEMP MODE
 

3 The LCD changes as shown in the right figure.

4 After the LCD changes as shown in the right figure, the RUN indicator flickers twice.

01

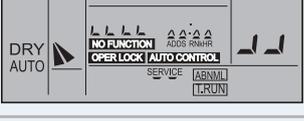No.	LCD indication	Indicating period (sec.)
1		1
2		1
3		1
4		1
5		3

Only for the cancellation of EEPROM, press the following three switches simultaneously during the changes of the LCD.

TEMP MODE
 

To
11

5 The LCD changes as shown below. Press all the switches (13 switches) one by one. Every time you press the switch, the number of the indication of the part (A) in the figure below increases one.

02

NOTE

- Unless all the switches are pressed, the checking does not proceed to the next item.
- You can press the switches in any order.
- Pressing two or more switches simultaneously is invalid and not counted.

6 The LCD changes as shown below. The remote control switch automatically starts to check the transmission circuit

03


NOTE

In case that the transmission circuit is abnormal, the LCD remains as shown in the left figure and the checking does not proceed to the next item.

7

The LCD changes as shown below.

The detected temperature of the remote control thermostat is displayed at the (A) part in the figure below.

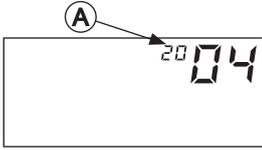

If the indicators "--" or "FF" are displayed at the "A" part, the remote control thermostat is abnormal.


8

The LCD changes as shown below.



If you press the RESET switch or you leave the switches for 15 seconds, the data of EEPROM (storage cell inside of the remote control switch) is cleared.

At this time, the number is displayed at the (A) part, which is shown in the figure below. When the number "99" is displayed, EEPROM is abnormal.

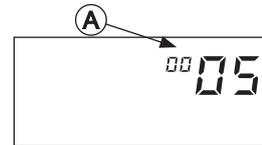

9

The LCD changes as shown below.



After several seconds have passed, the remote control switch is automatically activated again.

If the number which is displayed at the (A) part is "99", the checking does not proceed to the next item.

10

When the remote control switch is activated again, the RUN indicator is ON and the operation is started.

Therefore, press the RUN/STOP switch and stop the operation.

i NOTE

- In case that the operation is not automatically started when the remote control switch is activated again, the detection circuit for the momentary stoppage may be abnormal. However, the detection circuit will not interfere with the normal operation.
- There is a case where the operation is automatically stopped after the automatic operation when the remote control switch is activated again.

Cancellation of EEPROM (from step 3)

11

The LCD changes as shown below and the remote control switch automatically cancels the EEPROM.



12

The LCD changes as shown below




After several seconds have passed, the remote control switch is automatically activated again. In this case, the operation is not started automatically.

10.3.2 Troubleshooting using the remote controller PC-ARF

Each “Check Menu” item and its function are explained in the following table.

Check Menu Item	Function
Check 1	Sensor condition of air conditioner will be monitored and indicated.
Check 2	Sensor data of air conditioner prior to alarm occurrence will be indicated.
Alarm History Display	Previous alarm record (date, time, alarm code) will be indicated.
Model Display	Model name and manufacturing number will be indicated.
IU/OU PCB Check	The result of PCB check will be indicated.
Self Checking	Checking of remote control switch will be carried out.

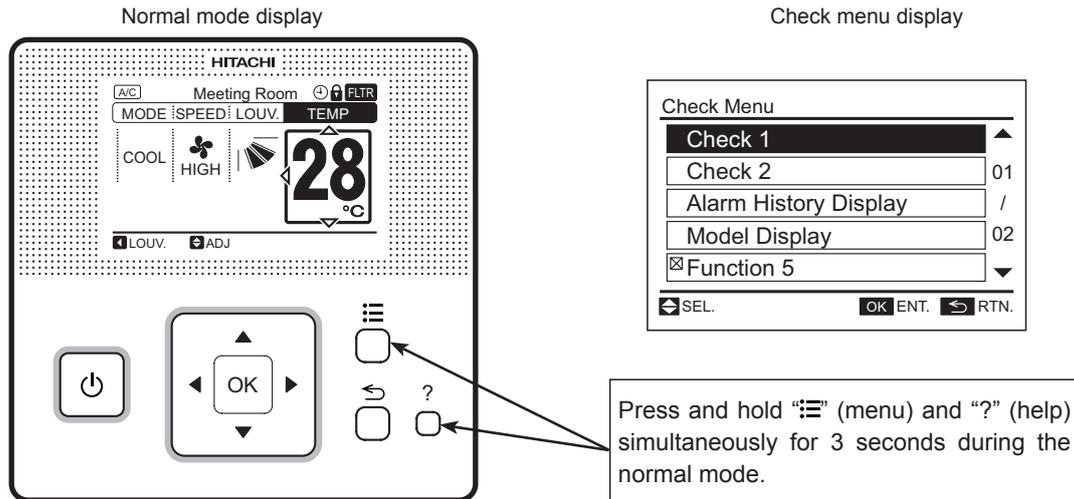

◆ Contents of the check mode 1 and 2

<p>(1) Press and hold “≡” (menu) and “?” (help) simultaneously for 3 seconds during the normal mode. The check menu is displayed.</p>	
<p>(2) Select “Check 1” (or “Check 2”) from the check menu and press “OK”.</p>	
<p>(3) Select the set indoor unit by pressing “△ ▽ ◀ ▶” and press “OK”. (This screen is NOT displayed when the number of indoor units connected with the remote control switch is 1 (one). In this case, (4) will be displayed.)</p>	
<p>(4) Press “△” or “▽” to change the screen.</p>	

Check mode 1 items

No.	Item	Data Name
1	b1	Set Temperature
2	b2	Inlet Air Temperature
3	b3	Discharge Air Temperature
4	b4	Liquid Pipe Temperature
5	b5	Remote Thermistor Temperature
6	b6	Outdoor Air Temperature
7	b7	Gas Pipe Temperature
8	b8	Evaporating Temperature at Heating
9	b9	Condensing Temperature at Cooling

No.	Item	Data Name
18	E3	Times of Abnormal Transmitting
19	E4	Times of Inverter Tripping
20	F1	Louver Sensor State
21	H1	Discharge Pressure
22	H2	Suction Pressure
23	H3	Control Information
24	H4	Operating Frequency
25	J1	IU Capacity
26	J2	OU Code

10	bA	Compressor Top Temperature
11	bb	Thermo Temperature of Remote Control Switch
12	bC	Not Prepared
13	C1	IU Micro-Computer
14	C2	OU Micro-Computer
15	d1	Stopping Cause State Indication
16	E1	Times of Abnormality
17	E2	Times of Power Failure





27	J3	Refrigerant Cycle Number (1)
28	J4	Refrigerant Cycle Number (2)
29	L1	IU Expansion Valve
30	L2	OU Expansion Valve 1
31	L3	OU Expansion Valve 2
32	L4	OU Expansion Valve B
33	P1	Compressor Current
34	q1	Motion Sensor Reaction Rate (0 ~ 100%)

Check mode 2 items

No.	Item	Data Name
1	q1	Inlet Air Temperature
2	q2	Discharge Air Temperature
3	q3	Liquid Pipe Temperature
4	q4	Outdoor Air Temperature
5	q5	Gas Pipe Temperature
6	q6	Evaporating Temperature at Heating
7	q7	Condensing Temperature at Cooling
8	q8	Compressor Top Temperature

No.	Item	Data Name
9	q9	Discharge Pressure
10	qA	Suction Pressure
11	qb	Control Information
12	qC	Operating Frequency
13	qd	IU Expansion Valve
14	qE	OU Expansion Valve 1
15	qF	Compressor Current

◆ Checking procedure of PCB by means of the Remote Control Switch


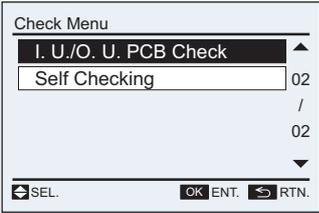
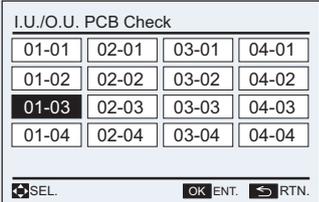
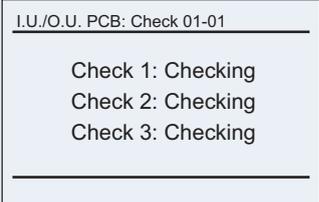
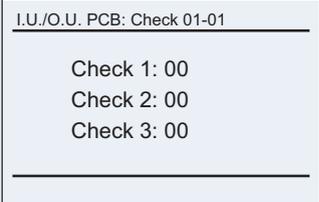
<p>(1) Press and hold "☰" (menu) and "?" (help) simultaneously for 3 seconds during the normal mode. The check menu is displayed.</p>	
<p>(2) Select "I.U./O.U. PCB Check" from the check menu and press "OK".</p>	
<p>(3) Select the set indoor unit by pressing "△ ▽ ◀ ▶" and press "OK". (This screen is NOT displayed when the number of indoor units connected with the remote control switch is 1 (one). In this case, (4) will be displayed.)</p>	
<p>(4) The indoor unit PCB and the RASC unit PCB checks are started.</p> <p>* If "☰" (menu) is pressed during the check, the check is canceled and the screen will return to (2).</p> <p>* If "↵" (return) is pressed during the check, the check is canceled and the screen will return to (3).</p>	
<p>(5) After completing the check, the result of PCB check will be indicated. Press "↵" (return) and return to (3).</p>	






Result of check table

Indoor Unit PCB		RASC Unit PCB	
00	Normal	00	Normal
01	Abnormality of Inlet Air Temperature Thermistor	07	Abnormality of Transmission of RASC Unit
02	Abnormality of Outlet Air Temperature Thermistor	F4	ITO Input Failure
03	Abnormality of Liquid Pipe Temperature Thermistor	F5	PSH Input Failure
04	Abnormality of Remote Thermistor	F6	Abnormality of Protection Signal Detection Circuit
05	Abnormality of Gas Pipe Temperature Thermistor	F7	Abnormality of Phase Detection
01	Abnormality of Transmission of Central Station	F8	Abnormality of Transmission of Inverter
08	Abnormality of EEPROM	FA	Abnormality of High Pressure Sensor
0A	Zero Cross Input Failure	Fb	Abnormality of Compressor Discharge Gas Temperature Thermistor
0b	Abnormality of Transmission of I.U. during Check	FC	Abnormality of Low Pressure Sensor
		Fd	Abnormality of Evaporating Temperature Thermistor at Heating
		FF	Abnormality of Ambient Air Temperature Thermistor

◆ **Self-checking procedure of PCB by means of the Remote Control Switch**

The self checking performs to check the remote control switch and to clear EEPROM (storage cell inside of the remote control switch).
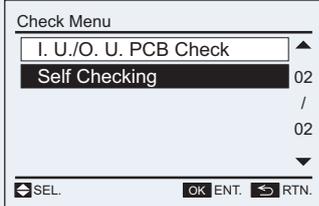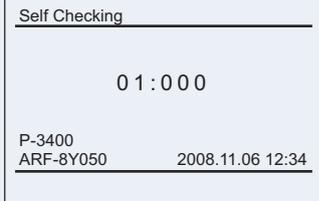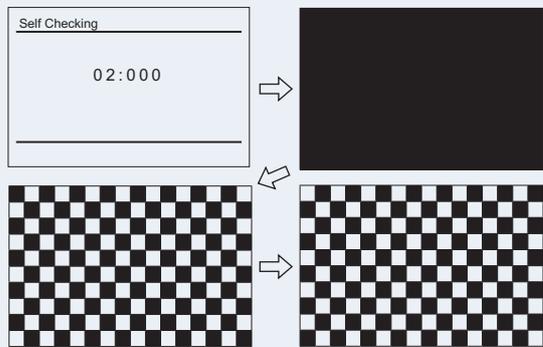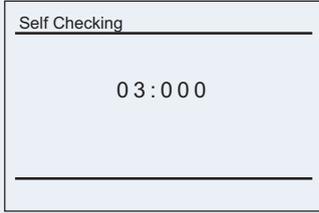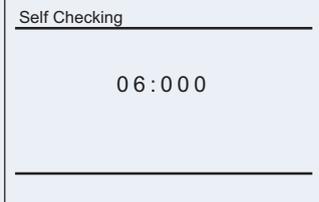
<p>(1) Press and hold  (menu) and “?” (help) simultaneously for 3 seconds during the normal mode (when unit is not operated). The check menu is displayed.</p>	
<p>(2) Select “Self Checking” from the check menu and press “OK”.</p>	
<p>(3) Select the process for “Self Checking”. * To start self check, press “?” (help). * To clear EEPROM, press “√” and “?” (help) simultaneously. → See EEPROM clear process (15) (next page).</p>	
<p>(4) LCD Test Press “OK” and the screen will be switched as shown in the figure.</p>	
<p>(5) Backlight Test LCD brightness changes gradually by pressing “OK”.</p>	
<p>(6) Contrast Test Contrast of the LCD gradually changes by pressing “OK”.</p>	
<p>(7) Run Indicator Test Press “OK” and the run indicator will flash in red and green twice for each.</p>	
<p>(8) Switch Input Test Press the 9 switches one by one. The number indicated with “(A)” will be counted up as switch being pressed. * The order of pressing switch is at random. Do not press more than 1 (one) button, for it will not be counted.</p>	

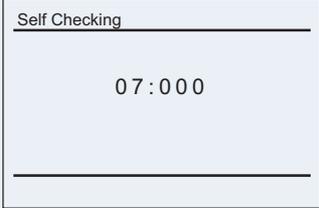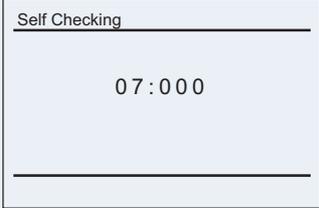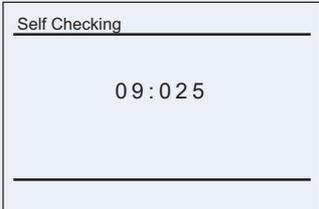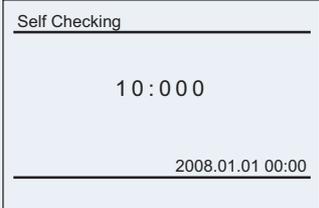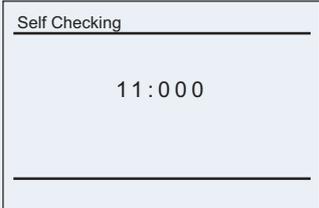
<p>(9) No Function This function is not used. Press "OK" to proceed.</p>	
<p>(10) Transmission Circuit Test The remote control switch automatically starts to check the transmission circuit.</p>	
<p>(11) Remote Control Switch Thermistor Test The temperature detected by remote control switch thermistor is displayed at "A" in the right figure.</p>	
<p>(12) Date/Time Test The date and time is switched from "2012.03.04 12:34" to "2008. 01. 01 00:00".</p>	
<p>(13) EEPROM Test < EEPROM Clearing Cancel > Press "?" (help). < EEPROM Clear > Press "OK" or wait 15 seconds. EEPROM data will be cleared. During the process, the numbers will be indicated on where "A" is located. If "A" indicates "999", EEPROM is in a faulty condition. *In case "A" indicates "999", the process does not proceed to next step.</p>	
<p>(14) After the several seconds pass, the self checking is completed and the remote control switch automatically restarts.</p>	

EEPROM process

<p>(15) Clear EEPROM The remote control switch will automatically start EEPROM clearing process.</p>	
<p>(16) After the several seconds pass, the self checking is completed and the remote control switch automatically restarts.</p>	

10.3.3 Troubleshooting using the 7 segment display

◆ Simple checking by 7-segment display

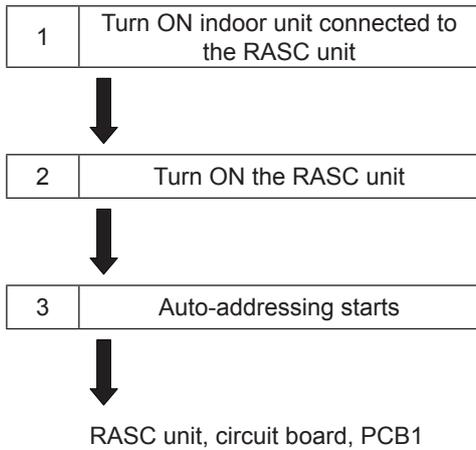


During auto-addressing, the following items can be checked using the RASC unit's on-board 7-segment LED display:

- 1 Disconnection of power supply to the indoor unit.
- 2 Reverse connection of the operating line between the outdoor and indoor units.
- 3 Duplication of indoor unit number.

◆ Checking method by 7-segment display

Operating conditions and each part of refrigeration cycle can be checked by 7-segment and push switches (PSW) on the PCB in the RASC unit. During checking data, do not touch the electric parts except for the indicated switches because 220-240V is applied to them. Pay attention not to contact the tools with electrical parts. If contacted, electrical parts will be damaged.

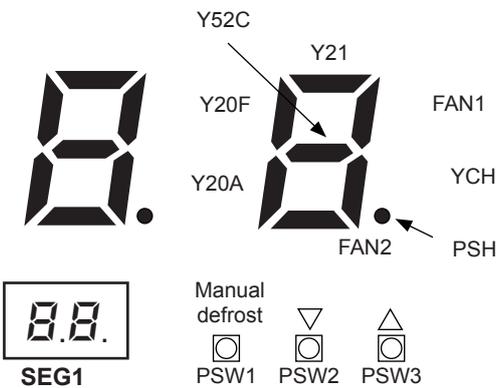

- To start checking, press PSW2 switch for more than three seconds.
- To proceed checking, press the PSW2 switch.
- To back to the previous item, press the PSW3 switch.
- To cancel this checking, press the PSW2 switch for more than 3 seconds.

◆ Check mode items

i NOTE

For figures consisting of more than 2 digits, the upper 2 digits and lower 2 digits of the figures are indicated alternatively every 0.5 sec In the 7-segments display, as shown below (the lower 2 digits are shown together with a dot at the lower right corner)

Example: 1253



Item	Item		Indication data	
	Check number	Indic.	Indic.	Contents
Input/output state of outdoor micro-computer	01	SC	5	Indicates only for the segments corresponding to the equipment in the figure. (See figure above)
Capacity of operating indoor unit	02	oP	11	00~199 In case that capacity is higher than 100, the last two digits flash
Control software No.	03	SP	11	Control Software No. in use is indicated. Alternately upper 2 digits and lower 2 digits are indicated every 0.5 sec.
Inverter software No.	04	iP	11	Control Software No. in use is indicated. Alternately upper 2 digits and lower 2 digits are indicated every 0.5 sec.
Inverter order frequency to compressor	05	H1	74	0~115 (Hz) In case that frequency is higher than 100Hz, the last two digits flicker
Air flow ratio	06	Fo	80	00~15
RASC unit expansion valve opening	07	EO	30	00~100 (%) In case that expansion valve opening is 100%, "00" flashes
Discharge pressure (high)	08	Pd	30	0.1 to 4.9 MPa
Temperature at the top of compressor	09	rd	02	00~142 (°C) In case that temperature is higher than 100°C, the last two digits flash
Evaporating temperature at heating	10	re	42	-19~80°C
Ambient air temperature	11	ra	-3	-19~80°C
Inverter fin temperature	12	rf	20	-10~100 (°C) In case that temperature is 100%, "00" flashes
Inverter firstly current	13	A1	12	00~199 (A) In case that current is higher than 100°C, the last two digits flash
Inverter secondary current	14	A2	20	00~199 (A) In case that current is higher than 100°C, the last two digits flash
Indoor unit address	15	nA	00	00~63
Indoor unit expansion valve opening	16	EA	20	00~100 (%) In case that opening is 100%. "00" flashes
Liquid pipe temperature of indoor unit (freeze protection)	17	LA	05	-19~127 (°C)
Indoor unit intake air temperature	18	iA	28	-19~127 (°C)
Indoor unit discharge air temperature	19	oA	20	-19~127 (°C)
Cause of indoor unit stoppage	20	dA	05	(See table at the next page)
Total accumulated operation time of Compressor	21	UJ	00	0 to 9999 (x 10 hours) Alternately upper 2 digits and lower 2 digits are indicated every 0.5 sec.
Accumulated operation time of the compressor (can be reset to zero, example, when compressor is replaced)	22	cU	00	0 to 9999 (x 10 hours) Alternately upper 2 digits and lower 2 digits are indicated every 0.5 sec.
Alarm code for abnormal stoppage of compressor	23	AC	08	Alarm code on compressor
Cause of stoppage at inverter	24	iF	1	(See table at the next page)
Abnormal data record	25	n1	00	One of the abnormal data record from latest (n1) to oldest (n9) is indicated. Alarm code or cause code is indicated.
Total capacity of indoor unit connected	26	CP	22	00~199 In case that capacity is higher than 100, the last two digits flash
Quantity of connected indoor units	27	AA	2	00~64
Refrigerant adress	28	GA	0	00~63

◆ Cause of indoor unit stoppage (A)


Indication	Contents
00	Operation OFF, Power OFF
01	Thermo-OFF
02	Alarm
03	Freeze protection overheating protection
05	Instantaneous power failure at RASC unit
06	Instantaneous power failure at indoor unit
07	Stoppage of Cooling Operation due to Low Outdoor Air Temperature Stoppage of Heating Operation due to High Outdoor Air Temperature
10	Demand
11	Retry due to compression ratio decrease
12	Retry due to low pressure increase
13	Retry for Pd increase prevention
15	Vacuum/discharge gas temperature increase retry
16	Retry due to discharge gas SUPERHEAT decrease
17	IPM error retry, instantaneous over current of inverter retry, electronic thermal activation of inverter retry, abnormal current sensor of inverter retry
18	Retry due to inverter voltage decrease Retry due to Inverter Overvoltage Retry due to inverter transmission abnormality
19	Retry due to Expansion Valve Control
21	Forced Thermo-OFF
24	Thermo-OFF during energy saving operation mode
26	Retry due to high pressure decrease
28	Cooling air discharge temperature decrease
33	Forced Thermo-OFF (example: due to Air Filter Cleaning)
34	Forced Thermo-OFF (example: due to Motion Sensor)
35	Retry due to abnormal operating mode (Reversing valve switching failure)
39	Forced Thermo-OFF due to Power Saving Control)



NOTE

Thermo-OFF:

Temperature Area in Heating Operation

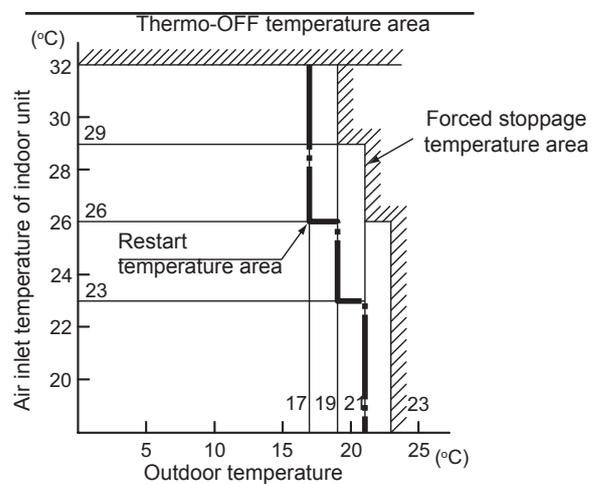

NOTE

- The cause code for indoor unit stoppage is not always "02" (Alarm) during stoppage by the abnormality. If the unit is under Thermo-OFF by other cause of stoppage before "02" (Alarm) occurs, the previous cause code for indoor unit stoppage remains.
- When the transmitting between the inverter PCB and the RASC unit PCB1 is disconnected for 30 seconds, the outdoor micro-computer will be reset. Accordingly when the alarm code "04" (Abnormal Transmitting between Inverter PCB and RASC Unit PCB1) occurs, the cause code for indoor unit stoppage may be indicated "05".
- When the transmitting between the indoor unit and the RASC unit is disconnected for 3 minutes, the indoor micro-computer will be reset. Accordingly when the alarm code "03" (Abnormal Transmitting between Indoor Unit and RASC Unit) occurs, the cause code for indoor unit stoppage may be indicated "05".
- For twin, triple and quad combination, if the cause code for indoor unit stoppage "21" is indicated, check the cause of stoppage for other indoor units.

Cancellation of Forced Thermo OFF (21)

Turn ON the power source and wait for more than 30 seconds. Then press PSW1 for more than 3 seconds.

Forced thermo-OFF (indoor unit error code 21) will be cancelled.

However, this function may damage the compressor, use only on inevitable occasion.

- In case of using the remote control switch (PC-ART), the cancellation is also available with it.
- When “Operation Lock” indication flashes on the remote control LCD, press FAN SPEED and LOUVER switches simultaneously for more than 3 seconds.
- “Operation Lock” Indication is disappeared and operation is available.

◆ Cause of inverter stoppage (24)

Code	Cause	Cause of stoppage for corresponding unit	Remark	
			Indication during retry	Alarm Code
1	Automatic Stoppage of Transistor Module (DIP-IPM Error) (Overcurrent, Undercurrent, Temperature increase)	17	P7	53
2	Instantaneous Over Current	17	P7	48
3	Abnormal Inverter Fin Thermistor	17	P7	54
4	Electronic Thermal Activation (Inverter overcurrent)	17	P7	48
5	Inverter Voltage Decrease (Undervoltage)	18	P8	06
6	Over Voltage	18	P8	06
7	Abnormal Inverter Transmission	18	-	04
8	Abnormal Current Detection	17	P7	51
9	Instantaneous Power Failure Detection	18	-	-
11	Reset of Micro-Computer for Inverter	18	-	-
12	Earth Fault Detection from Compressor (Only Starting)	17	P7	53
13	Phase detection abnormality	18	P8	-
14	Inverter Non-Operation	18	-	55
15	Inverter Non-Operation	18	-	55
16	Inverter Non-Operation	18	P8	55
17	Communication Abnormality	18	P8	55
18	Protection Device Activation (PSH)	-	-	02
19	Protection Detection Device Abnormality	-	-	38
20	Early Return Protection Device	18	P7	53
21	Step-Out Detection	17	-	31

◆ Table of capacity codes of indoor unit

Code	Equivalent horsepower
06	0.8
08	1.0
10	1.3
11	1.5
13	1.8

Code	Equivalent horsepower
14	2.0
16	2.3
18	2.5
22	3.0
32	4.0

Code	Equivalent horsepower
40	5.0
48	6.0
64	8.0
80	10.0

◆ **Protection control code on 7-segment display**

- 1 Protection control code is displayed on 7-segment when a protection control is activated.
- 2 Protection control code is displayed while function is working, and goes out when released.
- 3 When several protection control are activated, code number with higher priority will be indicated (see below for the priority order).
 - a. Higher priority is given to protection control related to frequency control than the other. Priority order:
 - ◆ High-pressure increase protection
 - ◆ Over current protection
 - ◆ Cold draft protection
 - a. In relation to retry control, the latest retrial will be indicated unless a protection control related to frequency control is indicated.

Priority	Protection control	Code
1	Pressure ratio control	P01
2	High-pressure rise protection	P02
3	Current protection	P03
4	Inverter fin temperature rise prevention	P04
5	Discharge gas temperature rise protection	P05
6	Demand current control (running current limit control)	P0A
7	High pressure decrease protection (only Premium series)	P09

 **NOTE**

The protection control code being indicated on 7-segment display is changed to an alarm code when the abnormal operation occurs. Also, the same alarm code is indicated on the remote control switch.

◆ **Activating condition of protection control code**

To monitor the conditions such as the temperature change and others, the control of the frequency and other controls are performed by the protection control in order to prevent the abnormal operations. The activating conditions of protection control are shown in the table below:

Code	Protection control	Activating condition	Remarks
P01	Pressure ratio control	Compression ratio $\epsilon \geq 7.5 \Rightarrow$ frequency decrease Compression ratio $\epsilon \leq 1.6 \Rightarrow$ frequency increase	$\epsilon = (Pd+0.1)/(Ps+0.1)$
P02	High-pressure increase protection	High Pressure Switch for Control is activated \Rightarrow Frequency Decrease	
P03	Inverter current protection	If Inverter PCB secondary current $> (*1)A$ \Rightarrow frequency decrease	
P04	Inverter fin temperature increase prevention	Inverter fin temperature RASC-(4-6)HNPE ≥ 70 °C RASC-(8/10)HNPE ≥ 82 °C \Rightarrow frequency decrease	
P05	Discharge gas temperature increase protection	Temperature at the top of compressor is high \Rightarrow frequency decrease (Maximum temperature is different depending on the frequency) Temperature at the top of compressor > 107 °C \Rightarrow Indicate P5	
P09	High-pressure decrease protection	Discharge pressure of compressor decrease under 10MPa \Rightarrow Frequency increase	Cooling operation and lowest step fan or heating operation
P0A	Demand current control (running current limit control)	Compressor run current \geq demand setting value \Rightarrow frequency decrease	Demand setting value: upper limit of total running current is set to 100%, 80%, 70%, 60% at normal operation using input on PCB1

Ps: Suction pressure of compressor (MPa)

Pd: Discharge pressure of compressor (MPa)

(*1)

Connection	400V				
	4	5	6	8	10
HP					
Current (A)	12.0	12.0	12.0	17.5	19.0




NOTE

- During protection control (except during alarm stoppage), the protection control code is indicated.
- The protection control code is indicated during protection control and turns off when cancelling the protection control.
- After retry control, the condition of monitoring is continued for 30 minutes.

10.4 Checking procedure for main parts

10.4.1 Checking procedure for the PCB (PCB1 ref PO101)

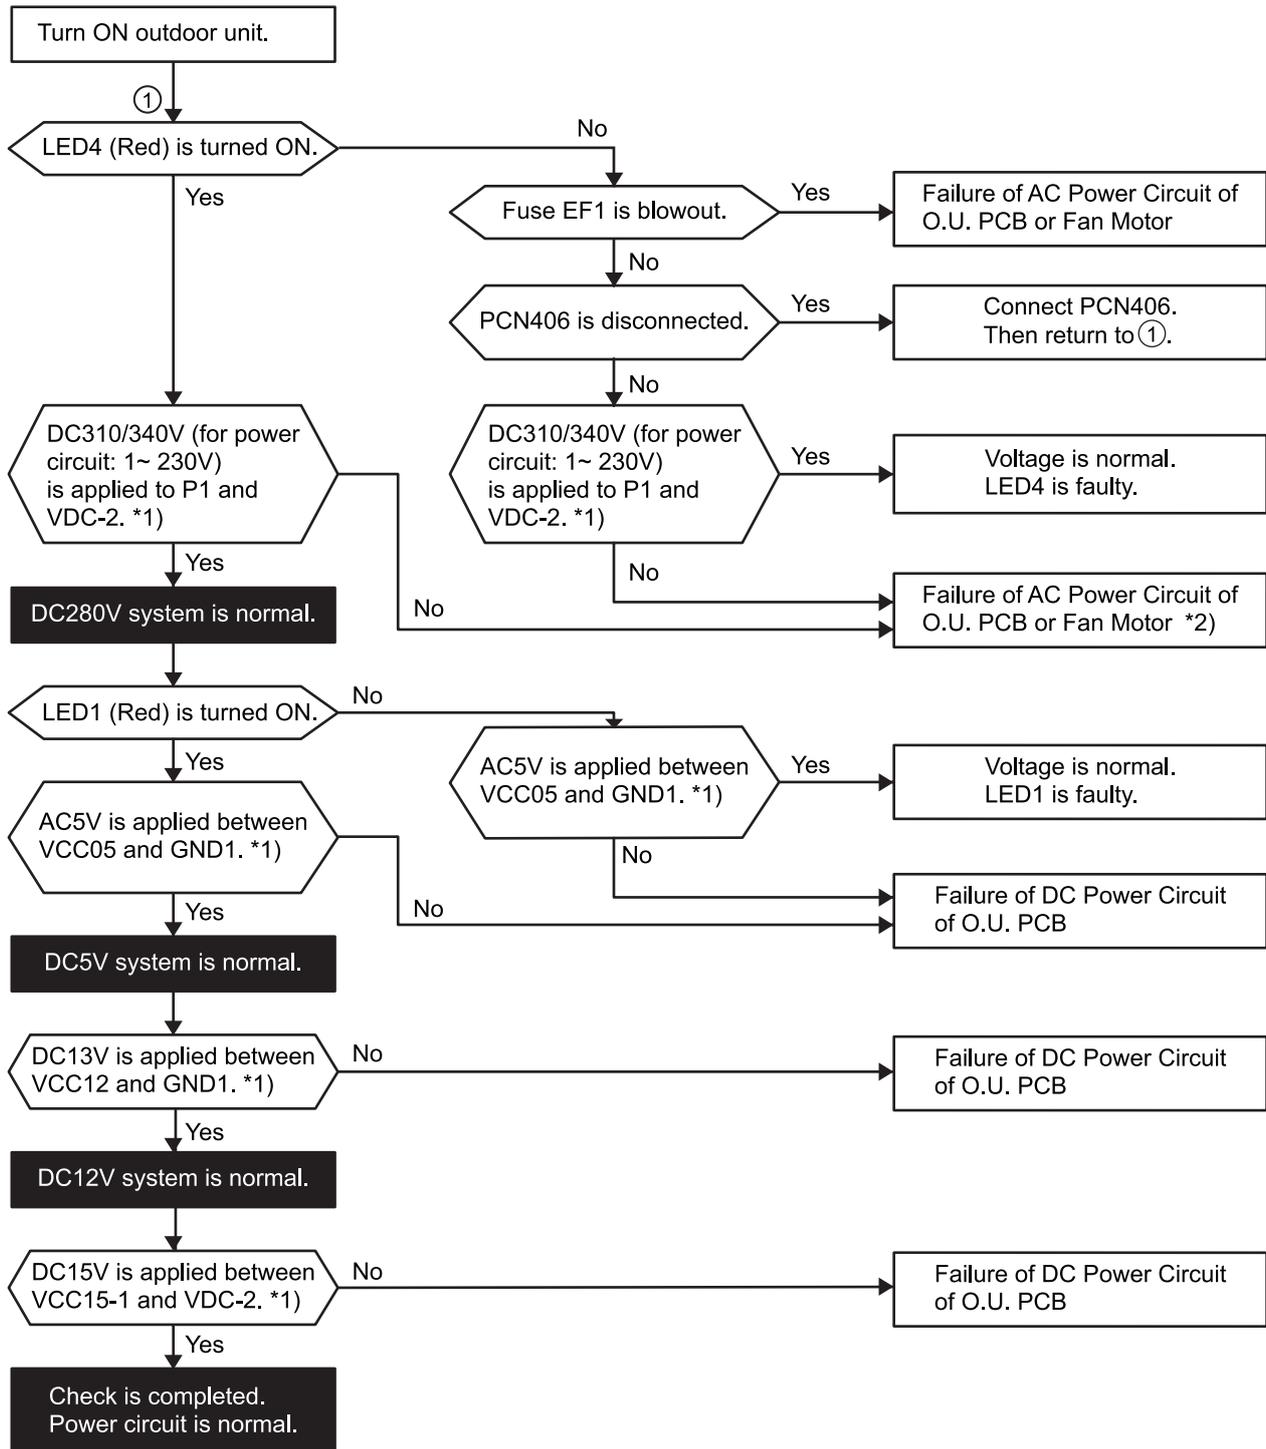

NOTE

*1) The following table shows the check points and the normal range of voltage in the case that the voltage on the RASC unit PCB is measured with a circuit tester. The setting of the circuit tester shall be set within the DC voltage measurement range when the following voltages are measured.


*2) If 230V / 400V is present in DIP-IPM terminals R-S / R-S-T, DIP-IPM may be faulty. Alarm 03 may be shown in this case.

Check Point		Normal Range (V)
(+) Side of Tester	(-) Side of Tester	
P1	VDC-2	Approx. 311VDC
VCC15-1		13.5VDC ~ 16.5VDC
VCC05	GND1	4.5VDC ~ 5.5VDC
VCC12		11.9VDC ~ 14.3VDC

⚠ CAUTION

- Do not apply the test lead to unspecified check points when measuring the voltage with a circuit tester. Otherwise, it may cause a failure of the RASC unit PCB and the circuit tester.
- When measuring the voltage with a circuit tester, the setting of the circuit tester shall be set within the DC voltage measurement range. If the setting is not correct, it may cause a failure of the RASC unit PCB and circuit tester

Position of the check points in the RASC Unit Printed Circuit Board (PCB1 ref PO101).

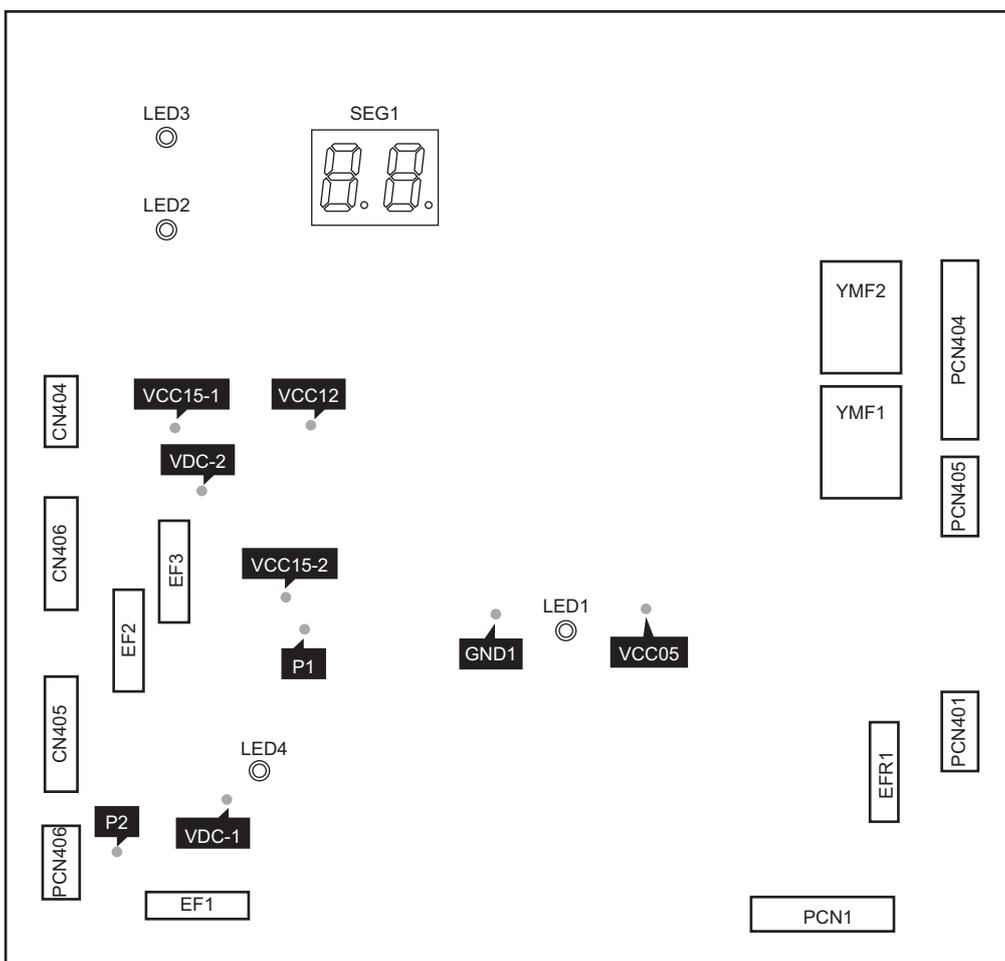

10.4.2 Checking procedure for the DIP-IPM inverter


◆ RASC-(4-6)HNPE

High voltage discharge work for replacing parts

⚠ CAUTION

Electrical hazard. Risk of electrical shock. Perform this high voltage discharge work to avoid an electric shock.

- 1 Turn OFF the main switches and wait for three minutes. Make sure that no high voltage exists. If LED201 is ON after start-up and LED201 is OFF after turning OFF power source, the voltage will decrease lower than DC50V.
- 2 Connect connecting wires to an electrical soldering iron
- 3 Connect the wires to terminals, P and N on DIP-IPM. (The discharge voltage can perform even when connecting the wires to terminals #1(P) and #3(N) of connector "PCN201") => Discharging is started, resulting in hot soldering iron. Pay attention not to short-circuit between terminal P(+) and N(-)
- 4 Wait for 2 or 3 minutes and measure the voltage once again. Check to ensure that no voltage is charged.

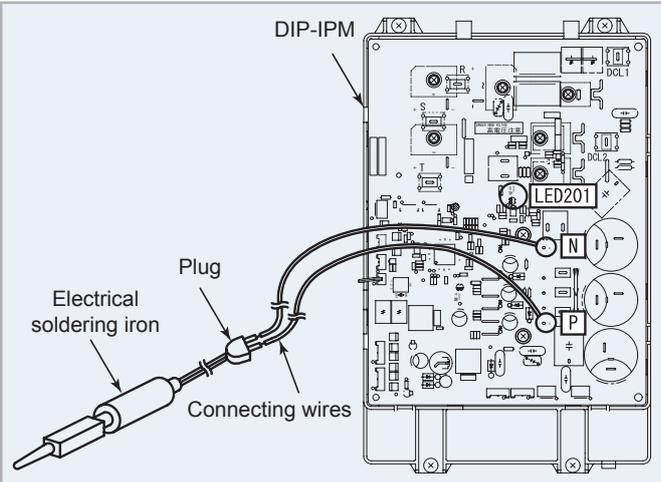

Inverter module checking procedure


Rectifier circuit of inverter PCB

Internal circuit of rectified part of DIP-IPM

Remove all the terminals of the inverter PCB before checking.

Non-faulty if [1] – [8] are checked and satisfied.


Measure with 1 kΩ range of a tester.

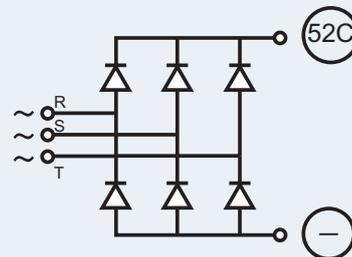


NOTE

DO NOT use a digital tester.

- 1 Touch [+] side of the tester to DIP-IPM 52C terminal, and [-] side to DIP-IPM R, S and T terminals to measure the resistance. Normal if all three terminals have 1 kΩ or greater.
- 2 Contrary to [1], touch [-] side of the tester to DIP-IPM 52C terminal, and [+] side to DIP-IPM R, S terminals to measure the resistance. Normal if all three terminals have 100 kΩ or greater.
- 3 Touch [-] side of the tester to [-] side of DIP-IPM DMI (soldered part), and [+] side of the tester to DIP-IPM R, S terminals to measure the resistance. Normal if all three terminals have 1 kΩ or greater
- 4 Contrary to [3], touch [+] side of the tester to [-] side of DIP-IPM DMI, and [-] side of the tester to DIP-IPM R, S terminals to measure the resistance. Normal if all three terminals have 100 kΩ or greater.

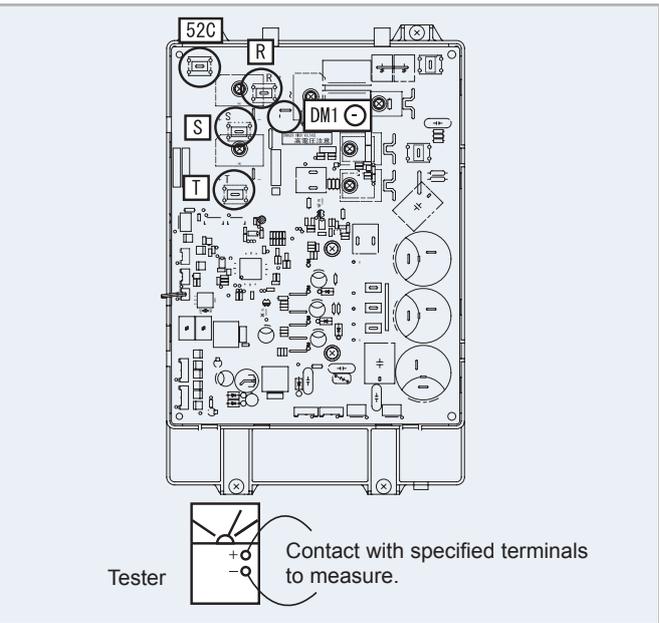


- 5 Touch [+] side of the tester to [P] of DIP-IPM (soldered part), and [-] side to DIP-IPM U, V, W terminals to measure the resistance. Normal if all three terminals have 1 kΩ or greater.
- 6 Contrary to [5], touch [-] side of the tester to [P] of DIP-IPM (soldered part), and [+] side to DIP-IPM U, V, W terminals to measure the resistance. Normal if all three terminals have 30 kΩ or greater. (Resistance gradually increases during measurement.)
- 7 Touch [-] side of the tester to [N] of ISPM (soldered part), and [+] side to ISPM U, V, W terminals to measure the resistance. Normal if all three terminals have 1 kΩ or greater.
- 8 Contrary to [7], touch [+] side of the tester to [N] of DIP-IPM (soldered part), and [-] side to DIP-IPM U, V, W terminals to measure the resistance. Normal if all three terminals have 30 kΩ or greater. (Resistance gradually increases during measurement.)

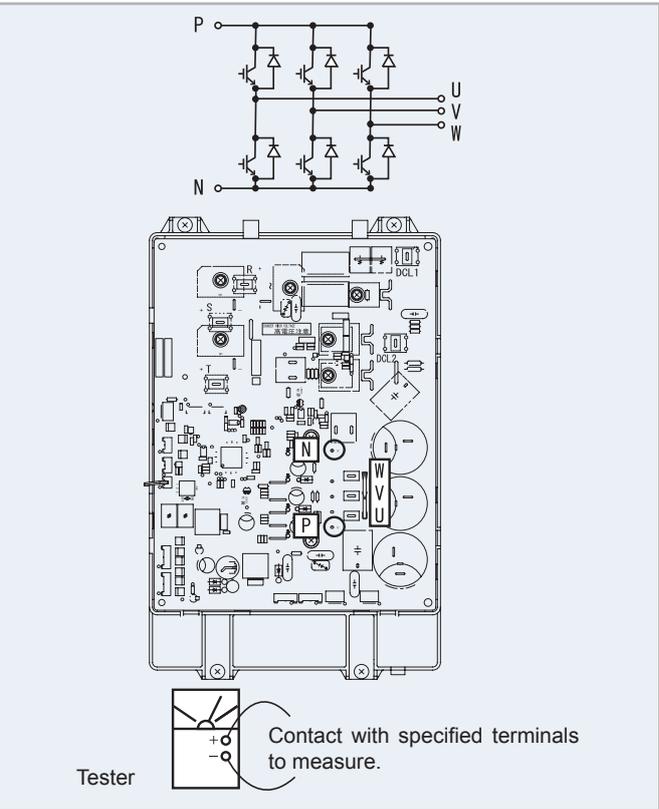

ACT circuit of inverter PCB


Internal circuit of ACT part of inverter module
 Non-faulty if [9] – [13] are checked and satisfied.
 (Measure with 1 kΩ range of a tester.)

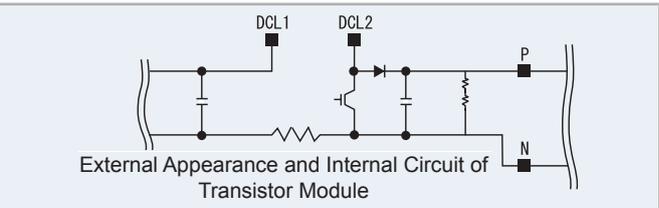

**NOTE**

DO NOT use a digital tester.

- 9 Check items [1] – [8].
- 10 Touch [+] side of the tester to DIP-IPM DCL2 terminal, and [-] side to [P] of ISPM/DIP-IPM (soldered part) to measure the resistance. Normal if all three terminals have 100 k Ω or greater
- 11 Contrary to [10], touch [-] side of the tester to DIP-IPM DCL2 terminal, and [+] side to [P] of DIP-IPM (soldered part) to measure the resistance. Normal if all three terminals have 1 k Ω or greater.
- 12 Touch [+] side of the tester to DIP-IPM DCL2 terminal, and [-] side to [N] of DIP-IPM (soldered part) to measure the resistance. Normal if all three terminals have 100 k Ω or greater.
- 13 Contrary to [12], touch [-] side of the tester to DIP-IPM DCL2 terminal, and [+] side to [N] of DIP-IPM (soldered part) to measure the resistance. Normal if all three terminals have 10 k Ω or greater. (Resistance gradually increases during measurement.)

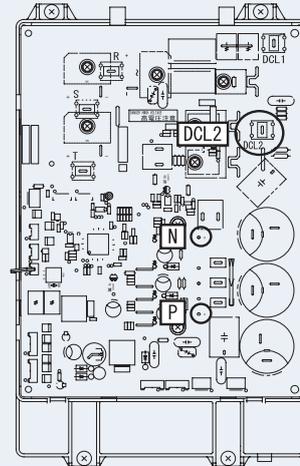

Tester
 Contact with specified terminals to measure.


Checking Method of Resistance for Inrush Current Prevention (Built-in Thermal Fuse)

(Measure the resistance under 1 k Ω range of a circuit tester.)

**NOTE**

DO NOT use a digital tester.

By placing the \oplus side of tester to the \oplus side of DM1 (soldering portion) on inverter PCB and the \ominus side of tester to DCL1 on inverter PCB, measure the resistance. If the resistance is around 500 Ω , it is normal. If the resistance is 0 Ω or infinity Ω , it is abnormal.

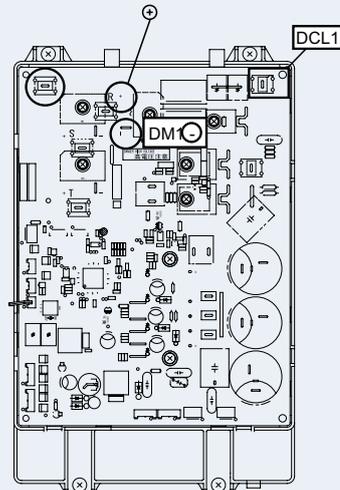

Tester
 Contact with specified terminals to measure.

Checking Method of Fuse for fan motor protection (EF1)

(Measure the resistance under 1 kΩ range of a circuit tester.)




NOTE

DO NOT use a digital tester.

By placing the ⊕ and ⊖ side of tester to EF1 on inverter PCB, measure the resistance.

If the resistance is 0Ω, it is normal.

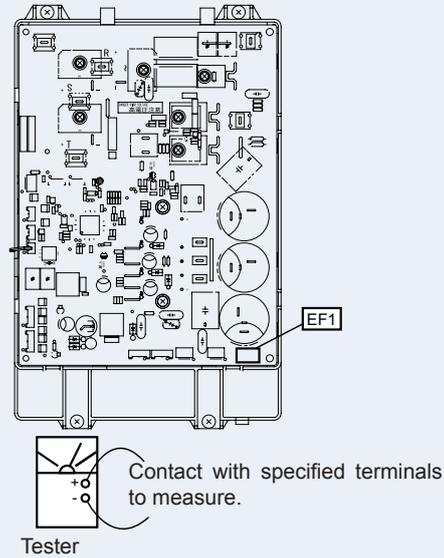

◆ RASC-(8/10)HNPE


High voltage discharge work for replacing parts



CAUTION

Electrical hazard. Risk of electrical shock. Perform this high voltage discharge work to avoid an electric shock.

- 1 Turn OFF the main switches and wait for three minutes. Check to ensure that no high voltage exists. If LED2 is ON after start-up and LED2 is OFF after turning OFF power source, the voltage will decrease lower than DC50V.
- 2 Connect connecting wires to an electrical solder bit.
- 3 Connect the wires to terminals, P and N on IPM. => Discharging is started, resulting in hot solder bit. Pay attention not to short-circuit between terminal P and N.
- 4 Wait for 2 or 3 minutes and measure the voltage once again. Check to ensure that no voltage is charged.

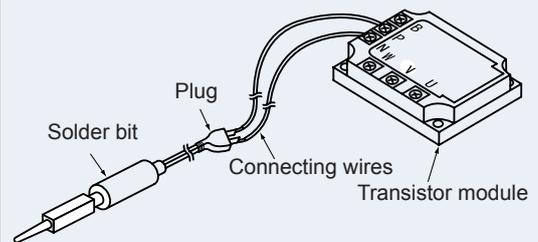

Transistor module checking procedure

<p>Outer Appearance and Internal Circuit of Transistor Module</p> <ol style="list-style-type: none"> 1. Drive circuit. 2. Overheating protection circuit. 3. Sensor. 	
---	--

Procedure:

Remove all the terminals of the transistor module before check. If items [1] – [4] are performed and the results are satisfactory, the transistor module is normal.

Measure it under 1kΩ range of a tester.




NOTE

DO NOT use a digital tester.

<p>1 By touching the + side of the tester to the P terminal of transistor module and the - side of tester to U, V and W of transistor module, measure the resistance. If all the resistances are from 1 to 5kΩ, it is normal.</p>	
<p>2 By touching the - side of the tester to the P terminal of transistor module and the + side of tester to U, V and W of transistor module, measure the resistance. If all the resistances are greater than 100kΩ, it is normal.</p>	
<p>3 By touching the - side of the tester to the N terminal of transistor module and the + side of tester to U, V and W of transistor module, measure the resistance. If all the resistances are from 1 to 5kΩ, it is normal.</p>	
<p>4 By touching the + side of the tester to the N terminal of transistor module and the - side of tester to U, V and W of transistor module, measure the resistance. If all the resistances are greater than 100kΩ, it is normal.</p>	

Diode module checking procedure

Outer appearance and internal circuit of diode module:

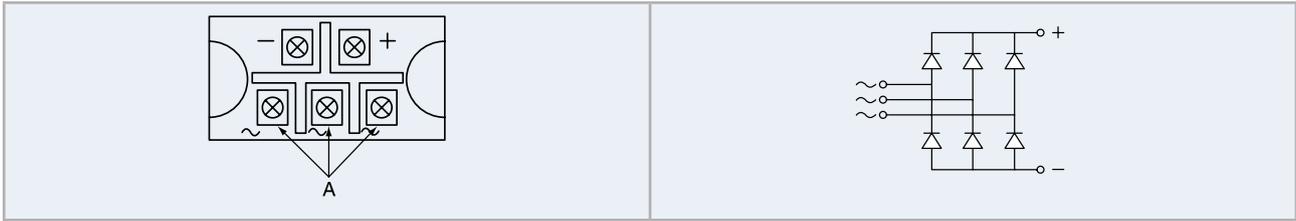

If items [1] – [4] are performed and the results are satisfactory, the diode module is normal.

Measure it under 1k Ω range of a tester.



NOTE

DO NOT use a digital tester.

<p>1 By touching the + side of the tester to the + terminal of diode module and the - side of tester to the ~ terminals (A) of the diode module, measure the resistance. If all the resistances are from 5 to 50kΩ, it is normal.</p>	
<p>2 By touching the - side of the tester to the + terminal of diode module and the + side of tester to the ~ terminals (A) of the diode module, measure the resistance. If all the resistances are greater than 500kΩ, it is normal.</p>	
<p>3 By touching the - side of the tester to the - terminal of diode module and the + side of tester to the ~ terminals (A) of the diode module, measure the resistance. If all the resistances are from 5 to 50kΩ, it is normal.</p>	
<p>4 By touching the + side of the tester to the - terminal of diode module and the - side of tester to the ~ terminals (A) of the diode module, measure the resistance. If all the resistances are greater than 500kΩ, it is normal.</p>	


10.4.3 Checking procedure for the capacitors CB1 & CB2



DANGER

- **Electrical hazard. Risk of serious injuries or death.**
- **Before installing the electrical wiring or before performing a periodical check, turn OFF the main switch of the unit. For safety reasons, be sure that the fan is stopped.**
- **Prevent from touching the capacitors' terminals. High voltage should be present before discharging them.**
- **Turn off the unit and wait for the LED 201 to be off before touching the components.**

If it's possible, check the capacitance of each capacitor : $4700\mu\text{F} \pm 20\%$ (between $3760\mu\text{F}$ to $5640\mu\text{F}$).

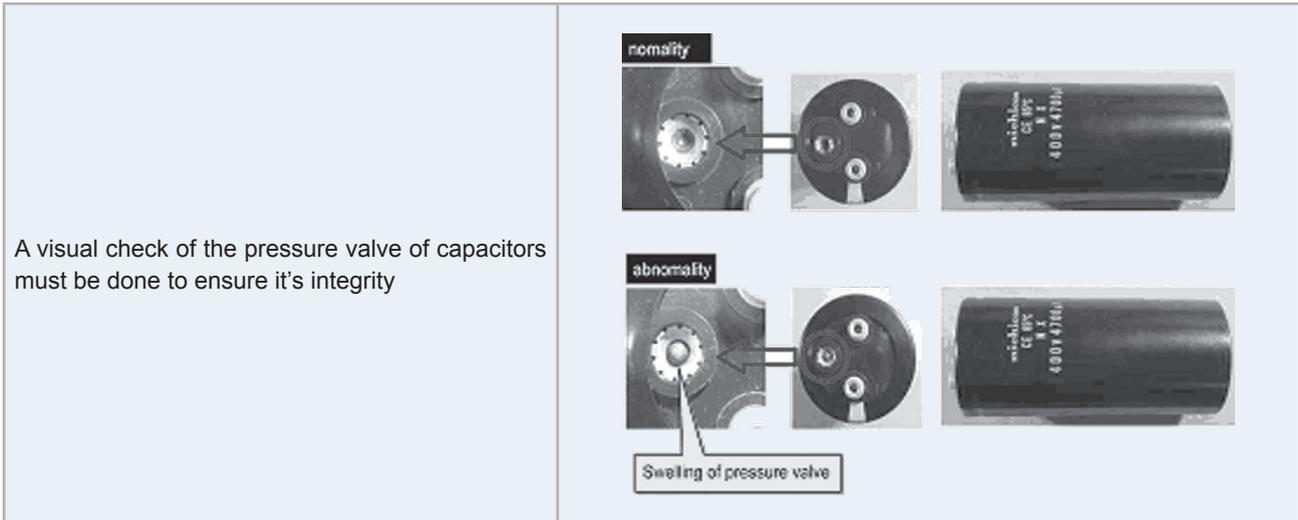

NOTE

It is not recommended to check tension.

$P_N = \text{Power source} \times \sqrt{2}$, $P_C = C_N$ is nearly equal to $P_N/2$.

R1 & R2:

- 1 If the value is different:
 - Capacitor could be damaged by overload.
 - 04 alarm could be displayed if low supply voltage (CN) for ISPM control part is present.
- 2 $R_1 = 9.5\Omega$ & $R_2 = 14.0\Omega$. If these values are different, the capacitors will be not properly charged.

Resistance between P1 & TB3 = $2k\Omega$ (white resistance in the ISPM).

In case that Mg. SW 52C (CMC1) is not ON, the compressor current will travel through these resistances, and they will be broken. Mg. SW 52C (CMC1) should be checked. Check the resistance between the primary and secondary terminal where the contact point is melted for Mg. SW 42C. If there is continuity, the contact is melted and 52C is broken (NG).

Reactor resistance can be measured between TB3 and RB = $0,2\Omega$. Checking this component is not necessary.



NOTE

- *Noise filter does not affect ISPM directly, so is not necessary to check it when ISPM fails.*
- *Both digital or analog testers are valid to check the values.*

10.4.4 Checking procedure for the DC fan motor

When ISPM/DIP-IPM is faulty and Alarm 03, 04 or 53 appears, the fan motor may also be damaged. To prevent ISPM/DIP-IPM damage which may result from operation combined with a faulty fan motor, check also if the fan motor is not damaged when ISPM/DIP-IPM is replaced.



CAUTION

- Turn OFF main power before start working.
- Working and checking with the power ON may disturb correct diagnosis and may result in failure.

Models with DC motor(s)	Number of motors
RASC-(4-10)HNPE	2 Pieces

Procedure in case of error diagnosis

- 1 Remove fan motor connectors for DC fan motor from the control PCB, ISPM or DIP-IPM and turn the fan motor shaft by hand.

Normal	Fan motor shaft turns smoothly
Normal	The fan motor shaft turns smoothly.
Faulty	No continuous rotary torque movement felt when turning the motor by hand. This occurs because the internal magnet of the fan motor breaks the movement when the internal electronic circuit of the fan motor has a short-circuit fault.

- 2 Measure the fan motor resistance:

Measurement procedure	
Remove the fan motor connector from the control PCB, ISPM or DIP-IPM.	
Connect the black test lead of the tester to the black wire pin of the fan motor connector.	
Connect the red test lead to the wire connector pin to be checked.	
Results	
Normal	Observed values will be close to the normal values in the table below.
Faulty	Observed values will be deviated from the normal values in the table below. (Generally, an open-circuit fault shows ∞ , and a short-circuit fault shows several Ω - $k\Omega$). Internal electronic circuit fault of the fan motor including short-circuit and breakage can be checked.

Model	Motor model	Wire color for checking (Normal value)	
		Red-black	Blue-black
RASC-(4-6)HNPE (both)	SIC-61FW-D858	1M Ω or greater	1M Ω or greater
RASC-(8/10)HNPE (both)	SIC-81FW-8183	1M Ω or greater	1M Ω or greater



NOTE

Values are shown for referential purpose. While actual values may vary depending on the type of the tester, any tester can be used to determine any short-circuit or breakage based on ∞ or several Ω or 0 Ω or ∞ .

10.4.5 Checking procedure for the electronic expansion valve for indoor and RASC units

	Indoor unit electronic expansion valve	RASC unit electronic expansion valve
Locked with fully closed	Check the liquid pipe temperature during the heating process. It is abnormal if the temperature does not increase.	It is abnormal if the liquid pipe pressure does not increase during the pump down process.
Locked with slightly open	It is abnormal under the following condition: The temperature of the freeze protection thermistor becomes lower than the suction air temperature when the unit which is under check stops and the other units are under the pump down process.	It is abnormal if the liquid pipe pressure does not increase and the outlet temperature of the expansion valve decreases after the pump down process starts.
Locked with fully open	<p>Electronic expansion valve</p> <p>Freeze protection thermistor</p>	It is abnormal under the following conditions: after the heating process for more than 30 minutes, the discharge gas temperature of the compressor is not 10°C higher than the condensing temperature and there is no other faults, such as an excessive charge of refrigerant and others.


10.4.6 Checking procedure for other parts

Resistance (Ω)

Part name	Model code	Resistance (Ω)	Unit models
Solenoid Valve Coil	SR10D	1250 (at 20°C)	RASC-(4-10)HNPE
Reversing Valve Coil (4-way solenoid valve)	VHV-01AP552B1	1473 (at 20°C)	RASC-(4-10)HNPE
Compressor	E402HHD-36D2	1.839 (at 75 °C)	RASC-(4-6)HNPE
Compressor	DA50PHD-D1SE2	0.396 (at 75 °C)	RASC-8HNPE
Compressor	DA65PHD-D1SE2	0.320 (at 75 °C)	RASC-10HNPE
Magnetic contactor	FC-0/SP	1150 (at 20°C)	RASC-(4-10)HNPE

◆ **Checking procedure for the reversing valve**

Troubleshooting

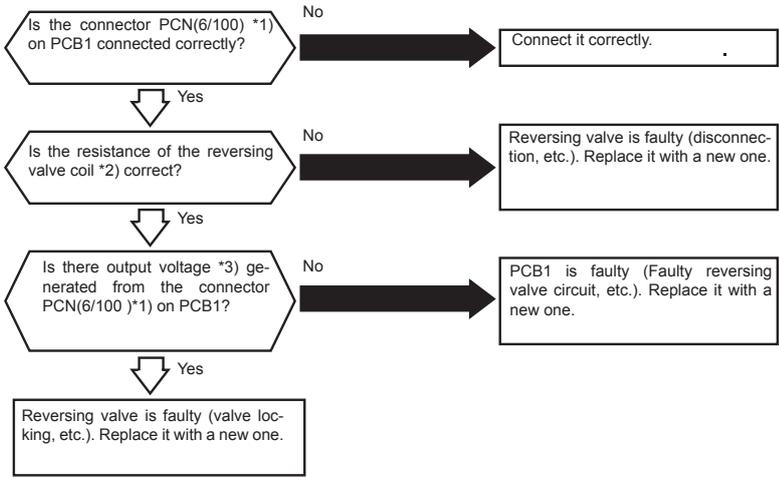

i NOTE

*1) PCB1 connector PCN100, pin 1 - 3
 *2) See in the table "Resistance (Ω)"
 *3) See in the table "Output voltage" according to coil type operation mode.


Output voltage


	Reversing valve ON	Reversing valve OFF	i NOTE The values may differ depending on testers. Appropriate output voltage is 70~339VDC
Test lead (+side)	pin 1	pin 3	
Test lead (-side)	pin 3	pin 1	
Range of voltage	325 VDC	163 VDC	

Actions of 4-way solenoid valve

Monostable solenoid operation type


Operation Mode: Heating Reversing Valve Coil: ON	Operation Mode: Cooling Reversing Valve Coil: OFF
<p>Electric Current Applied</p> <p>Current is applied to the reversing valve coil and so attraction is generated. The plunger position is kept by the electromagnetic force.</p>	<p>No Electric Current Applied</p> <p>No current is applied to the reversing valve coil and so no attraction is generated. The plunger position is kept by spring force.</p>

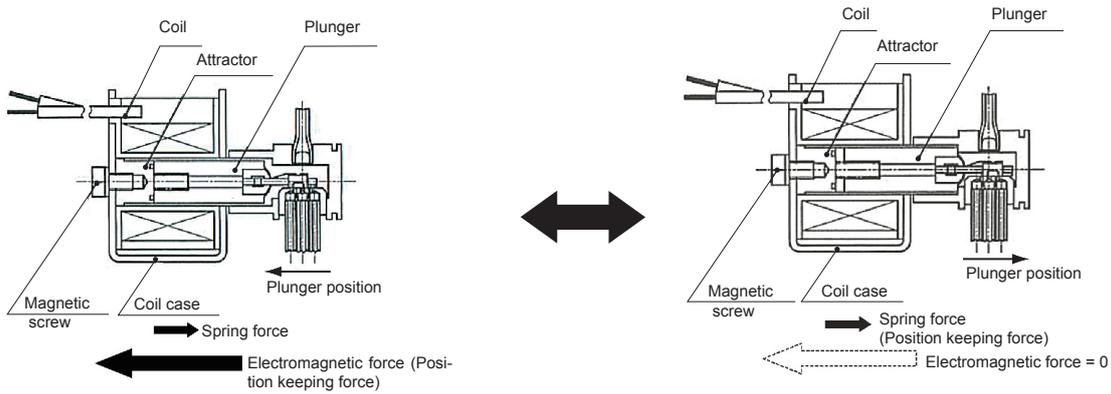


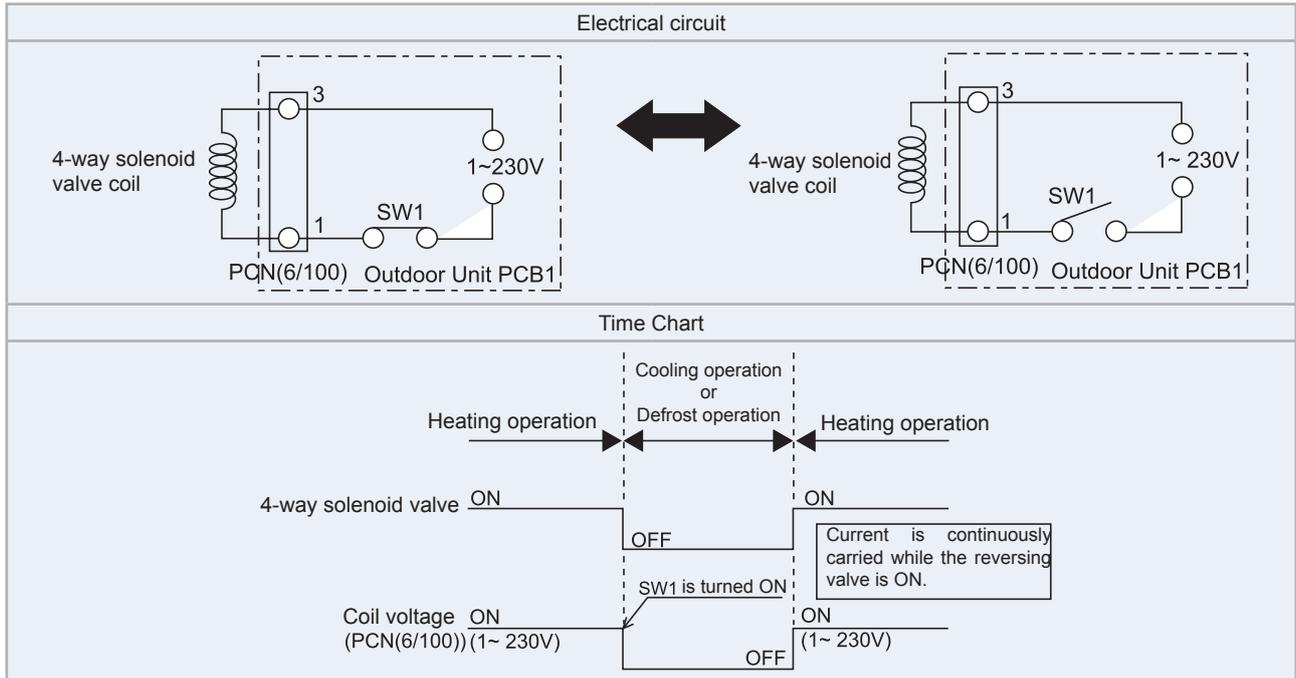

Bistable solenoid operation type (pulse-activated)

Operation Mode: Cooling → Heating Reversing Valve: OFF → ON	Operation Mode: Cooling → Heating Reversing Valve: OFF → ON
When current is applied to the reversing valve coil, an electromagnetic force headed in the same direction as the magnetic force is generated, and the valve is turned ON by their attraction. After the valve is turned ON, the plunger position is kept by magnetic force with no current applied.	When current is applied to the reversing valve coil, an electromagnetic force headed in the direction opposite to the magnetic force is generated, and the valve is turned OFF by their separation force. After the valve is turned OFF, the plunger position is kept by spring force.

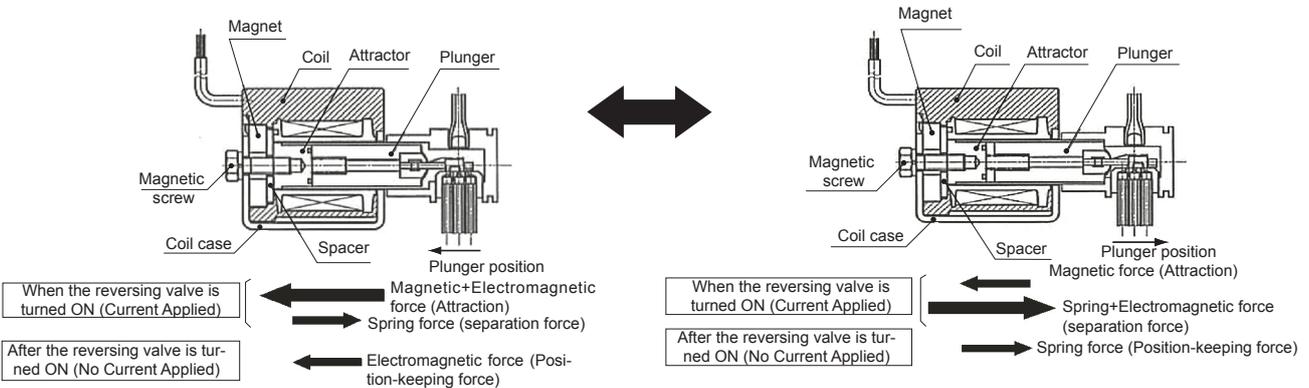

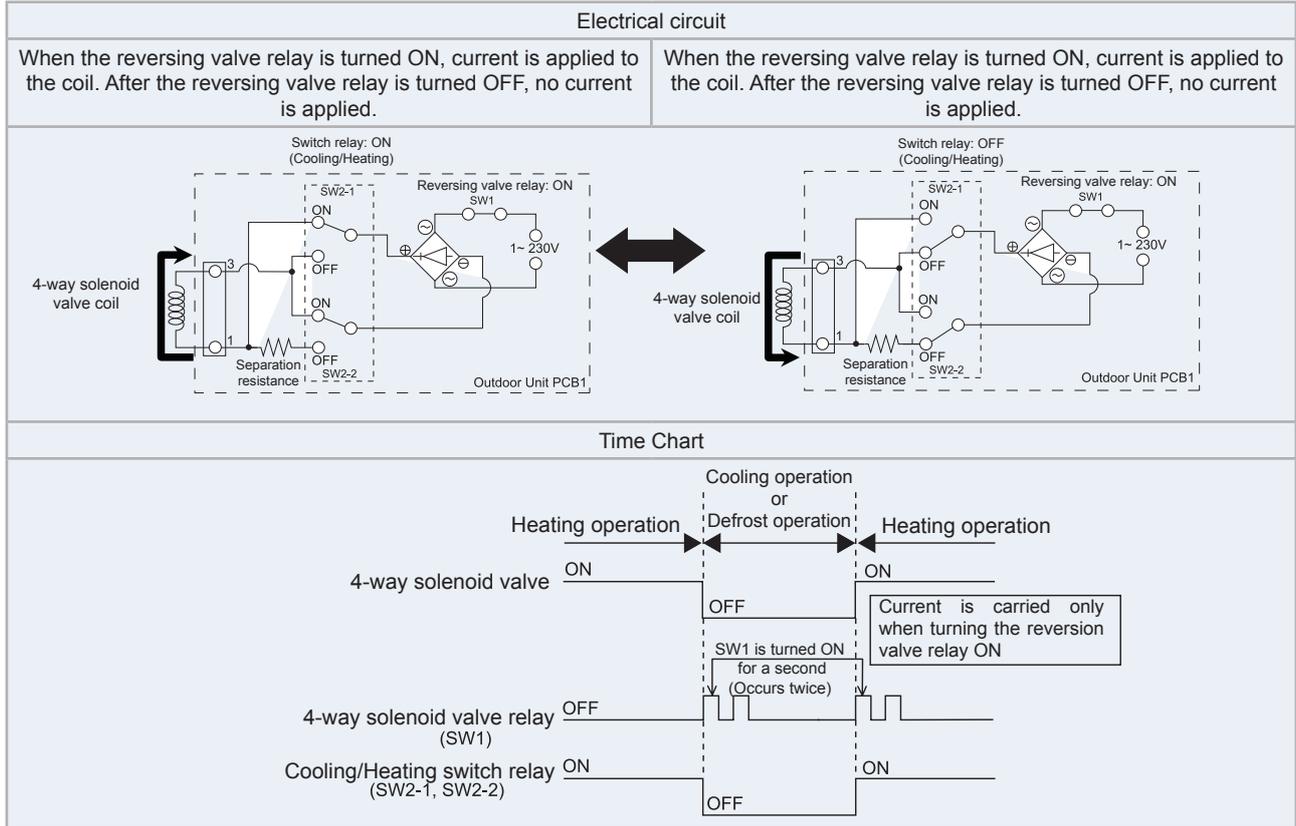

◆ Checking procedure for the compressor
CHECK LIST ON COMPRESSOR

Client:		Model:	Date:	
Serie number:		Production date:	Checker:	
No.	Check item	Check method	Result	Remarks
1	Is THM9 correctly connected? THM9: Discharge Gas Thermistor	1. Is wire of thermistor correctly connected by viewing? 2. Check to ensure the 7-segment indication of Td when comp. is operating. Td: Temperature of THM9		
2	Is thermistor THM9 disconnected?	1. Check to ensure that thermistor on the top of comp. is correctly mounted by viewing? 2. Check to ensure that actually measured temperature is the same as the indication during check mode.		
3	Is current sensor faulty?	1. Check to ensure that indication A1 and A2 are 0 during compressor stopping. 2. Check to ensure that indication A1 and A2 are not 0 during compressor running.		
4	Is current sensing part on PCB2 faulty?			
5	Is the direction of current sensor (CTU, CTV) reverse?	Check the direction => by viewing.		
6	Are power source wires, U and V inserted correctly into current sensor?	Check to ensure that wires are correctly inserted		
7	Is expansion valve (MV1) correctly connected?	Check to ensure that MV1 to CN5A is correctly connected		
8	Is expansion valve coil (MV1) correctly connected?	Check to ensure that each coil is correctly mounted on the valve.		
9	Are the refrigeration cycle and electrical wiring system incorrectly connected?	Check to ensure that refrigerant is flowing into indoor units by operating one refrigerating cycle only from the RASC unit.		
10	Is opening of expansion valve completely closed (locked)?	Check the following by the check mode of RASC units. 1. Liquid pipe temperature (TL) < Air Intake temperature (Ti) during cooling operation 2. Liquid pipe temperature (TL) > Air Intake temperature (Ti) during heating operation		
11	Is opening of expansion valve fully opened (locked)?	Check to ensure that liquid pipe temperature is lower than air intake temperature of stopping indoor unit when other indoor units are operating under cooling operation.		
12	Are the contacts for comp. magnetic switch CMC1 faulty?	Check the surface of each contact (L1, L2 and L3) by viewing.		
13	Is there any voltage abnormality among L1-L2, L2-L3 and L3-L1?	Check to ensure that voltage imbalance is smaller than 3%. Please note that power source voltage must be within 380V+10%.		
14	Is the comp. oil acidified during compressor motor burning?	Check to ensure that the oil color is not black.		

Additional Information for “CHECK LIST ON COMPRESSOR”

Check item	Additional information (mechanism of the compressor failure)
1 & 2	The liquid refrigerant return volume to the compressor is controlled by the discharge gas temperature Td when compressor is operating. If Td thermistor is disconnected, the liquid refrigerant return volume will become small by detecting the temperature even if the actual discharge gas temperature is high. Therefore, this abnormal overheating by detecting the temperature operation will result in insulation failure of the motor winding.
3 & 4	Overcurrent control (operating frequency control) is performed by detecting current by the PCB2. In this case, winding insulation failure will occur, since control is not available in spite of actually high current.
5 & 6	The current sensor checks phase and adjusts output electrical wave in addition to the above mentioned items. If fault occurs, the output electrical wave becomes unstable giving stress to the motor winding, resulting in winding insulation failure.
7 & 8	During a cooling operation, SH is controlled by MV of each indoor units. During a heating operation, Td is controlled by MV1. If expansion valves are incorrectly connected, correct control is not available, resulting in compressor seizure depending on liquid refrigerant returning conditions or motor winding insulation failure depending on overheating conditions.
9	If the refrigeration cycle and electrical system are incorrectly connected, abnormally low suction pressure operation is maintained or abnormally high discharge pressure operation is maintained, resulting in giving stress to the compressor, since their correct control is not available.
10	ditto
11	The compressor may be locked due to the liquid return operation during the cooling operation.
12	In the case that the contacting resistance becomes big, voltage imbalance among each phase will cause abnormal overcurrent.
13	In this case, overcurrent will occur, efficiency will decrease or the motor winding will be excessively heated.
14	In the case, it will result in motor burning or compressor seizure.

Hitachi Air Conditioning Products Europe, S.A.U.
Ronda Shimizu, 1 - Políg. Ind. Can Torrella
08233 Vacarisses (Barcelona) Spain



Hitachi certifies that our products have met EU consumer safety, health and environmental requirements.



Hitachi Air Conditioning Products Europe, S.A.U. is certified with:
ISO 9001 of AENOR, Spain for its Quality Management accordance with the standard
ISO 14001 of AENOR Spain for its Environmental Management systems accordance with the standard.



Hitachi air conditioning products are manufactured according to:
ISO 9001 of JQA, Japan for its Quality Management accordance with the standard
ISO 14001 of JACO, Japan for its Environmental Management accordance with the standard.



HITACHI participates in the Eurovent Certification Programme; the certified data of certified models are listed in the Eurovent Certification Online Directory (www.eurovent-certification.com).