
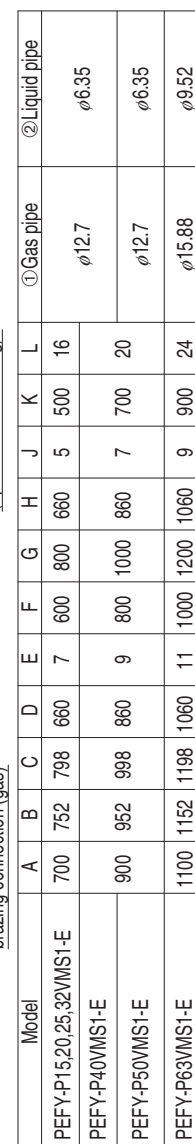


R410A Data G8

Drw. : IU-KB94-G728
Unit : mm

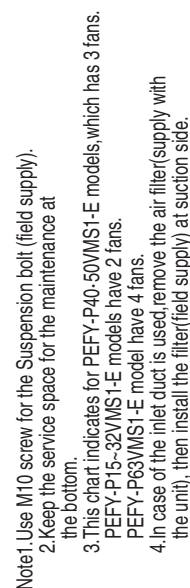


2. EXTERNAL DIMENSIONS

R410A Data G8

PEFY

PEFY-P40,50,63,71,80,100,125,140VMH-E

Drw. : IU-W27-5924
Unit : mm

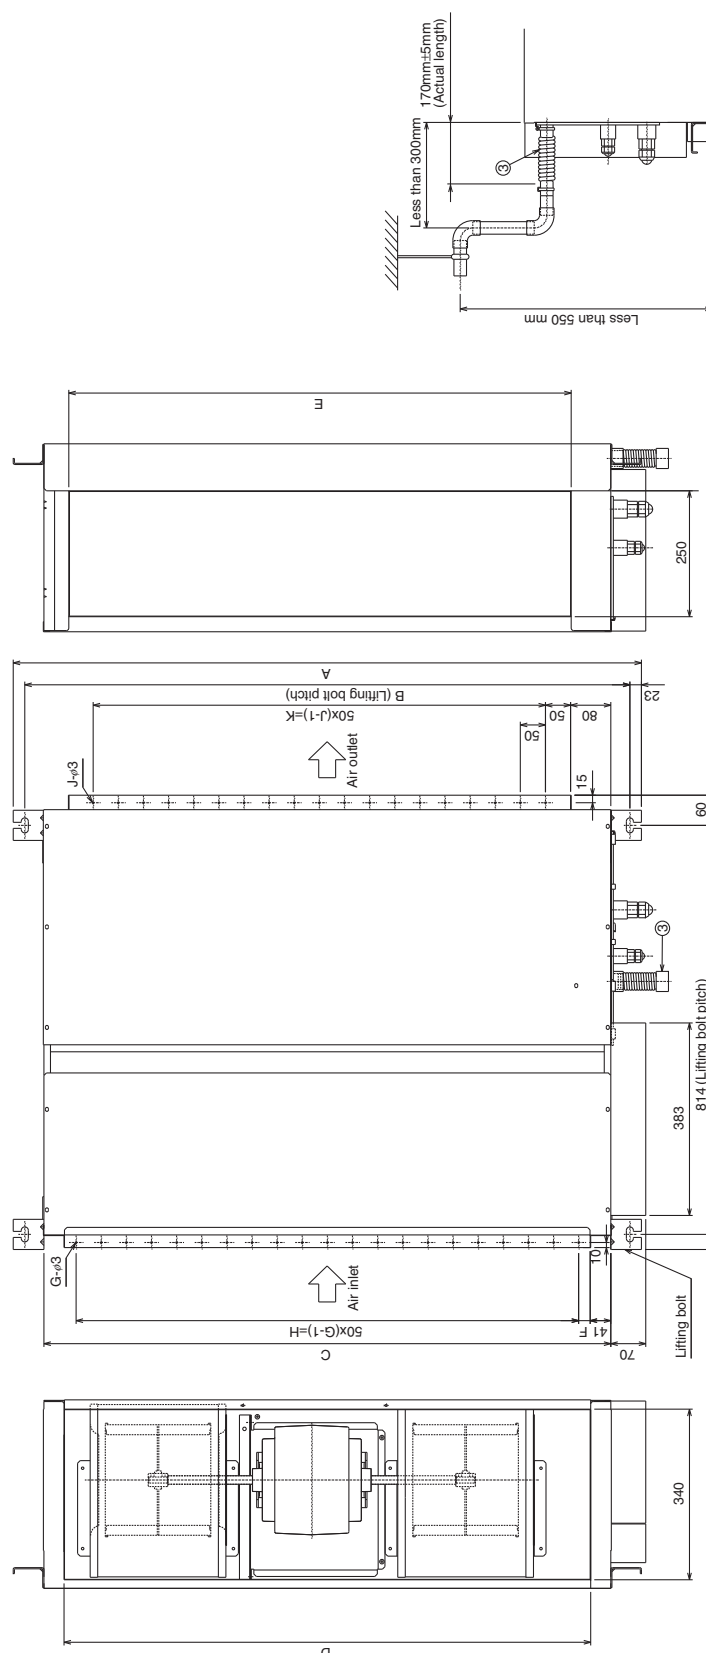


When installing the drain water lifting-up mech(option).

Model	A	B	C	D	E	F	G	H	I	J	K	L	M	N
240V-MHE	800	754	680	600	550	50	11	500	10	450	780	$\pi 12.7$	$\pi 12.7$	$\pi 6.35$
250V-MHE	800	754	680	600	550	50	11	500	10	450	780	$\pi 12.7$	$\pi 12.7$	$\pi 6.35$
263V-MHE	800	754	680	600	550	50	11	500	10	450	780	$\pi 15.88$	$\pi 15.88$	$\pi 9.52$
271-80V-MHE	1050	1004	930	850	800	25	21	1000	15	700	1030	$\pi 15.88$	$\pi 15.88$	$\pi 9.52$
271-80V-MHE	1050	1004	930	850	800	25	21	1000	15	700	1030	$\pi 15.88$	$\pi 15.88$	$\pi 9.52$

Note : 1. Use M10 screw for the lifting bolt (field supply).
2. Keep the service space for the maintenance from the bottom when the heat exchanger is cleaned.
3. This chart indicates for PEFY-P100, 125, 140/WHE-e models, which have 2 fans.
PEFY-P450/50, 637/180 models have 1 fan.
4. Make sure to install the air filter(field supply) on the air intake side.
In case of field supplied air filter is used, attach it where the filter service is easily done.

① Refrigerant piping flare connection (gas M copper tube)
② Refrigerant piping flare connection (liquid N copper tube)
③ Drain hose I.D. 32(1-1/4") <flexible joint 200mm> (accessory) ...

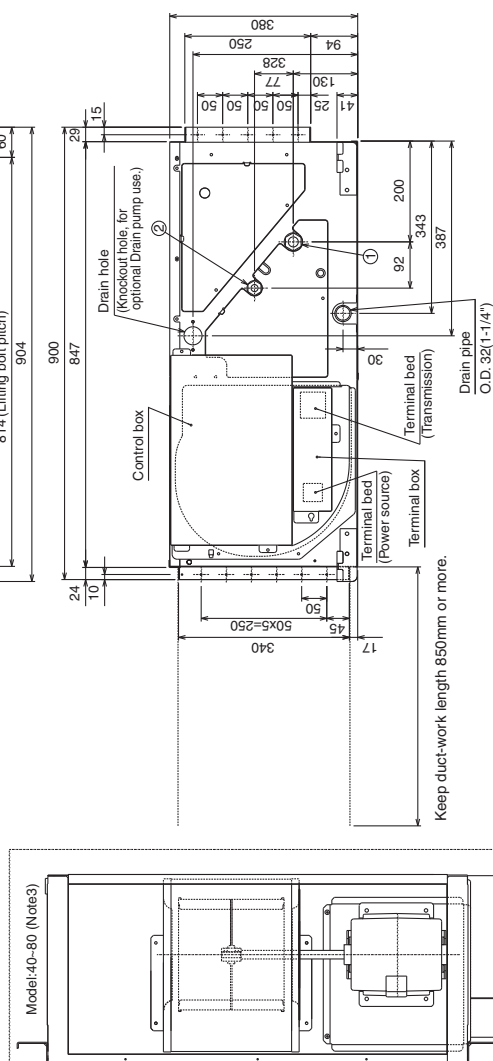

Drw. : IU-W27-5925

Unit : mm

Note : 1. Use M10 screw for the lifting bolt (field supply).



2. Keep the service space for the maintenance from the bottom when the heat exchanger is cleaned.
3. Make sure to install the air filter (field supply) on the air intake side. In case field supplied air filter is used, attach it where the filter service is easily done.

Model	A	B
P200VMI-E	ø19.05	ø9.52
P250VMI-E	ø22.2	ø9.52

① Refrigerant piping brazing connection
(gas A copper tube)

② Refrigerant piping brazing connection
(liquid B copper tube)

③ Drain hose I.D. 32 (1-1/4")
<flexible joint 200mm>(accessory)

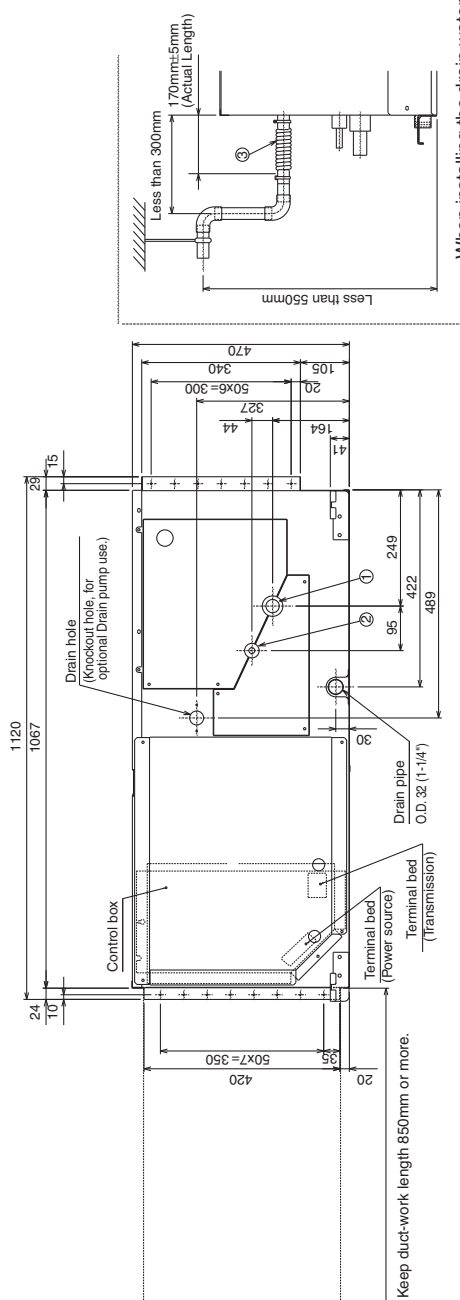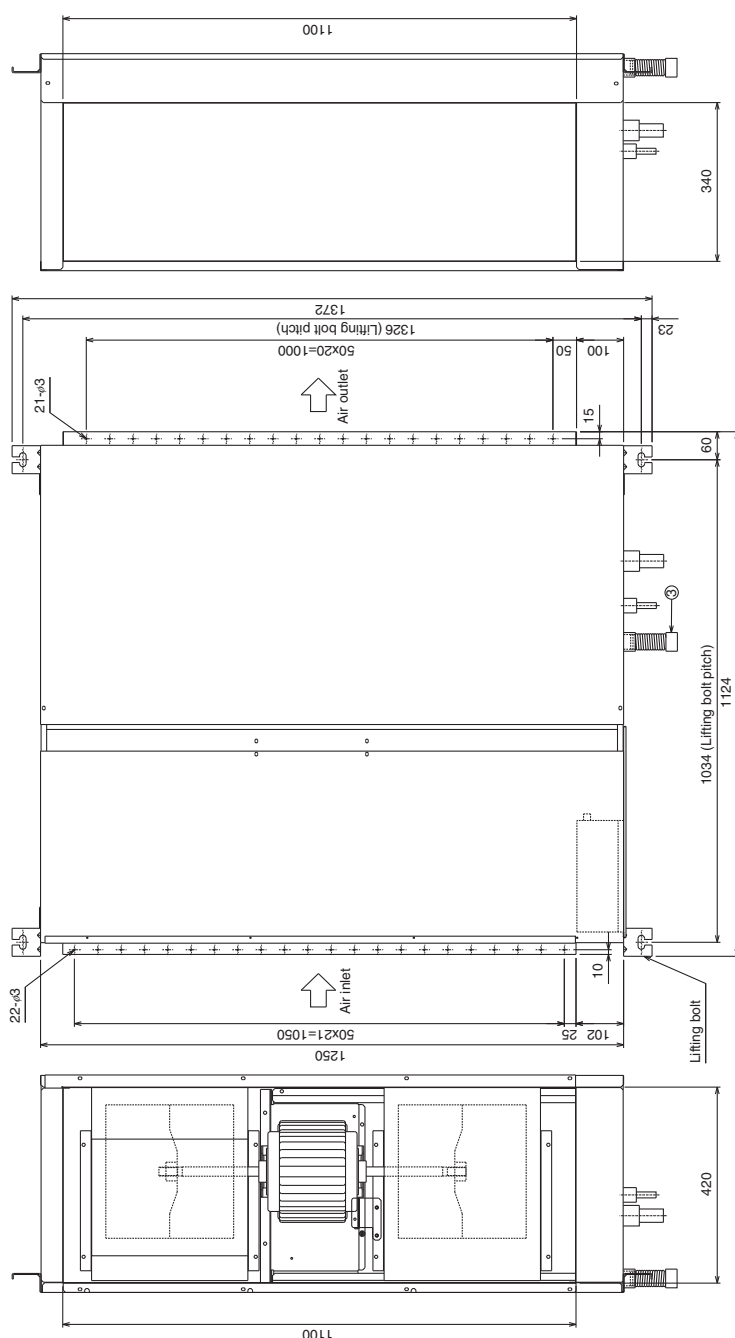

When installing the drain water lifting-up mech(option).