


2. EXTERNAL DIMENSIONS

PURY-RP200, 250, 300YJM-B-(BS)

Unit : mm

- <Accessories>
 ● Connecting pipe <Low pressure> • Pipe (ID ϕ 25.4 × ID ϕ 28.58) 1 pc.

Note 1. Please refer to the next page for information regarding necessary spacing around the unit and foundation work.
 2. The detachable leg can be removed at site.
 3. At brazing of pipes, wrap the refrigerant service valve with wet cloth and keep the temperature of refrigerant service valve under 120°C.

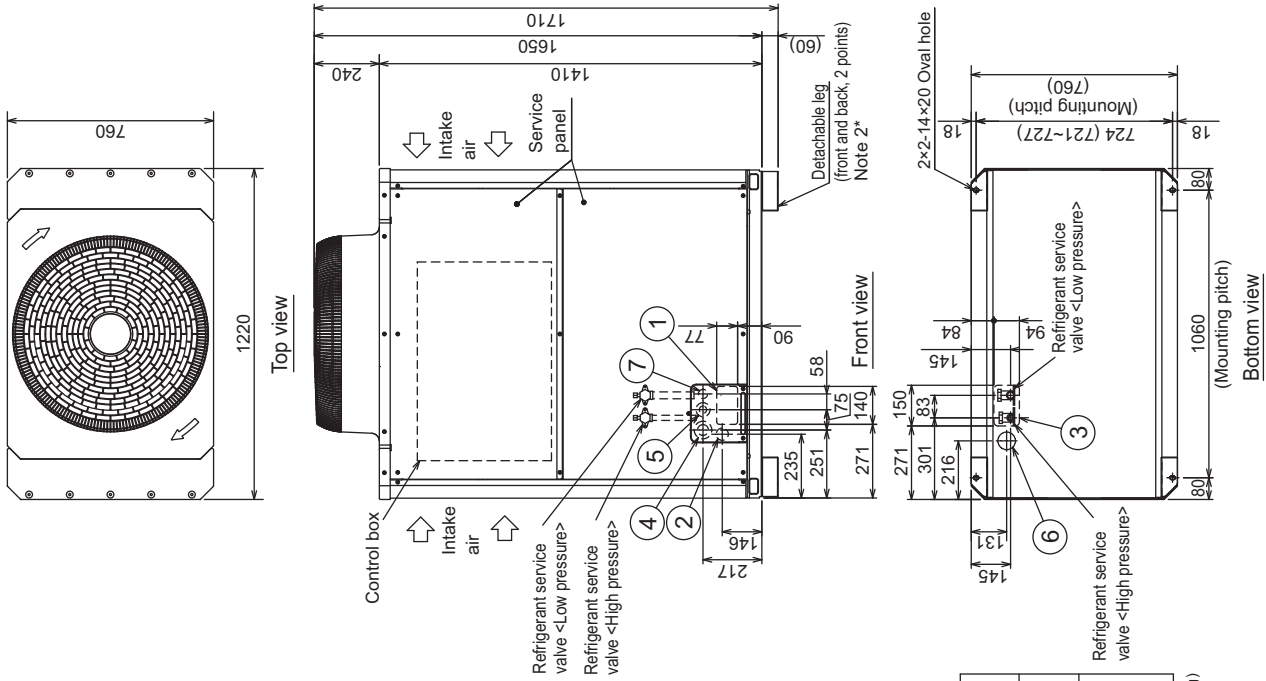

NO.	Usage	Specifications
①	Front through hole	140×77 Knockout hole
②	For pipes	Front through hole (Uses when twinning kit (optional parts) is mounted.) ø45 Knockout hole
③		Bottom through hole
④	For wires	150×94 Knockout hole
⑤		Front through hole ø65 or ø40 Knockout hole
⑥		Front through hole ø52 or ø27 Knockout hole
⑦	For transmission cables	ø65 Knockout hole ø34 Knockout hole

Model	Position dimensions for the refrigerant service valve *1		Connection specifications for the refrigerant service valve *1	
	High pressure A	Low pressure B	High pressure	Low pressure
PURY-RP200YJM-B-(BS)	261	263	ø19.05 Brazed	ø28.58 Brazed
PURY-RP250YJM-B-(BS)				
PURY-RP300YJM-B-(BS)				

*1. Connect by using the connecting pipes (for bottom piping and front piping) that are supplied.