

Technical Bulletin

Number	P018
Subject	Panasonic – Wiring option for FZ systems
Date	12 June 2019

Interconnecting wiring & Power for CS-FZ**-UKE Indoors with CU-FZ**UKE
Outdoors

Official wiring as per installation manual is mains power to Indoor Unit with
interconnecting to Outdoor Unit


There is an option for mains power to Outdoor Unit with interconnecting to
Indoor Unit

Interconnecting Cable:

In all cases, use a 4 core interconnecting cable for Live, Neutral, Earth and
Comms

Option One - Mains Power to Indoor Unit

- Power supply to L1, N and E
- Interconnecting between S1, 2 and 3 to Outdoor Unit

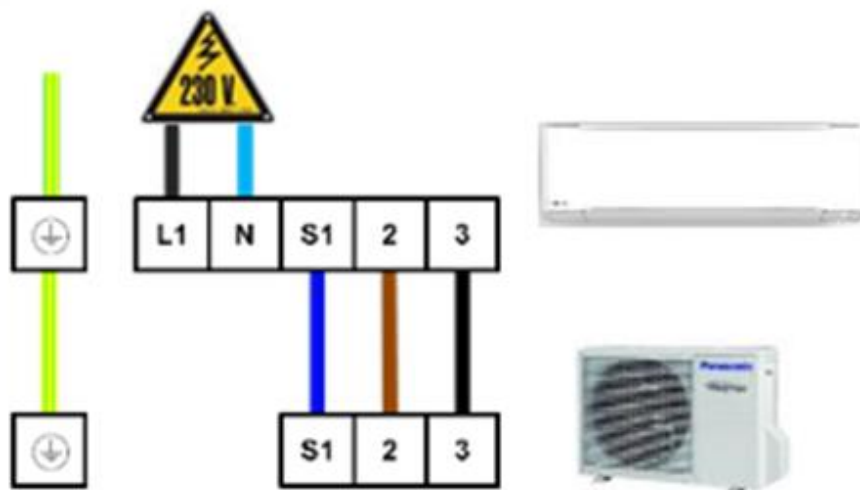

Option Two - Mains Power to Outdoor Unit

- Power supply to 1, 2 and E
- Interconnecting as follows
 - 1 on Condenser terminal to L1 on Indoor terminal block
 - 2 on Condenser terminal to 2 on Indoor terminal block
 - 3 on Condenser terminal to 3 on Indoor terminal block
 - N and S1 (or 1) on Indoor terminal block not used in this installation example

